



INOGENI SH2-REM Remote Controller for SHARE 2 Capture Device User Manual

[Home](#) » [INOGENI](#) » INOGENI SH2-REM Remote Controller for SHARE 2 Capture Device User Manual 

Contents

- [1 INOGENI SH2-REM Remote Controller for SHARE 2 Capture Device](#)
- [2 Connectivity](#)
- [3 Technical support](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

INOGENI

INOGENI SH2-REM Remote Controller for SHARE 2 Capture Device



How does it work?

The INOGENI REMOTE is a device that can control the mixing function of SHARE2/SHARE2U and the switching function of CAM devices. You just need to apply the correct wiring between the REMOTE and the INOGENI device. You will then be able to communicate with the device using the push buttons at the top of the device.

Connectivity

For SHARE2 – Use a simple RJ45 cable




Do not plug the cable to the LAN connection of the SHARE2. Plug it to the RS232 port.

For SHARE2U and CAM series – You need to wire up an RJ45 cable to a terminal block plug.




Do not plug an RJ45 cable between the INOGENI device and the REMOTE.

INOGENI device side

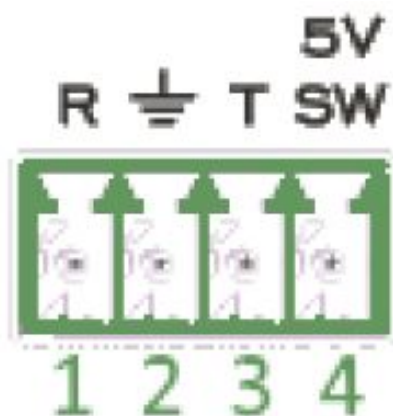

Pin 1: Receive
Pin 2: GND
Pin 3: Transmit
Pin 4: 5V supply

REMOTE side

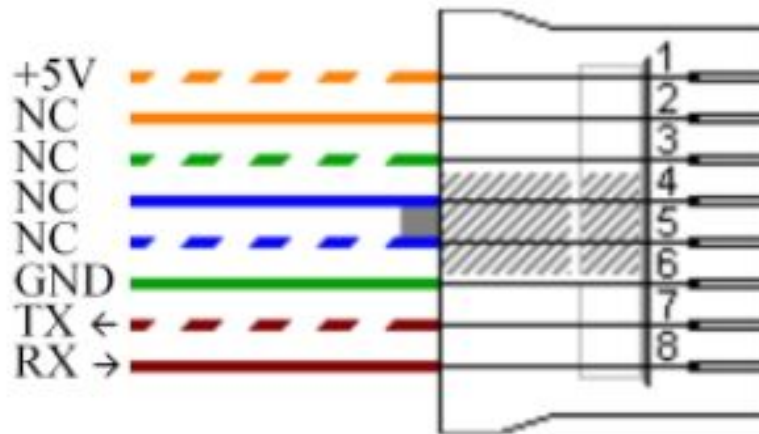

Regarding +5V supply for REMOTE:



Under SHARE2/SHARE2U and CAM100/300, make sure to put switch number 6 to the ON position.


Technical support

If you need any support on how to operate this device, contact us at support@inogeni.com for further assistance.

Contact us

Come visit us if you have special needs or requirements. We are your specialists for custom USB 3.0, HDMI, and SDI professional products tailored to your needs. INOGENI, Inc. 979 Ave de Bourgogne Suite 530 Québec G1W 2L4 (QC) Canada © Copyright 2018. INOGENI, Inc. All rights reserved.

Documents / Resources

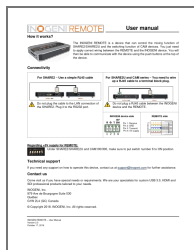

[INOGENI SH2-REM Remote Controller for SHARE 2 Capture Device](#) [pdf] User Manual
SH2-REM Remote Controller for SHARE 2 Capture Device, SH2-REM, Remote Controller for S
HARE 2 Capture Device