



# Inovonics EN4204R 32 Zone Multi Condition Receiver with Relays Instruction Manual

[Home](#) » [Inovonics](#) » Inovonics EN4204R 32 Zone Multi Condition Receiver with Relays Instruction Manual 

## Contents

- [1 Inovonics EN4204R 32 Zone Multi Condition Receiver with Relays](#)
- [2 Product Usage Instructions](#)
- [3 Overview](#)
- [4 Installation and Startup](#)
- [5 Point Setup and Registration](#)
- [6 4 32 Zone Multi-Condition Receiver with Relay Outputs Operation and Point Setup Screens](#)
- [7 Change Password](#)
- [8 Troubleshooting](#)
- [9 Specifications](#)
- [10 Television and Radio Interference](#)
- [11 FCC Part 15 and Innovation, Science and Economic Development Canada \(ISED\) Compliance](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)



**Inovonics EN4204R 32 Zone Multi Condition Receiver with Relays**



### Specifications:

- Model: EN4232MR
- Zones: 32
- Outputs: 11
- Transmitters Supported: Up to 32
- Relays: Form C relays
- Back Tamper: Yes

### Product Usage Instructions

#### Installing an Inovonics Security System

An EchoStream survey kit must be used to establish a UL system. The EchoStream survey kit measures the signal strength of high-power repeater and sensor messages to help optimize your EchoStream system.

#### RF Signal Propagation

At least one relay must be used for faults to ensure the system is supervised. More than one relay may be used, but that will deduct from the number of alarm output relays.

#### Material Affect and Recommendation

Perform a site survey using an Inovonics wireless survey kit to verify the RF signal is acceptable, and, when necessary, to determine where to locate repeaters. Add repeaters as issues arise. Mount Inovonics devices at a height sufficient to achieve line of sight above traffic.

### FAQ:

- **Q: How many transmitters can the EN4232MR receiver support?**  
A: The EN4232MR receiver can support up to 32 transmitters.
- **Q: What is the purpose of the back tamper feature in the EN4232MR receiver?**  
A: The back tamper feature provides increased tamper security for the system.

### Overview

The EN4232MR receiver allows you to add up to 32 transmitters and 11 outputs to any application, and includes a back tamper for increased tamper security.

Inovonics add-on receivers use Form C relays to allow connection to any hardwired panel or stand-alone wireless application.

**The following add-on receivers are available from Inovonics:**

Receiver	Alarm Output Relays	Fault Relays	Transmitters Supported
EN4204R	4	1	4
EN4216MR	5	1*	16
EN4232MR	11	1*	32

\* At least one relay must be used for faults to ensure the system is supervised. More than one relay may be used, but that will deduct from the number of alarm output relays.

### Installing an Inovonics Security System

An EchoStream survey kit must be used to establish a UL system. The EchoStream survey kit measures the signal strength of high-power repeater and sensor messages to help optimize your EchoStream system.

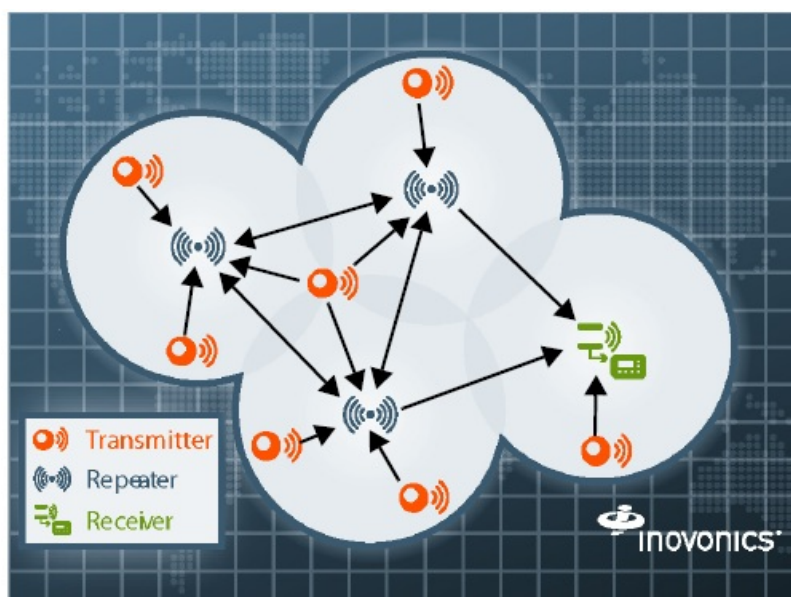


Figure 1 Sample EchoStream system

The EchoStream survey kit provides you with two signal strength measurements: signal level and signal margin.

#### Signal level:

The signal level is the measurement of the overall decibel level of the message.

#### Signal margin:

The signal margin is the measurement of the decibel level of the message, minus the decibel level of any interfering signals. Inovonics Wireless equipment should be placed within a facility such that all end-devices produce signal margin readings of at least 4 decibels. Both the signal level and signal margin are measured in decibels. Because signal strength and signal margin are measured on a logarithmic scale, the difference between a decibel level of 3 (Weak) and a decibel level of 4 (Good) is a much larger difference than it would be on a linear scale.

**Note:** Inovonics offers two options for site surveys: the EN7017 survey kit and app and EN4016SK survey receiver. The EN4016SK survey receiver displays the decibel level, while the EN7017 survey kit and app displays only that the reception is good or weak. For more information, see the EN4016SK Survey Receiver Installation and Operation Manual or the EN7017 Survey Kit and App Installation and Site Survey Instructions.

**Caution:** The EchoStream system should be tested regularly to ensure operation. To test: place the system in test mode, activate an end device, and ensure an appropriate response.

### RF Signal Propagation

While wood, drywall and glass usually let the RF signals pass, some materials may inhibit or attenuate radio frequency (RF) signal propagation by blocking, reflecting, deflecting or absorbing RF signals. Consider anything between transmitters and repeaters and/or the receiver. Is there concrete and steel construction? Are there earthen berms or hills? Are there a lot of trees? Devices should be mounted such that they are least affected by these elements. For best results, transmitters and repeaters should be mounted at the optimal height to achieve line of sight to repeaters and/or the receiver. Usually this means they will be mounted as high as possible.

**Following are some typical obstacles to RF signal propagation:**

Material	Affect	Recommendation
Metal construction, including ductwork; pipes; studs; stucco, plaster or concrete with wire mesh; satellite dishes, metal-lined rooms such as walk-in coolers or freezers; metal siding, safes, etc.	Can reflect, absorb and/or disrupt RF signals.	Perform a site survey using an Inovonics wireless survey kit to verify the RF signal is acceptable, and, when necessary, to determine where to locate repeaters.
Completely enclosed metal boxes/enclosures.	Can restrict RF signals.	
Solar panels, cinder block walls, windows with built-in solar tinting.	Can absorb and/or reflect RF signals.	
Vegetation.	Can attenuate RF signals. The RF environment can alter as trees shed or sprout leaves.	Add repeaters as issues arise.
Automobile and truck traffic.	Can disrupt RF signals.	Mount Inovonics devices at a height sufficient to achieve line of sight above traffic.

### Inovonics Contact Information

For product and installation videos visit us at [www.inovonics.com/videos](http://www.inovonics.com/videos) or use the QR code below.



**If you have any problems with this procedure, contact Inovonics technical services:**

- Email: [support@inovonics.com](mailto:support@inovonics.com)

- Phone: [800-782-2709](tel:800-782-2709)

## EN4232MR Front Panel

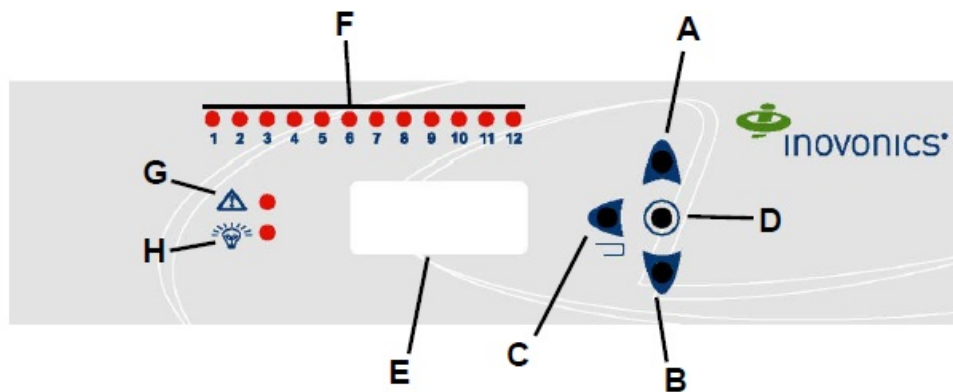


Figure 2 Receiver front panel

- A Up button
- B Down button
- C Back button
- D Enter button
- E LCD display
- F Output LEDs
- G Fault LED
- H Power LED

Up Button Scrolls the display up.

- Down button: Scrolls the display down.
- Back button: Returns display to the previous menu.
- Enter button: Selects the currently displayed menu item.
- LCD Display: Shows status, event log, and programming information.
- Output LEDs: The output LEDs light to indicate an alarm or fault condition at the appropriate output.
- Fault LED: The fault LED lights to indicate a transmitter fault condition; either low battery, inactive, line power loss, or tamper.
- Power LED: The power LED lights when the EN4232MR is receiving power.

## EN4232MR Internal Components

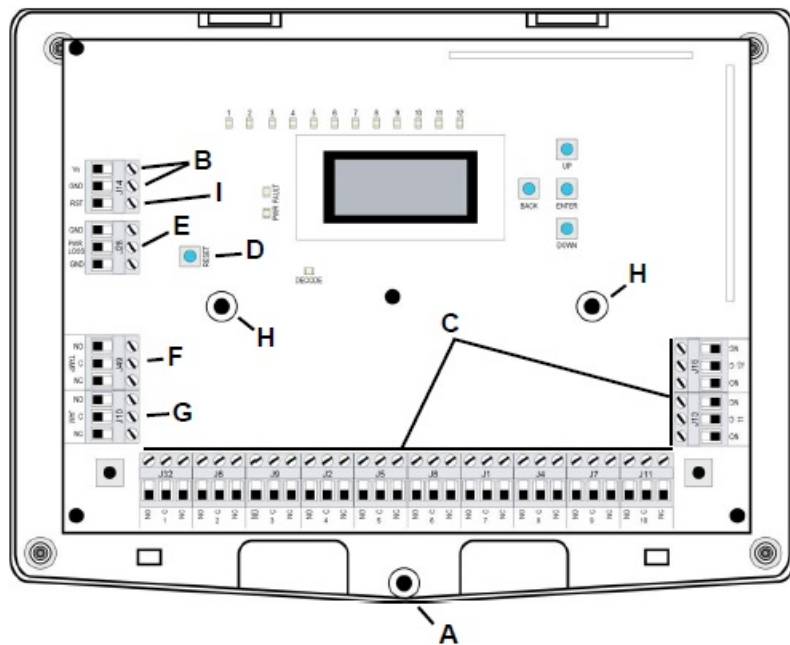


Figure 3 EE4232MR internal components

- A Housing release screw
- B Power connections
- C Output terminals
- D Reset button
- E Power loss output
- F Tamper output
- G Jam output
- H Mounting hole
- I Reset input

**Note:** The inside cover of the housing includes a wiring diagram.

## Installation and Startup

### Installation Notes

- These products are designed to be maintained by professional security technicians.
- Products are tested for indoor use.
- Do not mount wireless smoke detectors, co detectors, initiating device transmitters or repeaters to removable surfaces, such as ceiling tiles.
- All products should be manually tested weekly.
- The EN4232MR must be installed within 30 m (98.5 ft) of control unit.
- Low power transmitters shall be limited to a single initiating device.
- Each manually operated holdup alarm initiating device shall be installed so that it cannot be observed by the public and so that it can be operated in a manner that will not be obvious to an attacking party.
- Each semi-automatic holdup alarm initiating device shall be installed so that it is not noticeable to an attacking party during a holdup attempt and is not noticeable to the public or an attacking party prior to a holdup attempt.
- Installation of holdup alarm units and systems shall be governed by the Standard for Installation and

Classification of Burglar and Holdup Alarm Systems, UL 681.

- Installation shall be in accordance with CSA C22.1, Canadian Electrical Code, Part I, Safety Standard for Electrical Installations ; CAN/ULC S302, Standard for the Installation, Inspection and Testing of Intrusion Alarm Systems; and CAN/ULC S301, Standard for Signal Receiving Centres Configuration and Operations. Locations where installations are not recommended shall also be included.

## **Power Cabling**

**Caution:** Incorrect connections may cause damage to the unit.

Before beginning startup, you will need to connect power to the receiver.

### **To connect power to the receiver:**

1. Use a Phillips screwdriver to loosen the housing release screw; open the housing.
2. Connect power cabling to the Vs and GND connections.
  - The power source must be 11-14 VDC; 500mA. The power supply must be unswitched, uninterrupted, and regulated.
  - Use 18 – 22 gauge wire for all cabling, and ensure torque on the screw terminals does not exceed 7 inch-pounds.

**Note:** All field-wiring circuits that derive energy from power sources connected to a control unit shall be power limited. Route the cabling through the side cabling or back housing knockout.

## **Input/Output Cabling**

**Note:** This product employs TTL input for the reset. Tamper and jam output circuits are dry contact outputs, whereas the power loss output is an open-drain output. All connect to 22 AWG at 98.5 ft maximum to a separately listed control unit.

### **Connect the inputs and outputs per your specific application:**

1. Connect cabling to the power loss output. Must be configured for UL installations.
  - The power loss output is a normally closed (N/C) open collector output that opens when the receiver loses power. The receiver operation output is set to the follower output type.
2. Connect cabling to the tamper output. Must be configured for UL installations.
  - The optional tamper output is a relay output that reports receiver case tamper to an external device.
3. Connect cabling to the jam output. Must be configured for UL installations.
  - The optional jam output is a relay output that is active when noise thresholds on all transmission channels remain above a predetermined value for 10 seconds.
4. Connect a momentary switch to the reset input and ground. Must be configured for UL installations.
  - The optional reset input circuit permits installation of a remote momentary normally open (N/O) switch to clear faults, unlatch outputs, and reset the receiver to a normal state.
5. Connect cabling to the output terminals. Must be configured for UL installations.

## **Mount the Receiver**

**Caution:** Mount the receiver in a location removed from metal. Metal objects (duct work, wire mesh screens, boxes) will reduce RF range.

**Note:** For UL listed systems containing a UL hold-up switch, the EN4232MR must be located within three feet of a system keypad in a location out of sight from the protected premise.

6. Use the provided anchors and screws to mount the receiver in a location accessible for future maintenance, making sure the housing is flush with the wall and the back tamper switch is actuated.
7. After all transmitters have been registered, perform a walk test, activating each transmitter assigned to the receiver and ensuring a good signal.

## Point Setup and Registration

Each transmitter must setup and registered to a point. Once registered, the transmitters alarm(s) will be mapped to the appropriate alarm output(s). Following are the transmitters supported by the EN4232MR:

**Note:** Contact Inovonics for a list of other compatible devices.

Transmitter	Alarm 1	Alarm 2	Alarm 3	Alarm 4
EN1215EOL	Terminal block			
EN1215WEOL	Terminal block	Reed switch		
EN1223D	Both buttons			
EN1235SF	Button			
EN1235DF	Both buttons			
EN1242	Smoke			
EN1244	Smoke			

Transmitter	Alarm 1	Alarm 2	Alarm 3	Alarm 4
EN1245	CO			
EN1249	Bill trap			
EN1261HT	Motion			

## Factory Configuration Defaults

The EN4232MR arrives with the outputs pre-programmed. If the default programming is sufficient for your site, you do not need setup points. Simply register a transmitter to one of the points.

### To register a transmitter to a pre-programmed point:

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menu options.
2. Use the up and down buttons to navigate to the install & service menu; press the enter button.
3. Enter your password to access the install & service menus.
4. Follow the instructions in section , "Register Transmitter" on page 5.

If you do need to setup points, advance to section 3.2, "Program a Point"



Alarm Output	Transmitter Points
1	1, 11, 21, 31
2	2, 12, 22, 32
3	3, 13, 23
4	4, 14, 24
5	5, 15, 25
6	6, 16, 26
7	7, 17, 27
8	8, 18, 28
9	9, 19, 29
10	10, 20, 30

Output/Relay	Condition
11	Tamper
12	Low Battery
12	Supervision Loss/Inactive
12	Line Power Loss

### Program a Point

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menu options.
2. Use the up and down buttons to navigate to the install & service menu; press the enter button.
3. Enter your password to access the install & service menus.
4. Following the instructions in section "Setup Point" on page
5. Once all transmitters have been programmed, perform a walk test, activating each transmitter assigned to the receiver and ensuring a good signal.

**Caution:** Always test the system for operation upon completion of the installation.

## 4 32 Zone Multi-Condition Receiver with Relay Outputs Operation and Point Setup Screens

### Menu Tree

POINT STATUS, see 4.3, "Point Status" on page 4. EVENT LOG, see 4.4, "Event Log" on page 4. INSTALL & SERVICE, 4.5, "Install & Service".  
SETUP POINT, see "Setup Point".

- POINT #
- SUPERVISION TIME
- SECURITY/REPEATER
- ALARM INPUTS

- ALARM OUT
- ALARM OUTPUT TYPE
- INACTIVE OUT/TYPE
- TAMPER OUT/TYPE
- LOW BATTERY OUT/TYPE
- TEXT
- REGISTER
- REGISTER TRANSMITTER, see “Register Transmitter” .
- DELETE POINT, see “Delete Point” .
- SIGNAL STRENGTH, see “Signal Strength” .
- CHANGE PASSWORD, see “Change Password” .
- FACTORY CONFIG, see , “Factory Config”.

### **EN4232MR Start Screen**

The EN4232MR start screen displays alarm and fault information on the LCD display. Points in alarm are displayed as “Alarm”, with the point number following. If more than one point is in alarm, the display scrolls through each point. If a point has more than one alarm, the display scrolls through each alarm. Fault conditions are indicated by “Fault” in the LCD display if there is no alarm already displayed, and point numbers are not displayed. Alarms and faults will only display briefly when the alarm or fault is first received, and then the start screen will return to a ready condition. For detailed alarm and fault information, see section 4.3, “Point Status” on page 4.

### **Point Status**

The point status menu allows you to view detailed alarm and fault information. Point status information is available without entering a password.

#### **To access the point status menu:**

1. From the EN4232MR start screen, press the enter button to access the receiver’s three main menus. “Point Status” displays.
2. Press the enter to display point status details.
3. Use the up/down buttons to scroll through the points; press the enter button again to view the outputs the displayed conditions are mapped to.
  - Point status flags are defined as follows: A = Alarm (transmitter only); T = Tamper; B = Low Battery; L = AC loss (repeater only); I = Inactive.

**Note:** If “—” displays, the displayed condition has been mapped to a null output.

### **Event Log**

The event log displays the last 50 events that have occurred, whether they be alarms, or tamper or inactive faults. Event log information is available without a password.

1. From the EN4232MR start screen, press enter.
2. Use the up or down buttons to navigate to “Event Log”; press the enter button.
3. Use the up/down buttons to scroll through events.
4. When viewing transmitter events, press enter to see the output the events map to.

**Note:** No output will be displayed if the event is mapped to a null output.

## Install & Service

**Note:** The default password is 3446.

- A maximum time delay of 60 seconds is used to prevent an alarm from activating during premises ingress and egress.

The install & service menu is used to reset factory configuration, change password, view signal strength, delete points, register transmitters, and setup points for any of the programmed points.

### To access the install & service menu:

1. From the EN4232MR start screen, press the enter button to access the receiver's three main menu options.
2. Use the up and down buttons to navigate to the install & service menu; press the enter button.
3. Enter a password to access install & service menus.

## Setup Point

1. From the install & service menu, press enter at the "Setup Point" prompt.
2. Use the up/down buttons to scroll through point numbers; press the enter button to select a point.
  - "Tx Registr'd" displays if a transmitter or repeater is currently registered to this point; "Tx Not Registr'd" displays if no transmitter is registered to this point.
3. Press enter to continue.

Supervision Time: Sets a time limit on missing transmitters.

- The valid range is 0 to 99 hours. The default is 60 minutes. Selecting 0 turns off supervision.

**Caution:** Turning off supervision can jeopardize the integrity of your system. Inovonics does not recommend turning off supervision. For supervision to function correctly, the supervision time must be set for an interval greater than the transmitter check-in time.

- Use the up and down buttons to adjust the supervision time; press the enter button to select.
- Use the up and down buttons to toggle between "Hrs" (hours) and "Min" (minutes); press the enter button to select.

Select Security/Repeater: Configures point's alarm and alert messages as either a repeater or a security transmitter.

- Use the up and down buttons to choose "Select Security" for a security transmitter or "Select Repeater" for a repeater; press the enter button to select.

1-4 Alarm Inputs: Allows security transmitters with multiple alarm conditions to be assigned a separate alarm point and output type for each individual condition.

- Use the up and down buttons to navigate the number of alarm inputs for the transmitter; press the enter to select.

**Alarm Out:** Maps the security transmitter's alarm condition(s) to alarm outputs.

- Use the up/down buttons to scroll through the output numbers. Choosing “–” will disable alarm output.
- Press Enter to select the output to use for the alarm condition.

Alarm Output Type: Selects the output type for the alarm condition. The default is follower.

- Use the up/down buttons to scroll through the output type options in the following table; press the enter button to select the desired output option:

Output Type	Description
Follower	The output reflects the transmitter's alarm status.
Latching	The output turns on when activated and remains on until the receiver is reset.
Toggle	The output changes state each time the device sends a new activation. Press the enter button to select. “Inactive” displays when selected. Inactive time prevents output chatter. The valid range is 2.0 to 99.5 seconds, in 0.5 second increments. Use the up and down buttons to navigate.

Output Type	Description
Momentary	Momentary: The output turns on for the programmed duration, then turns off, regardless of the device status. Press the enter button to select. “Moment” displays when selected. This sets the time that the output will stay activated. The valid range 0.5 to 99.5 seconds, in 0.5 second increments. Use the up and down buttons to navigate.

**Inactive Out:** Maps transmitter/repeater inactivity fault output.

- Use the up/down buttons to scroll through the output numbers.  
Choosing “–” will disable inactivity reporting.
- Press enter to select the output to use for this transmitter/repeater.

**Inactive Output Type:** Selects the output type for the inactive condition.

- Use the up/down buttons to scroll through the output type options; press the enter button to select the desired output option.

**Caution:** A missing/inoperative transmitter shall be reported as a latching trouble signal at the control panel within four hours or less.

**Tamper Out:** Maps transmitter/repeater tamper fault output.

- Use the up/down buttons to scroll through the output numbers.  
Choosing “–” will disable tamper output.
- Press enter to select the output to use for this transmitter/repeater's tamper transmission.

**Tamper Output Type:** Selects the output type for the tamper condition.

- Use the up/down buttons to scroll through the output type options; press the enter button to select the desired output option.

**Low Batt Out:** Maps transmitter/repeater low battery fault output.

- Use the up/down buttons to scroll through the output numbers.  
Choosing “–” will disable low battery output.
- Press enter to select the output to use for this transmitter/repeater’s low battery transmission.

**Low Battery Output Type:** Selects the output type for the low battery condition.

- Use the up/down buttons to scroll through the output type options; press the enter button to select the desired output option:

**Line Power Loss Out:** Maps repeater line power loss fault output.

- Use the up/down buttons to scroll through the output numbers.  
Choosing “–” will disable line power loss output.
- Press enter to select the output to use for this repeater’s line power loss transmission.

**Line Power Loss Output Type:** Selects the output type for the line power loss condition.

- Use the up/down buttons to scroll through the output type options; press the enter button to select the desired output option:

**Text:** Enter eight-character descriptive text for the transmitter/repeater

- Use up/down buttons to scroll through the alphanumeric characters; press enter to select and advance to the next character. To select a space, press enter without selecting a digit.  
**Note:** If you do not use all eight characters, you must enter spaces to the end of the line.
- When finished, press enter again to complete selection.

**Register Transmitter:** The register transmitter option allows you to register

- transmitter or repeater to the programmed point.
- Use the up and down buttons to toggle between “N” for no and “Y” for yes to choose whether or not you wish to register a transmitter/ repeater to the point; press enter to select.
- Press the transmitter/repeater’s reset button at the “Reset Xmitter” prompt.
- When “Tx Reg’d” displays, press enter to finish and advance to the next point.
- When all transmitters have been registered, press reset on the receiver to clear faults.

**Note:** A transmitter/repeater can be registered to the point at a later time using the “Register Xmitter” prompt in the install & service menu.

**Register Transmitter**

The register xmitter option allows you to register a transmitter or repeater.

1. From the install & service menu, use the up and down buttons to navigate to the “Register Xmitter” prompt; press the enter button.
2. Use the up and down buttons to choose the point to which you want to register the transmitter/repeater.
3. Use the up and down buttons to toggle between “N” for no and “Y” for yes to choose whether or not you wish to register a transmitter/repeater to the point; press enter to select.
4. Press the transmitter/repeater’s reset button at the “Reset Xmitter” prompt.

### **Delete Point**

The DELETE POINT option allows you to delete transmitter registration information from all registered points, or from a specific point. Programmed point information is not deleted; just the registration identification number associated with the transmitters or repeaters. To delete points:

1. From the install & service menu, use the up and down buttons to navigate to the “Delete Point” prompt; press the enter button.
2. The “Delete All?” prompt displays. Use the up and down buttons to choose “N” for no or “Y” for yes; press enter to select.
3. If you selected no, the “Delete Point” prompt displays. Use the up and down buttons to choose a point to delete; press enter to select.
4. Press the enter button. If there is more than one registered point, then pressing the enter button returns to point selection for deletion; if there are no more registered points, the display returns to the install & service menu.

### **Signal Strength**

The SIGNAL STRENGTH option is used to measure signal strength and troubleshoot installation problems.

1. At the “Signal Strength” prompt, press enter.
  - The first programmed point displays, along with a signal quality of good, weak or no sig.

**Note:** The point must have an active transmitter associated with it to display signal strength.
2. Use the up/down buttons to scroll through the registered transmitters.
3. Press enter to view level (LV) and margin (MA).
  - Level indicates the overall signal strength; margin indicates the signal strength minus the background noise.

**Note:** Inovonics recommends a level of 10 for most installations.

### **Change Password**

Passwords can be up to five digits long. The password is 3446.

#### **To change the password:**

1. From the install & service menu, press enter at the “Change Password” prompt.
2. Use the up/down buttons to scroll through the digits; press enter to select and advance to the next digit.

**Note:** Choosing a null as the password will disable the function, allowing users to perform receiver functions and/or change parameters without a password.

3. When finished, press enter again to complete selection.
4. When “Password Changed” displays, press enter to return to the install & service menu.

**Caution:** Store the new password in a secure place. If the new password is lost, you will not be able to access the receiver without restoring it to factory defaults as described in “Factory Config” .

### Factory Config

The factory config option is used to restore the EN4232MR to its factory defaults.

**Caution:** Choosing factory config will erase all programmed point and output information, as well as the password.

### To restore the factory configuration defaults to the EN4232MR:

1. From the install & service menu, use the up and down buttons to navigate to the “Factory Config” prompt; press the enter button.
2. The “Reset Config” prompt displays. Use the up and down buttons to choose “Y” for yes; press enter to select.
3. The “Config Reset” prompt displays; press the enter button to return to the install & service menu.

The receiver can also be brought back to the factory default configuration through a hardware initiated sequence.

1. Connect a wire between the reset terminal and the ground terminal.
2. While pressing the back button, cycle the power to the unit.
3. Release the back button and remove the wire between the reset terminal and ground.
4. “Reset Config?” displays; select “Y” and press the enter button.

### Troubleshooting

Problem	Possible Solutions
Receiver won't power up.	<ul style="list-style-type: none"><li>• Verify your power and ground wires are securely connected to VS and GND on the power terminals.</li><li>• Meter incoming power to make sure it is operating at 11-14 VDC, 70- 100mA.</li><li>• Keep cable lengths as short as possible to minimize cable capacitance. Measure voltage supply at the receiver to ensure power requirement is met for long cable runs.</li></ul>

Messages from registered transmitters are not being received.	<ul style="list-style-type: none"> <li>• Verify receiver is getting enough power.</li> <li>• Make sure you are in the appropriate programming step to register transmitter. Display should read “Reset Xmitter.”</li> <li>• Make sure you are pressing the reset button on the appropriate transmitter and not on the receiver.</li> <li>• Bring the transmitter close to receiver to verify it is in range and can be heard by the receiver.</li> </ul>
Tamper output not working.	<ul style="list-style-type: none"> <li>• Verify tamper output wires meet specifications and are securely connected to the appropriate terminals.</li> </ul>
Jam output not working.	<ul style="list-style-type: none"> <li>• Verify jam output wires meet specifications and are securely connected to the appropriate terminals.</li> </ul>
Power loss output not working.	<ul style="list-style-type: none"> <li>• Verify power loss output wires meet specifications and are securely connected to the appropriate terminals.</li> </ul>
Form C relays are not changing states.	<ul style="list-style-type: none"> <li>• Use a volt meter to check the state of the relays.</li> <li>• Verify receiver is receiving enough power to meet the power requirements.</li> <li>• Check programming to make sure you have the designated point number programmed to the appropriate relay.</li> </ul>

## Specifications

- UL compatible repeater, transmitters: EN5040-T, EN1215EOL, EN1215WEOL, EN1223D, EN1235SF, EN1235DF, EN1244, EN1245, EN1249, EN1261HT
- Housing dimensions: 8.71" x 7" x 1.54" (221.1 mm x 177.8 mm x 39.1 mm).
- Weight: 482g (17.0oz).
- Operating environment: 32-140°F (0-60°C), 90% relative humidity, non-condensing.
- Power requirement: 11-14 VDC; 500mA.
- Nominal current consumption: Approx. 70-100mA.
- Output specifications: Form C relay 1A @ 28 VDC, 0.5 @ 30 VAC resistive load.
- Input specifications: Reset input: Contact closure, momentary low.
- Receiver type: Frequency hopping spread spectrum.



- Operating frequency: 902-928 MHz (USA) 915-925 MHz (AUS) 921-928 MHz (NZ).
- Tamper: Type B, fixed device.
- Number of points/Transmitters: 32.
- Number of outputs: 12 Form C relay outputs.
- Event history log capacity: 50 events (first-in, first-out replacement).
- Regulatory certifications: Security Level 1 CAN/ULC S304:2016, UL 985, UL 1023, UL 2610.

**Note:** Inovonics supports recycling and reuse whenever possible. Please recycle these parts using a certified electronics recycler.

## **UL Requirements**

- The control panel must be programmed to indicate an alarm if the system is in an armed condition and an RF jamming signal occurs at the receiver.
- The receiver tamper and transmitter tamper cannot be combined in one loop.
- The control unit providing input power to the receiver must not have a range outside of 11-14 VDC.
- Burglary or other type devices and fire devices cannot be intermixed on a single receiver. If both burglary or other type applications and fire applications are required in a single system, two EN4232MR receivers will be required, with one set up for burglary or other type applications and the other set up for fire.

## **Television and Radio Interference**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **FCC Part 15 and Innovation, Science and Economic Development Canada (ISED) Compliance**

This device complies with part 15 of the FCC Rules, and ISED license-exempt RSS standard(s).

### **Operation is subject to the following two conditions:**

1. This device may not cause interference, and
2. This device must accept any interference that may cause undesired operation of the device.


**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** Inovonics commercializes products utilizing open source third party software.

**For additional information, please visit:** <https://www.inovonics.com/support/embedded-third-party-licenses/>.

9.27.24 357-00027-03 Rev A © Inovonics, 2024 – [www.inovonics.com](http://www.inovonics.com)

## Documents / Resources

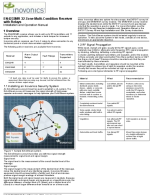	<a href="#">Inovonics EN4204R 32 Zone Multi Condition Receiver with Relays</a> [pdf] Instruction Manual EN4204R, EN4216MR, EN4232MR, EN4204R 32 Zone Multi Condition Receiver with Relays, EN4204R, 32 Zone Multi Condition Receiver with Relays, Multi Condition Receiver with Relays, Condition Receiver with Relays
---	--

## References

- [Unparalleled network infrastructure | Inovonics](#)
- [Embedded Third Party Licenses - Inovonics](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.