



# INSIGNIA NS-M35FMT/ NS-M35FMT2-C 3.5 mm Universal FM Transmitter Quick Setup Guide

[Home](#) » [Insignia](#) » INSIGNIA NS-M35FMT/ NS-M35FMT2-C 3.5 mm Universal FM Transmitter Quick Setup Guide



# INSIGNIA<sup>TM</sup>

## Quick Setup Guide | NS-M35FMT / NS-M35FMT2-C 3.5 mm Universal FM Transmitter

### Contents


- [1 PACKAGE CONTENTS](#)
- [2 FEATURES](#)
- [3 SETTING UP YOUR TRANSMITTER](#)
- [4 TUNING YOUR TRANSMITTER](#)
- [5 SAVING MEMORY PRESETS](#)
- [6 USING YOUR TRANSMITTER](#)
- [7 TROUBLESHOOTING](#)
- [8 SPECIFICATIONS](#)
- [9 LEGAL NOTICES](#)
- [10 ONE-YEAR LIMITED WARRANTY](#)
- [11 CONTACT INSIGNIA:](#)
- [12 Related Posts](#)

## PACKAGE CONTENTS

- FM transmitter
- Quick Setup Guide

## FEATURES

- 3.5 mm audio cable
- Auto-scan quickly finds unused stations
- Buttons easily control your transmitter

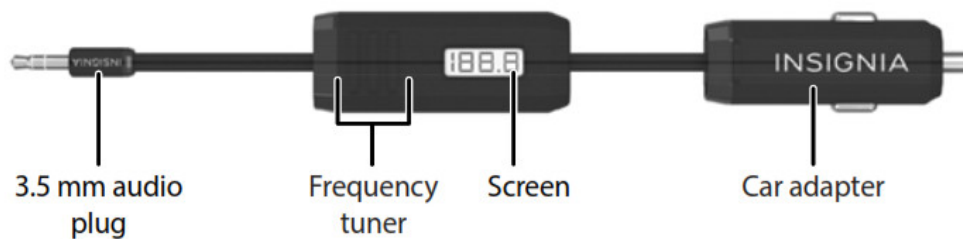


Before using your new product, please read these instructions to prevent any damage.

## SETTING UP YOUR TRANSMITTER

- 1 Plug the car adapter into your vehicle's cigarette lighter receptacle. Your transmitter turns on.
- 2 Connect the 3.5 mm audio plug to your audio device's AUX jack.

## TUNING YOUR TRANSMITTER

You can tune your transmitter manually, automatically, or with saved presets.

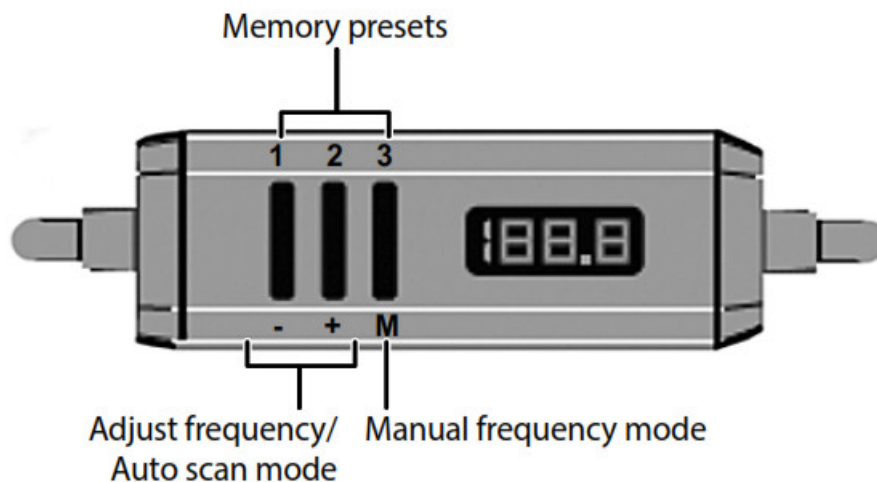

### Manually tuning your transmitter

1. Tune your vehicle's radio to a weak or unused FM frequency. You should hear static.
2. Press and hold M, then press – or + to tune your transmitter to the same frequency as your radio. The frequency is shown on the screen.

### Automatically tuning your transmitter

1. Press and hold 1. Your transmitter automatically selects a weak or unused frequency.
2. Tune your radio to the same frequency as your transmitter.

## Using memory presets

- Press the button (1, 2, or 3) that you saved a radio frequency to. See “SAVING MEMORY PRESETS” for more information.

## SAVING MEMORY PRESETS

1. Press and hold M to enter manual tuning mode.
2. Press – or + to tune the transmitter to the frequency that you want to save.
3. While still in tuning mode, press and hold a button (1, 2, or 3) to save the frequency to the corresponding number. Once the frequency is saved, the screen will flash the corresponding number once and return to display the frequency.

## USING YOUR TRANSMITTER

- Play music on your audio device and adjust your radio’s volume.

**Note:** Make sure that your audio device’s volume is set at a minimum of 50%.

## TROUBLESHOOTING

Audio has static

- Make sure that your radio is tuned to an FM radiofrequency.
- Make sure that your radio and transmitter are tuned to the same frequency.
- Try using a different FM radiofrequency.

### ***No or low audio***

- Make sure that the cables are correctly and securely connected to your vehicle’s cigarette lighter receptacle and audio device.
- Make sure that your radio and transmitter are tuned to the same frequency.
- Turn up the volume of your audio device or radio.
- Try using a different FM radiofrequency.

## SPECIFICATIONS

Frequency range	88.1 - 107.9 MHz (U.S.)
Cable length	39.37" (1 m)

## LEGAL NOTICES

**FCC Statement:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **RSS-Gen & RSS-210 statement:**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **RSS-102 Statement:**

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

### **ONE-YEAR LIMITED WARRANTY**

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

#### **CONTACT INSIGNIA:**

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2015 Best Buy. All rights reserved.

Made in China

INSIGNIA NS-M35FMT/ NS-M35FMT2-C 3.5 mm Universal FM Transmitter Quick Setup Guide – [Download](#)