




INSIGNIA NS-PCS21 2.1 Computer Speaker System User Guide

[Home](#) » [Insignia](#) » INSIGNIA NS-PCS21 2.1 Computer Speaker System User Guide 

INSIGNIA NS-PCS21 2.1 Computer Speaker System User Guide



Congratulations on your purchase of a high-quality Insignia product. Your NS-PCS21 is designed for reliable and trouble-free performance.

Contents

- [1 PACKAGE CONTENTS](#)
- [2 FEATURES](#)
- [3 SETTING UP YOUR SPEAKER SYSTEM](#)
- [4 POWER SUPPLY SPECIFICATIONS](#)
- [5 IMPORTANT SAFETY INFORMATION](#)
- [6 LEGAL NOTICES](#)
- [7 ONE-YEAR LIMITED WARRANTY](#)
- [8 CONTACT INSIGNIA](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

 
PACKAGE CONTENTS

- Satellite speakers (2)
- Subwoofer (1)
- AC adapter
- Quick Setup Guide



FEATURES

Right speaker
(front)

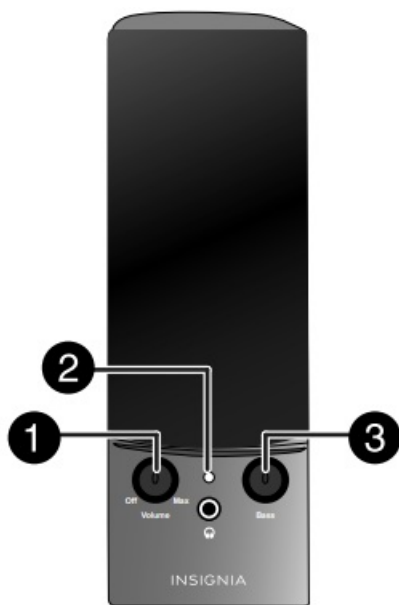


1	On/Off, Volume contro	Rotate clockwise to turn on the speaker system or to increase volume. Rotate counter clockwise to turn the speaker system off or to reduce volume.
2	Headphone output jack	Connect your favorite headphones to this jack. They will mute the speaker system automatically. The master volume control can then be used to turn up or down the volume to your headphones.
3	Bass control	Rotate clockwise to increase bass output. Rotate counterclockwise to decrease bass output.

SETTING UP YOUR SPEAKER SYSTEM


Positioning your speaker system

 1. Place the speakers on opposite sides of the device they are connected to and as far apart as possible.
2. Place the subwoofer on the floor.

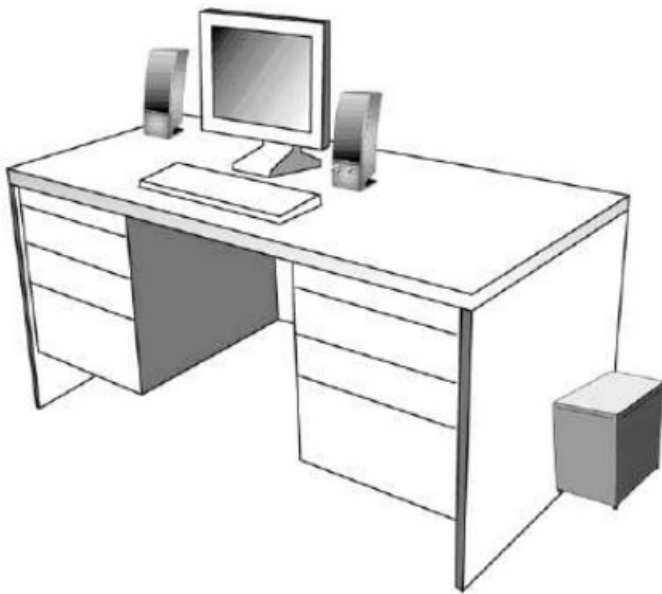


Connecting to a computer

 1. Make sure that the computer and your speaker system are turned off and unplugged from the power outlet.
2. Plug the cable with the green plug on the right speaker into the audio out jack on the computer (this jack is usually green).

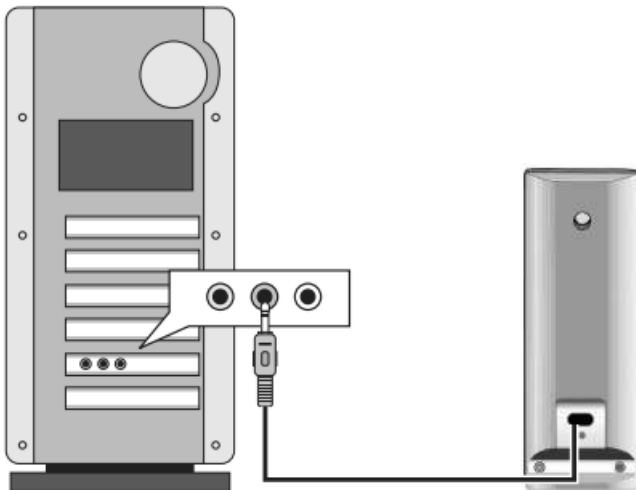

 3. Plug the cable with the black plug on the right speaker into the jack on the subwoofer.

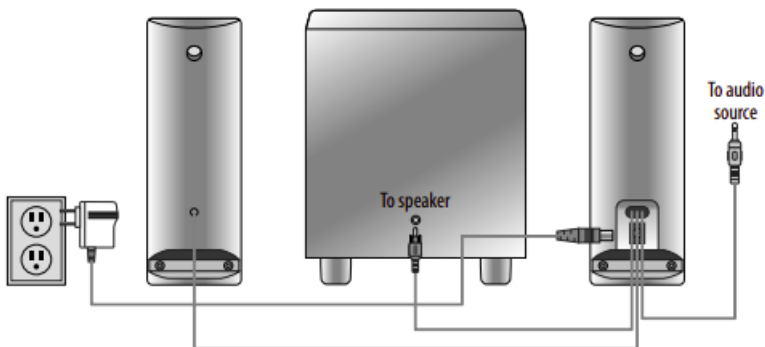


4. Turn on the computer and your speaker system.

Connecting to portable audio devices

1. Make sure the portable audio device and your speaker system are turned off and unplugged.

 2. Plug the green audio cable attached to the speaker into your audio device.

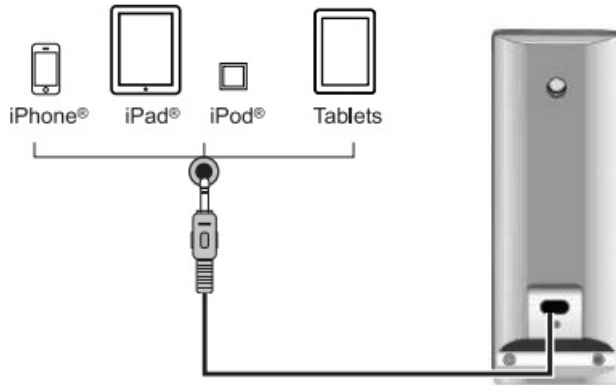

3. Plug the cable with the black plug on the right speaker into the jack on the subwoofer.
4. Plug the black plug from the AC adapter into the back of the right speaker and the other end into a wall outlet or power strip.
5. Turn on the speaker system and your device.

POWER SUPPLY SPECIFICATIONS

Input: AC 120V, 60Hz, 0.15A

Output: 5VDC, 2A

Symptom	Solution
Speaker system will not turn on	<ul style="list-style-type: none"> • Rotate the power button on the right speaker. When your speaker system is turned on, the power LED lights blue. • Make sure that the power cord is connected to a power outlet. • Test the power outlet to make sure that it is supplying power.
Speaker does not produce sound	<p>Rotate the power button on the right speaker. When your speaker system is turned on, the power LED lights blue.</p> <ul style="list-style-type: none"> • Make sure that the power cord is connected to a power outlet. • Test the power outlet to make sure that it is supplying power. • Make sure that you have connected the speakers correctly. For more information, see “Setting up your speaker system” on page 1 of this Quick Setup Guide. • Make sure that the sound is not muted or the volume is not set too low on the audio device you connected to. • Try connecting your speaker system to another audio device. If your speaker system produces sound, the problem is with the audio device you connected to
Sound is distorted	<ul style="list-style-type: none"> • Adjust the master volume control to the $\frac{1}{4}$ or $\frac{1}{2}$ level. • Adjust volume settings on the output device (computer or portable audio source).
Sound is coming from one speaker	<ul style="list-style-type: none"> • If your speaker system is connected to a computer, adjust your computer's audio levels to balance the sound coming from the speakers. • Reseat the audio connector into the audio out jack of your computer.

IMPORTANT SAFETY INFORMATION

1. Read, follow, and save all instructions and documentation.
2. Do not use this apparatus near water.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.

9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

LEGAL NOTICES

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and,

if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details

CONTACT INSIGNIA

 
For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.

Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2015 Best Buy. All rights reserved.
Made in China



Documents / Resources

	<p>INSIGNIA NS-PCS21 2.1 Computer Speaker System [pdf] User Guide NS-PCS21, NS-PCS21-C, 2.1 Computer Speaker System, NS-PCS21 2.1 Computer Speaker System, Speaker System</p>
---	---

References

- [1 Insignia Consumer Electronic Products](#)