



# INSIGNIA NS-WSCN Remote Shutter Control User Guide

[Home](#) » [Insignia](#) » INSIGNIA NS-WSCN Remote Shutter Control User Guide 

INSIGNIA NS-WSCN Remote Shutter Control




## Contents

- [1 PACKAGE CONTENTS](#)
- [2 FEATURES](#)
- [3 USING YOUR REMOTE CONTROL](#)
- [4 TROUBLESHOOTING](#)
- [5 REPLACING THE BATTERY](#)
- [6 SPECIFICATIONS](#)
- [7 SAFETY INFORMATION](#)
- [8 ONE-YEAR LIMITED WARRANTY](#)
- [9 CONTACT INSIGNIA](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

## PACKAGE CONTENTS

- Remote Wireless Shutter Control with battery
- Lanyard
- Quick Setup Guide

## FEATURES

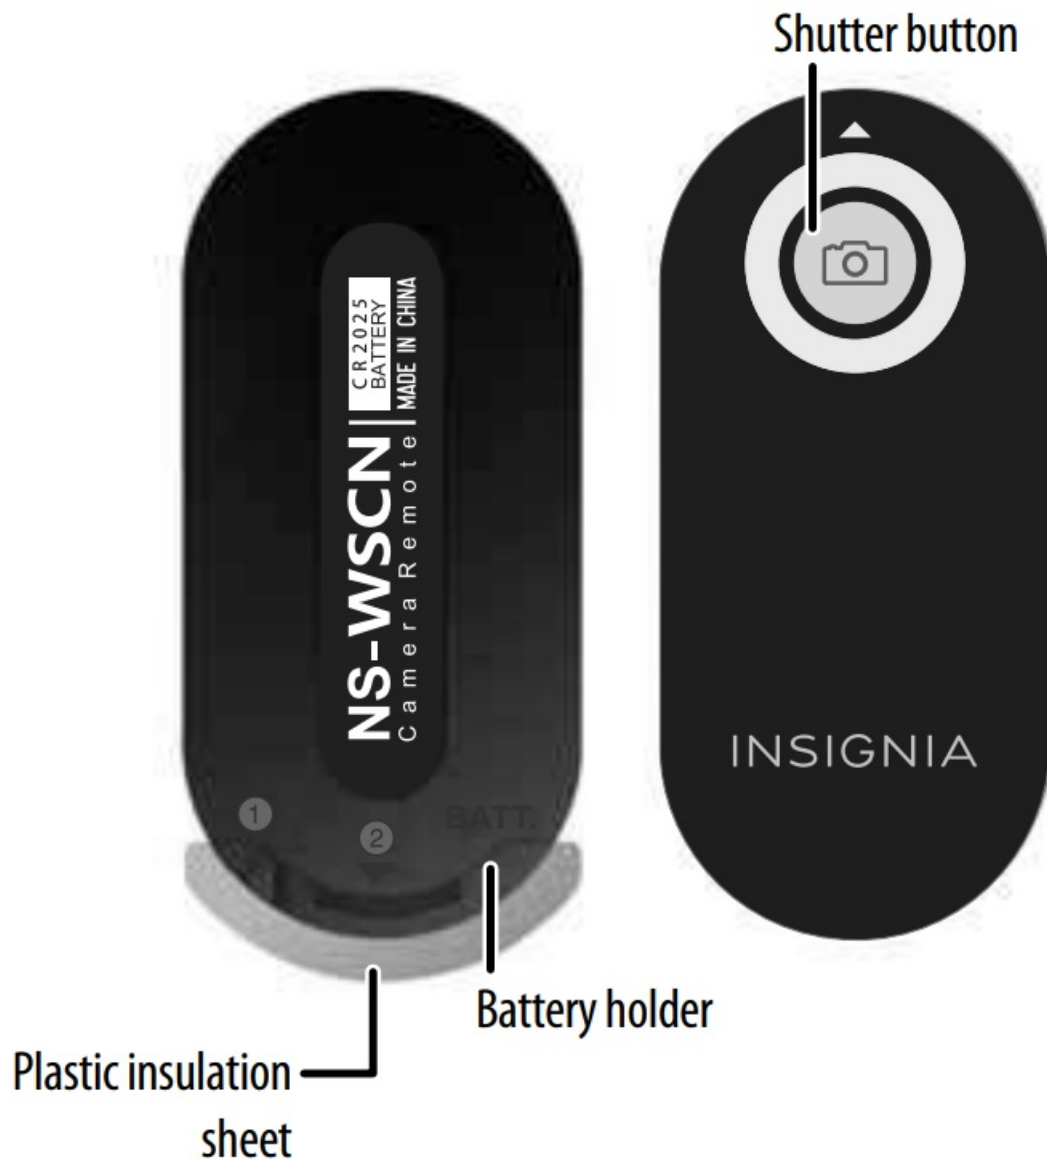

## USING YOUR REMOTE CONTROL

1. Pull the plastic insulation sheet out of your shutter control before using it the first time.
2. Set your camera to IR mode. For instructions, see the documentation that came with your camera.
3. Attach your camera to a tripod, or place it on a steady surface like a shelf or table.
4. Point your shutter control directly at your camera's IR receiver, then press the shutter button on the front of your shutter control. When your camera receives the IR signal, it automatically focuses and takes a picture.

## TROUBLESHOOTING

If your camera does not focus and take pictures:

- Make sure that your shutter control is within 32.8 ft (10 m) of the camera's IR receiver.
- Make sure that your camera is in IR mode. See your camera's user manual to activate the IR mode.
- Make sure that your camera has an autofocus feature. See your camera's user manual to activate auto focus (if available).
- Make sure that the battery for the shutter remote control is not expired. Replace with a CR2025 battery if

necessary.

- Make sure the line of site between the transmitter and the infrared receiver is not blocked by the lens or other obstacles.

## REPLACING THE BATTERY

1. Push the release tab (1) in the direction of the arrow.
2. Pull the battery tray (2) out of the battery compartment.
3. Remove the old battery, then insert a new CR2025 battery face up into the tray.
4. Push the battery tray into the battery compartment until the tray locks in place.

## SPECIFICATIONS

**Model:** NS-WSCN

**Operating voltage:** 3V (Battery: CR2025)

**Operating temperature:** 14° ~ 122°F (-10° ~ 50°C)

**Standby current:** 1.2μA

**Transmitting angle:** 30°

**Wavelength:** 940 nm

Maximum operating

**distance:** 32.8 ft. (10 m)

**Carrier frequency:** 38.1 KHZ

**Dimensions (L×W×H):** 2.6 × 1.2 × 0.3" (6.7 × 3.1 × 0.7 cm)

**Weight:** 0.4 oz (12 g)

## SAFETY INFORMATION

### FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**ICES Statement**

CAN ICES-3 (B)/NMB-3 (B)

**ONE-YEAR LIMITED WARRANTY**

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details


**CONTACT INSIGNIA**

For customer service, call 877-467-4289 (U.S.) or 01-800-926-3000 (Mexico) [www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2016 Best Buy. All rights reserved Made in China



**Documents / Resources**

	<p><a href="#">INSIGNIA NS-WSCN Remote Shutter Control</a> [pdf] User Guide NS-WSCN Remote Shutter Control, NS-WSCN, Remote Shutter Control, Shutter Control, Contr ol</p>
---	--

**References**

- [I Insignia Consumer Electronic Products](#)