



## Instant Children Print Camera User Manual

[Home](#) » [Instant](#) » Instant Children Print Camera User Manual




### Instant Children Print Camera User Manual



#### Contents [ [hide](#) ]

- [1 Keynote description](#)
- [2 Insert MicroSD card](#)
- [3 Printing Paper Installation](#)
- [4 Turn on the camera and shoot](#)
- [5 Playback and deletion](#)
- [6 Setting and Formatting](#)
- [7 Copy files to computers](#)
- [8 Shooting mode](#)
- [9 Photograph mode icons](#)
- [10 Reset](#)
- [11 Notes \(required reading\)](#)
- [12 WIFI Setting](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

#### Keynote description

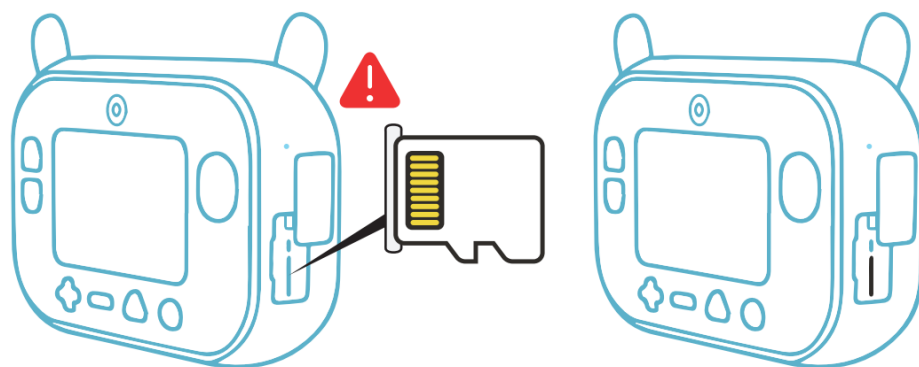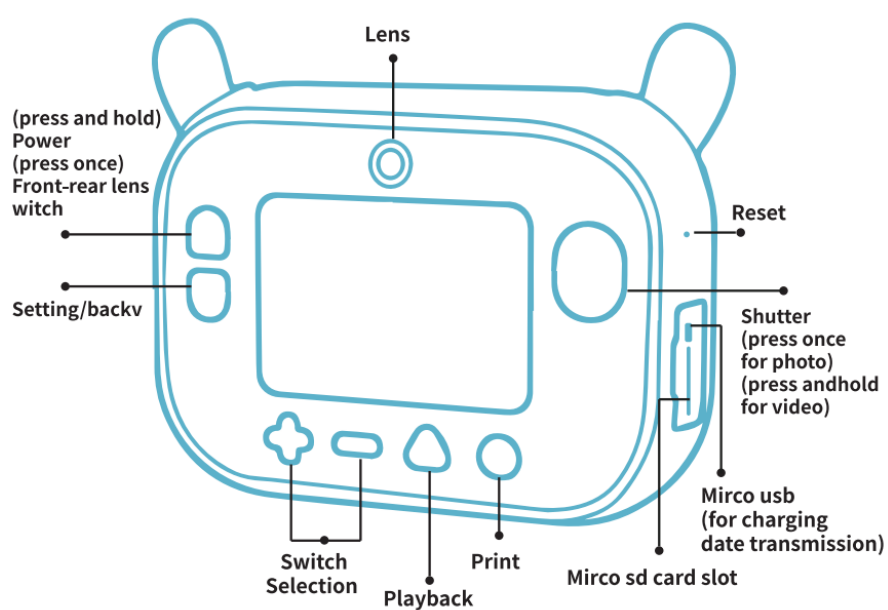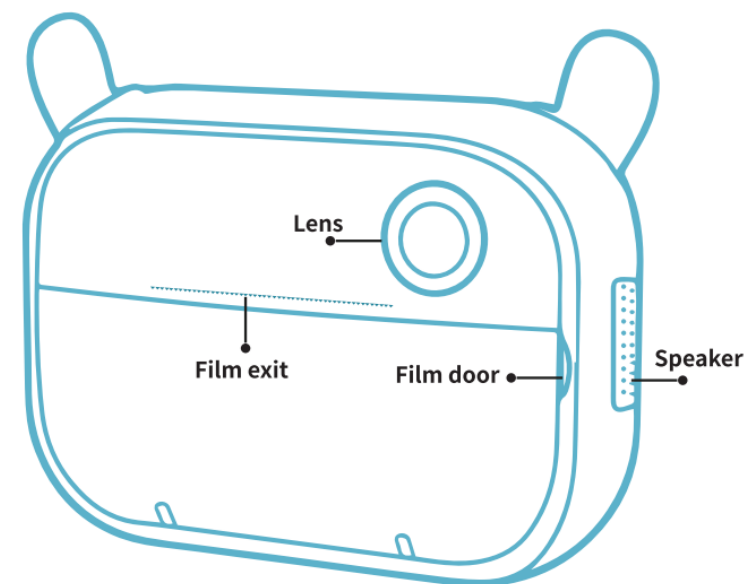


## Insert MicroSD card

size:0.59 x 0.43 x0.04 (in)

1. Insert the Micro SD card into the slot of the Micro SD card in the right direction as shown in the figure. (Note: Micro SD card needs to be purchased separately)
2. After proper installation, the Micro SD card will be flat with the fuselage.


## Printing Paper Installation

1. Pull open the film door.
2. Insert film as shown. And set aside printing film about 1.2inches in length.
3. Close the film door. (After proper installation, the cover will be flat with the fuselage, and there is some film outside.)

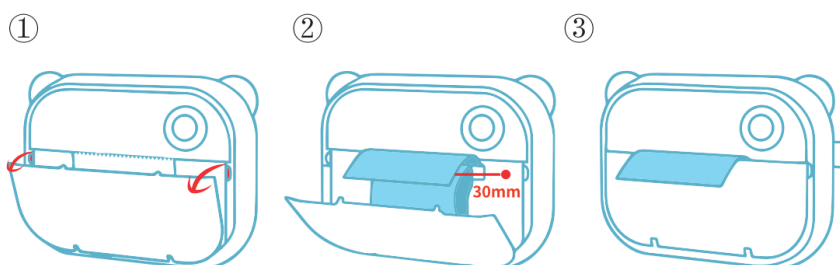


## Turn on the camera and shoot

1. Press and hold the power button to turn on/off the camera ( press once for switch front-rear lens)
2. Press the shutter button to take photos.
3. press and hold the shutter button for 2 seconds to start recording and then press the shutter button to save the video and exit the video mode.
4. press the print button to take a photo, and the photos can be printed instantly.

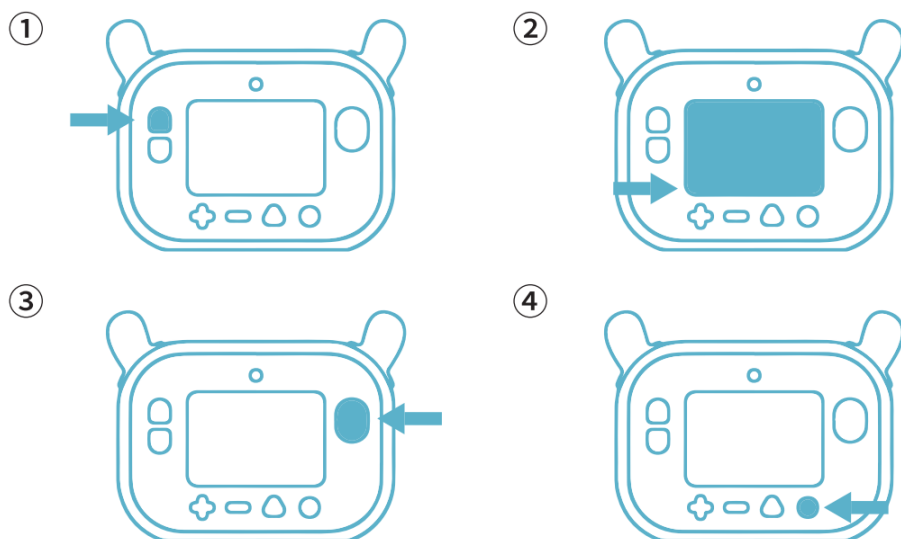


## Playback and deletion

1. Press the playback button to enter the playback mode. (Press playback button again to exit playback mode)
2. The file can be switched by pressing the switch selection button. (When viewing a video file, you can play the file by pressing the shutter button.)
3. Photos can be printed by pressing the print button.
4. When playback, you can delete the file by pressing the setting button. Press shutter button to determine and then press the setting button to cancel.

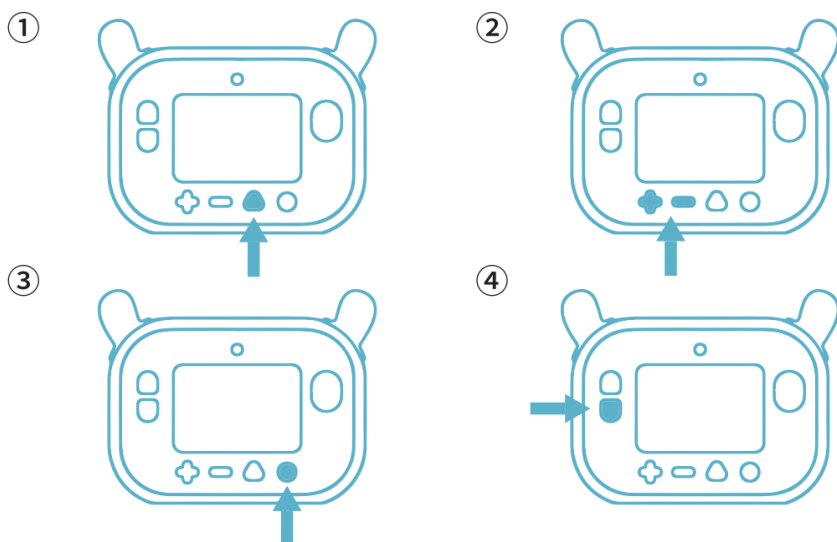


## Setting and Formatting

1. Press the setting button to enter the setting mode. (Press the setting button again to exit the setting mode)
2. Press the switch selection button to select different settings. Including picture quality, language, date and time, sound, formatting, printing concentration. (Formatting will empty all files, so be careful)
3. Press shutter button to determine and press the setting button to cancel while setting.

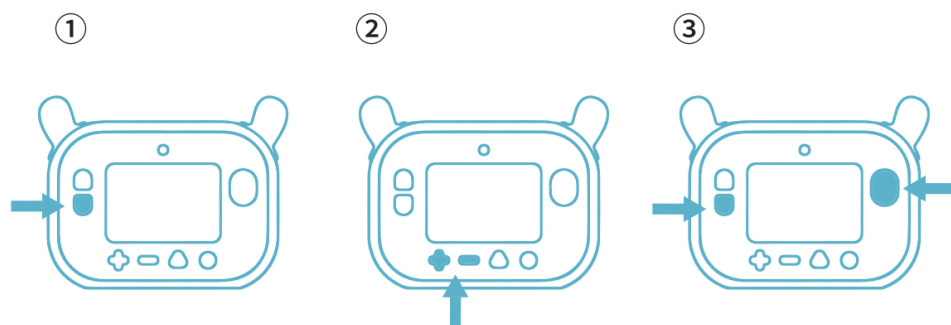

## Copy files to computers

1. Connect the camera to the computer with a data cable and you can copy or delete files on the computer.

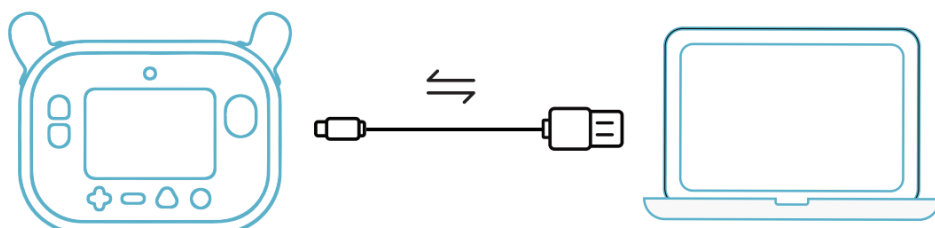


## Shooting mode

1. In the default normal photo shooting mode, press the switch selection button to select different photo shooting modes.
2. In different photo shooting modes, press and hold the back button to switch back to normal photo shooting mode.

①



②

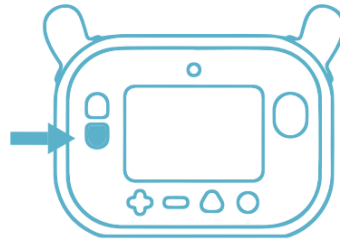

## Photograph mode icons



3 pictures continuous shooting



3secs time-lapse continuous shooting




3secs time-lapse shooting


## Reset

1. If the camera is abnormal, please do not repair it by yourself.
2. Press the reset button with a steel needle to reset.

①

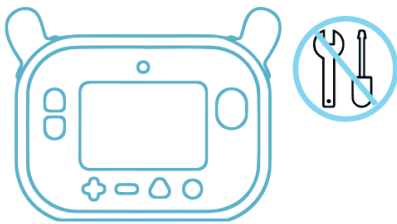

②

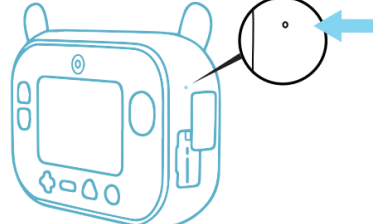

## Notes (required reading)

1. If there is any issues with the camera, please insert a steel needle into the reset hole and press the reset button to try to reset. Reset can solve more than 80% of the problem, do not disassemble, so as not to cause danger, and no warranty.
2. When the camera indicates that the battery is low, please use the random MicroUSB charging cable and plug it into the 5V power converter or computer USB port for charging. No power charger is included with this product.
3. Do not beat or squeeze the camera to avoid damage to the internal electronic components.
4. The camera is an electronic product, which is not waterproof. Please do not expose the camera to the splashing environment.
5. The package and instructions contain important information and warranty card, please keep them for future reference and warranty.
6. Disconnect from the charging line before using the liquid for cleaning.
7. The transformer or battery charger for charging must regularly check whether its wires, plugs, shell and other parts are damaged. In case of any damage, the transformer or battery charger should be stopped until it is completely repaired.

8. The camera cannot be connected to more than one power source.
9. Only the recommended transformer can be used for charging; Transformers are not toys and children are not allowed to charge them.

**Warning: contains small parts, not suitable for children under 3 years old!!!**

**From the date of purchase, this product enjoys a free maintenance policy for six months. Before you send the product for repair, please try to reset or pull out the card and restart the machine. If the problem is still not solved, please contact the customer service to confirm the cause of the product failure.**

**The following conditions are not covered by free maintenance:**

1. Failure or damage of the product caused by failure to use or maintain the product according to the instructions
2. Product damage is caused by accident or human factors.
3. Dismantle and repair the machine without our permission.
4. Exceeding the warranty period.
5. Wear, corrosion and fading under normal use.

fault	fault type	Terms of settlement
A	cannot start up	please try to change the charger and start up after charging
B	Memory card error	Please format or replace the memory card
C	Cannot be started	press the reset button and restart

## WIFI Setting

QR code



DiDi Cam

1. APP Download
  1. Android system: You can search “Di Di Cam” on the Google Play to download it, or scan the following QR code to download the app.
  2. 10S system: You can search “Di Di Cam” on the App Store to download it, or scan the following QR code to download the app.
2. When the camera boots up after inserting the memory card, opens the “settings” function of the camera, and chooses “WiFi connection”, it will display its UID account and password. At this time, other functions of the camera can't be operated.

3. Then open the “WLAN” settings of the mobile phone, connect the UID account of the camera, and when the connection is successful, open the APP, you can view or download photos and videos can only be viewed after downloading.

(Tips: If you want to make the photos or videos clearer, please download the photo or video to the app first, then transfer it to the mobile phone album in the app downloaded)




According to the development of the business, the function, APP, QR code, user interface and content of the device may be dynamically adjusted accordingly, and the system will continue to upgrade. We cannot guarantee the timely update of the relevant packaging and in structions, so customers please refer to the physical product as the standard.

Origin: shenzhen, China

Execution standard: gb6675.1-2014, gb6675.2-2014 gb6675.3-2014 , GB19865 GB6675.4-2014-2005

**Documents / Resources**

 <p>Instant Children Print Camera [pdf] User Manual Children Print Camera, Print Camera, Camera</p>	
---	--