



Instant MagicFroth 9-in-1 Coffee Makers User Manual

[Home](#) » [Instant](#) » Instant MagicFroth 9-in-1 Coffee Makers User Manual 

Contents

- 1 Instant MagicFroth 9-in-1 Coffee Makers User Manual**
- 2 Welcome**
- 3 Get started with your Magic Froth!**
- 4 IMPORTANT SAFEGUARDS**
- 5 Placement**
 - 5.1 General Use**
 - 5.2 Care and Storage**
 - 5.3 Power Cord**
 - 5.4 Electrical Warning**
- 6 SAVE THESE INSTRUCTIONS**
- 7 WHAT'S IN THE BOX**
 - 7.1 Instant Magic Froth**
 - 7.2 Remember to recycle!**
- 8 BEFORE YOU FROTH**
 - 8.1 Initial set up**
 - 8.2 Initial washing**
- 9 USING YOUR INSTANT MAGIC FROTH**
 - 9.1 Control panel**
- 10 Plugging in your Instant Magic Froth**
- 11 Sound settings**
- 12 Temperature and Foam Settings**
 - 12.1 Foam level**
- 13 FROTHING MILK**
- 14 Milk Measurements**
- 15 Frothing Tips**
- 16 Types of Milk**
- 17 Recipes to try with your Instant Magic Froth**
- 18 CARE, CLEANING AND STORAGE**
- 19 TROUBLESHOOTING**
- 20 LEARN MORE**
- 21 Product specifications**
- 22 WARRANTY**
- 23 DOWNLOAD**
 - 23.1 References**
- 24 Related Posts**

Instant MagicFroth 9-in-1 Coffee Makers User Manual



INSTANT® MAGIC FROTH™ USER MANUAL

Welcome

To your new Instant Magic Froth!

Now you can transform everyday coffee into your frothy favorites. With customizations and simple controls, we hope you'll become your own barista, right in your home.

Get started with your Magic Froth!



WARNING

Before using your Instant Magic Froth, read all instructions, including the Safety Information starting on page 2. Failure to follow the safeguards and instructions may result in personal injury and/or property damage. Keep this manual for reference.

IMPORTANT SAFEGUARDS

WARNING

Failure to adhere to safety instructions may result in personal injury and/or property damage and may void your warranty.

READ ALL INSTRUCTIONS

Before using your Instant Magic Froth, please read all instructions, including the Safety Information below. Keep this manual for reference.

Placement

- DO operate the appliance on a stable, non-combustible, level surface.
- DO NOT place the appliance on or near a gas or electric burner, or in an oven.

General Use

- DO NOT use this frother outdoors.
- DO NOT let the frother operate without milk.
- DO NOT use the appliance for anything other than its intended use. Not for commercial use. For household use only.
- DO regularly inspect the appliance and power cord.
- DO NOT leave the appliance exposed to sun, wind, and/or snow.
- DO operate and store the appliance above 32°F / 0°C.
- DO NOT allow children operate the appliance; close supervision is required when any appliance is used near children.
- DO NOT let children play with this appliance.
- DO NOT open the top cover during the frothing process; liquid is extremely hot and there is risk of personal injury and/or property damage.
- DO NOT touch hot surfaces. Use handles or knobs.

The use of an accessory not evaluated for use with this appliance may cause personal injury or property damage.

Care and Storage

- DO unplug from outlet when not in use before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
- DO NOT store any materials in the frother pitcher when not in use.

Power Cord

A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

Spilled liquids from this frother can cause serious burns.

Keep appliance and cord away from children.

- DO NOT let the power cord touch hot surfaces or open flame, including the stovetop.
- DO NOT use with power converters or adapters, timer switches or separate remote-control systems.
- DO NOT let the power cord hang over the edge of tables or counters.
- DO unplug your frother by grasping the plug and pull from the outlet. Never pull from the power cord.
- DO NOT use an extension cord.

This appliance has a polarized plug, with one blade wider than the other. To reduce the risk of electric shock:

- ONLY plug the power cord into a grounded electrical outlet.
- DO NOT attempt to modify the plug. If it does not fit into the outlet, contact a qualified electrician.

Electrical Warning

The frother contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock, personal injury and/or property damage.

To protect against electrical shock, personal injury and/or property damage:

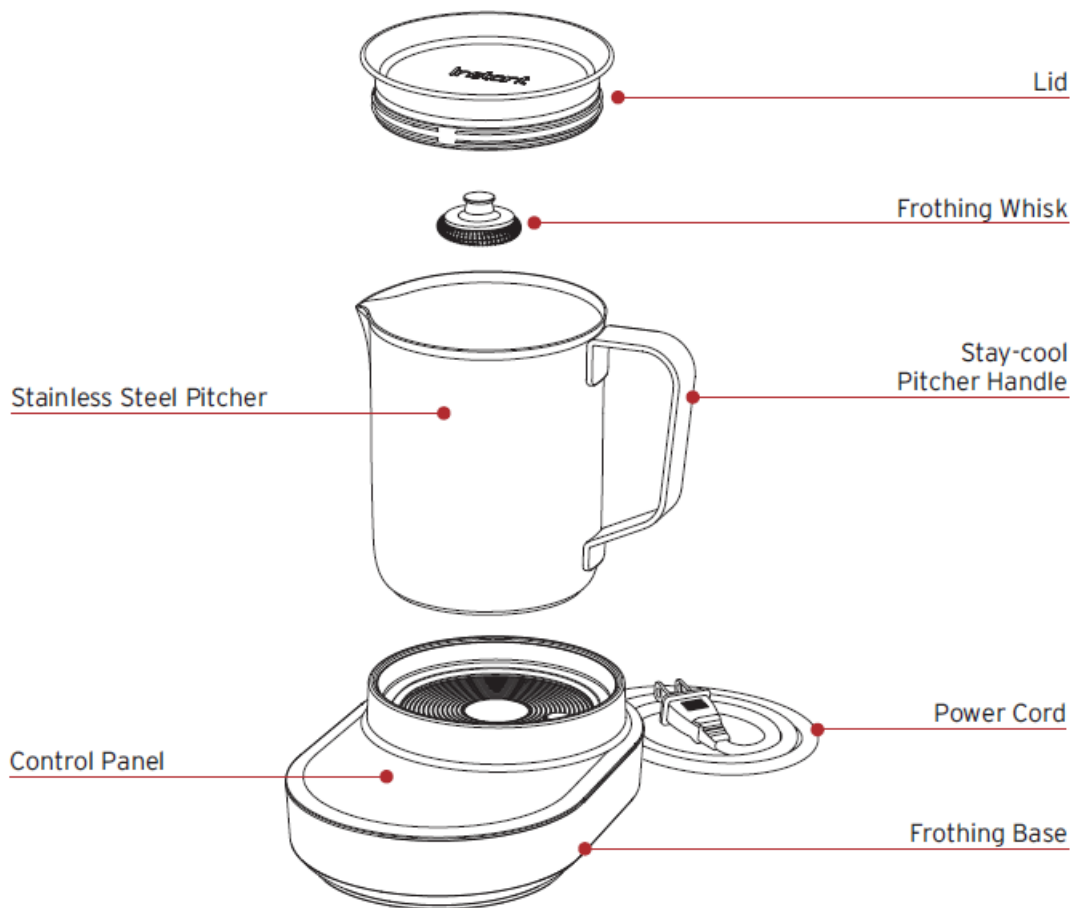 
- DO NOT remove the bottom cover. No user-serviceable parts inside. Repair should be done by authorized service personnel only.
- To disconnect, turn any controls to the OFF position and remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- DO regularly inspect the appliance and power cord. DO NOT operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at support@instanthome.com.
- DO NOT attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire, other personal injury and/or property damage, and will void the warranty.
- DO NOT tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.
- DO NOT immerse power cord, plug or the appliance in water or other liquid.
- DO plug this appliance into a polarized outlet one way. This appliance has a polarized plug, and one blade is wider than the other.
- DO NOT use the appliance in electrical systems other than 120 V ~ 60 Hz for North America.

SAVE THESE INSTRUCTIONS

Failure to adhere to safety instructions may result in personal injury and/or property damage and may void your warranty.

WHAT'S IN THE BOX

Instant Magic Froth



Illustrations are for reference only and may differ from the actual product.

Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this User Manual for reference.

BEFORE YOU FROTH

Initial set up

1. Pull the Instant Magic Froth and all parts out of the box.
2. Remove all packaging materials from within and around the frother.
3. Place your frother on a dry, stable, level surface.

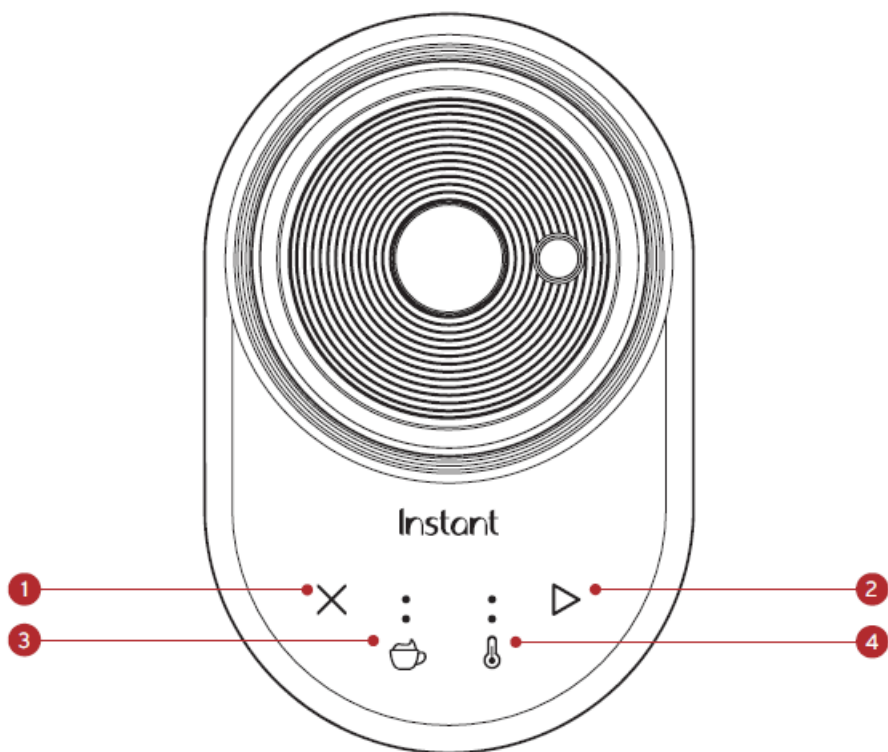 
Initial washing

1. Wash the frothing whisk, pitcher and lid in warm soapy water, then rinse and dry thoroughly. You can also clean these parts on the top rack of the dishwasher.
2. With a barely damp cloth, wipe down the frother base and control panel.




USING YOUR INSTANT MAGIC FROTH

Control panel




Your Instant Magic Froth was designed with an easy-to-use control panel and 4 simple buttons.



- 1. Cancel
- 2. Start
- 3. Foam options

- No Foam  (Stir only)
- Foam  (Low Speed)
- Extra Foam  (High Speed)

4. Temperature level

- Cool  (Heat OFF)
- Warm 
- Hot 

Plugging in your Instant Magic Froth





Once you've followed the initial setup and washing instructions, plug the frother base power cord into an outlet.

- The control panel buttons will light up then enter Ready mode. Default settings for Foam and Temperature levels will light up.





- After 5 minutes of inactivity, the frother enters Standby mode. The control panel will dim.
- To re-enter Ready mode, press any button or place/remove the frothing pitcher on/from the frother base.

Sound settings

Turn sound off

1. Press and hold  and  buttons together for 3 seconds.
2. Both  and  indicator lights blink once. Sound is turned off and the frother returns to Ready mode.

Turn sound on


1. Press and hold  and  buttons together for 3 seconds.
2. Both  and  indicator lights blink twice. Sound is turned on and the frother returns to Ready mode.

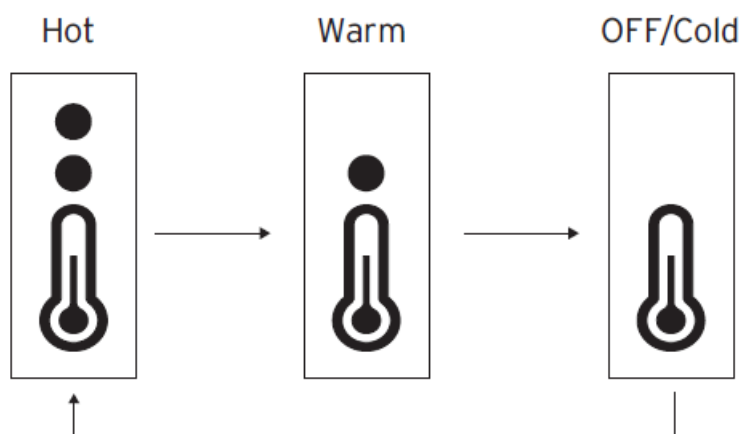 
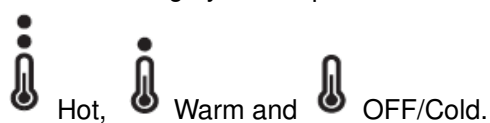 
Temperature and Foam Settings



Your Instant Magic Froth has been designed to help you personalize your foam at the touch of a button. The 3 temperature settings and 3 foam settings can be combined to create up to 9 different programs for your perfect froth.

Temperature

The temperature setting lets you choose whether to froth up warm foam and heated milk, or create cold foam for iced coffee and matcha.

To set or change your temperature level before frothing, press the button  to cycle through the three options:

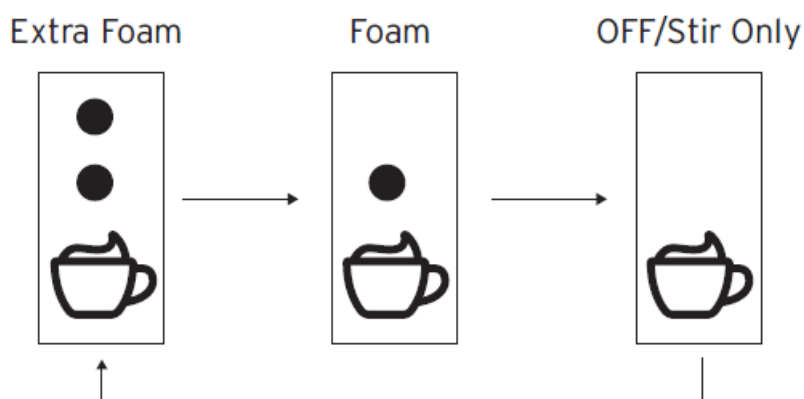 





Temperature	Try using it for...
	Cappuccino, Latte, Mocha, Flat white, Hot chocolate, heated milk
	Chocolate milk, Iced coffee, Iced matcha

Drinks mentioned are only suggestions. Experiment with different settings and drinks, to your personal taste.

Foam level

With adjustable foam settings, you can froth up a little foam or a lot, or turn foaming off to gently stir ingredients into heated milk. To set or change the foam level before frothing, press the button to cycle through the three options: Extra Foam, Foam, OFF/Stir Only.



Foam	Try using it for...
	Cappuccino, Macchiato
	Latte, Matcha
	Hot Chocolate, Chocolate milk, Chai, Flat white, Café au lait

Drinks mentioned are only suggestions. Experiment with different settings and drinks, to your personal taste.

FROTHING MILK


1. Place frothing whisk securely into the frothing pitcher. Position the flat end of the frother whisk over the rod at the bottom of the frothing pitcher and push down until it is secure.
Do not operate the frother without a frothing whisk installed into the pitcher, as this can cause uneven heating and burning.
2. Pour fresh, cold milk of choice into the frothing pitcher between the MIN and MAX frothing indicator lines. See

“Milk Measurements” on page 12.

Do not overfill the pitcher. Overfilling may cause the milk frother to overflow when using a foam setting.


3. Cover the frothing pitcher with the lid.

4. Place the frothing pitcher securely on the frother base.

5. Press  Start button to begin frothing with default or previously used settings, or

6. Change the  and  settings and then press . See “Temperature and Foam Settings” on page 9.

7. The frother will “beep” one time and begin the frothing cycle.

To stop frothing, press  the Cancel button or remove the frothing pitcher.

8. When the milk has reached the correct temperature and thickness the frother will stop, return to Ready mode and “beep” one time.

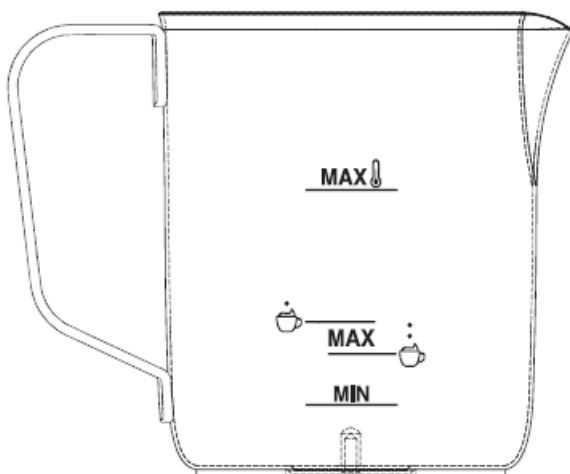 
9. Carefully remove the frothing pitcher from the frother base using the stay-cool frother handle. Serve the foam with a spoon or pour directly from the spout.




10. Enjoy your frothy beverage!

The frothing pitcher must always be in place on the frother base for your Instant Magic Froth to operate. Removing it at any time before or during use will automatically stop frothing and the frother returns to Ready mode.

Be careful: Frothing reaches high temperatures. DO NOT touch the frother pitcher or frother base during or immediately after the brewing process as both will be very hot. Touching hot surfaces may result in burns, other personal injury and/or property damage.

Milk Measurements



Milk Level Marking	Components
MAX 	17 oz. Maximum level for heating milk
MAX 	8.5 oz. Maximum level for milk frothing at Foam setting
MAX 	6.5 oz. Maximum level for more milk frothing at Extra Foam setting
MIN	3.4 oz. Minimum level for milk heating and frothing



Be careful: To avoid overflow when using the  Extra Foam setting, do not add more than 6.5 oz milk to the frothing pitcher.

Frothing Tips

Tip	Details
Cold milk is best	<ul style="list-style-type: none"> Using the coldest, freshest milk will almost always produce the best foam. When frothing, millions of tiny air bubbles are introduced into the liquid. The longer it takes to heat up, the more air can be infused into the liquid. The end result is silky rich foam and less chance of scalding.
Not all dairy-free milks produce foam	<ul style="list-style-type: none"> Milk with lots of fat will form a thick, creamy foam. Milk with less fat and more protein will create a light, airy foam. Some plant-based milks are too watery to create the best results. See “Types of Milk” on the following page.
Infuse your foam with flavor	<ul style="list-style-type: none"> Before frothing, add aromatic spices to the pitcher, like cinnamon, cardamom or nutmeg, or other fragrant items like lavender.
Let the frother rest	<ul style="list-style-type: none"> When frothing up large batches of foam, we suggest letting your frother rest for 3–4 minutes after every 2 frothing cycles to ensure it continues to perform at its best.
Creating latte art	<ul style="list-style-type: none"> As soon as the frother finishes whipping up your warm foam, lift the pitcher off the base (lid on) and gently swirl the pitcher. This helps give your latte foam a glossiness ideal for latte art. Experiment with different milks for the best results.

Types of Milk

As you begin using your Instant Magic Froth you will discover that different milk types and brands produce different types of foam. Depending on your personal taste and desired results, you can experiment with dairy, nut and plant-based milks.

Milk Type	Froth Description	Notes
Dairy Milk — Whole (3.5 % fat)	The ideal overall frothing milk. Creates a rich, creamy foam with tiny micro bubbles.	May take a bit longer to froth. Best if served immediately as it can deflate quickly. Good for latte art.
Dairy Milk — Skim	Froths up quickly creating light, airy foam that holds together a long time, with larger bubbles.	Ideal for drinks with a lower milk-to-coffee ratio. Good for latte art.
Dairy Milk — 2%	Performs very similarly to whole milk, creating rich, stable foam. Froths up quickly.	A great, lower-fat substitute to whole milk froth. Good for latte art.
Oat Milk	One of the best dairy-free options. Creates a very rich, sweet and creamy foam.	Try different brands to find the best results. May work for latte art.
Soy Milk	A great dairy-free option. Froths easily with creamy foam comparable to dairy.	Froth does not pour easily. Not ideal for latte art. May curdle when added to hot coffee. Good for cold coffee.
Almond Milk	Contains more fat than most plant-based milks and froths up well. A dense, but light foam.	Froths best at room temperature.
Coconut Milk	Produces very mixed results. Will only produce cold foam, without heat. Some brands froth well, and others are too watery to perform.	Choose carton milk over canned for best results. Cold foam only but a great milk for heated milk drinks.
Rice/Cashew/ Macadamia/ Hemp	Often too watery to produce good foam or foam that lasts. Try one of our suggested milks above or experiment with different brands to find one that works best.	Good dairy-free options for tasty cold or heated milk beverages without foam.

Recipes to try with your Instant Magic Froth

Latte

Pour a single shot of espresso and 2/3 cup of heated milk, then add a layer of rich milk foam on the top.

Café au lait

Fill a mug 3/4 full with hot coffee, then top with hot frothed milk for a creamier version of your morning brew.

Hot chocolate

Blend chipped/melted chocolate or cocoa powder with heated milk, then add sugar or water at your preference.

Cappuccino

Mix 1/3 espresso and 1/3 of heated milk, then finish with 1/3 of creamy milk foam spooned over top.

Chai tea latte

Add 1/4 cup of heated and foamed milk to spiced masala chai (with sugar and spices). Top with ground nutmeg or cinnamon.

Flat white

Pour a double shot of espresso into the cup, then add heated milk to fill the cup and add a dollop of foam to the top layer.

Iced coffee/cold brew/iced chocolate

Mix cold, foamed milk with coffee or cold brew and top with ice cream, whipped cream, and chocolate chips.

CARE, CLEANING AND STORAGE

Your Instant Magic Froth pitcher and whisk should be cleaned after each use to avoid any residue buildup. Unplug the frother's power cord from the power outlet and let it cool to room temperature before cleaning. Never use metal scouring pads, abrasive powders, or harsh chemical detergents on any of the frother's parts.

Let all parts dry thoroughly before each use and before storage.

Parts and accessories	Cleaning methods and instructions
Pitcher, lid and whisk	Can be removed and washed by hand with dish soap and warm water or placed in the top rack of a dishwasher.
Frother base	Use a soft damp cloth to clean the outside of the frother and control panel.
Power cord	DO NOT fold power cord when storing.

Be careful: The frother contains electrical components.

To avoid fire, electric shock, other personal injury and/or property damage:

- DO NOT rinse or immerse the frother base, power cord or plug in water or other liquids.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Milk is not frothing	The frothing whisk is not installed correctly.	<ul style="list-style-type: none">• Remove the liquid from the pitcher.
		<ul style="list-style-type: none">• Position the square end of the frother whisk over the rod at the bottom of the pitcher and push down until it is secure.
	Milk is too hot.	<ul style="list-style-type: none">• Use cold, freshly opened milk.
		<ul style="list-style-type: none">• Do not re-foam already heated milk. Try a different kind of milk. See "Types of Milk" on page 14 for suggestions.
	Adding dense ingredients like thick syrups can reduce the amount of foam produced.	<ul style="list-style-type: none">• Consider adding these ingredients to the heated milk after frothing instead.
	The inside of the pitcher or the frothing paddle contains milk residue.	<ul style="list-style-type: none">• Clean the pitcher and frothing whisk. See "Care, Cleaning and Storage" instructions on page 16.

	Different types and brands of milk and dairy-free milk alternatives may froth differently.	<ul style="list-style-type: none"> • See “Types of Milk” on page 14 to experiment with different milks.
Milk is not heating	The temperature setting is not correct.	<ul style="list-style-type: none"> • Make sure the pitcher is correctly positioned on the frother base.
		<ul style="list-style-type: none"> • Increase the heating temperature setting by
		pressing the button and selecting a higher temp option.
Problem	Possible Cause	Solution
Ingredients are not melting	Ingredients were added before the milk was heated.	<ul style="list-style-type: none"> • For best results, warm milk to desired temperature then add ingredients/chocolate.
	Ingredients were too large to melt.	<ul style="list-style-type: none"> • Keep the ingredients cut into small pieces — less than 1/2 inch diameter.
Milk is burned	Milk is not whisking/ frothing/stirring correctly.	<ul style="list-style-type: none"> • Make sure the frothing whisk is correctly installed in the pitcher. Position the square end of the frother whisk over the rod at the bottom of the pitcher and push down until it is secure.
	The pitcher was not cleaned after last use and the milk residue has scorched.	<ul style="list-style-type: none"> • Always clean the pitcher and whisk thoroughly after each use for best results.
All four LEDs blink repeatedly	The unit is defective or damaged.	<ul style="list-style-type: none"> • Contact Customer Care.
Frother is overflowing with milk/foam	There was too much milk added for the foam setting.	<ul style="list-style-type: none"> • Do not add milk beyond the MAX level markings on the frothing pitcher. See “Milk Measurements” guide on page 12.

LEARN MORE

There's a whole world of Instant Magic Froth information and help just waiting for you. Here are some of the most helpful resources.

Register your product

[Instanthome.com/register](https://instanthome.com/register)

Contact Consumer Care

In the Instant Brands Connect App

[Instanthome.com/customer-care-center](https://instanthome.com/customer-care-center)

support@instanthome.com

Instant Brands® Connect App

[Instanthome.com](https://instanthome.com)

iOS and Android app stores

Replacement parts and accessories

[Instanthome.com](https://instanthome.com)

Join the community



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
MFM- 2000	17oz / 502 mL pitcher	600 W	120V/ 60Hz	2.2 lb 1 kg	in: 7.44 L x 5.98 W x 6.59 H cm: 18.9 L X 15.2 W X 16.75 H

WARRANTY

One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Instant Brands LLC ("Instant Brands") by the original appliance owner and is not transferable. Proof of original purchase date and, if requested by Instant Brands, return of your appliance, is required to obtain service under this Limited Warranty. Provided the appliance was used in accordance with the use & care instructions, Instant Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire twelve (12) months from the date of receipt. Failure to register your product will not reduce your warranty rights. The liability of Instant Brands, if any, for any allegedly defective appliance or part will not exceed the purchase price of a comparable replacement appliance.

What is not covered by this warranty?

- Products purchased, used, or operated outside of the United States and Canada.
- Products that have been modified or attempted to be modified.
- Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God, or repair by anyone unless directed by an Instant Brands representative.
- Use of unauthorized parts and accessories.
- Incidental and consequential damages.
- The cost of repair or replacement under these excluded circumstances.

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, INSTANT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for: (1) the exclusion of implied warranties of merchantability or fitness; (2) limitations on how long an implied warranty lasts; and/or (3) the exclusion or limitation of incidental or consequential damages; so these limitations may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law. The limitations of warranties, liability, and remedies apply to the maximum extent permitted by law. This limited

warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Product Registration

Please visit www.instanthome.com/register to register your new Instant Brands appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain warranty service, please contact our Consumer Care Department by email to support@instanthome.com. You can also create a support ticket online at www.instanthome.com. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

In Canada, distributed by Instant Brands Inc.

400-1565 Carling Avenue Ottawa, ON K1Z 8R1

In U.S., distributed by

Instant Brands LLC

3025 Highland Parkway, Suite 700 Downers Grove, IL 60515 U.S.

instanthome.com

© 2023 Instant Brands

140-3457-01

Art release date

05/25/2023

INSTANT and INSTANT BRANDS are registered trademarks of Instant Brands

DOWNLOAD

Instant MagicFroth 9-in-1 Coffee Makers User Manual – [[Download PDF](#)]

References

- [User Manual](#)