



Instant Pot Pro Plus Multi-Use Pressure Cooker User Manual

[Home](#) » [Instant](#) » Instant Pot Pro Plus Multi-Use Pressure Cooker User Manual 

Contents

- [1 Instant Pot Pro Plus Multi-Use Pressure Cooker User Manual](#)
- [2 Welcome!](#)
- [3 Product Specifications](#)
- [4 IMPORTANT SAFEGUARDS](#)
- [5 Product, parts and accessories](#)
 - [5.1 Top of lid](#)
 - [5.2 Bottom of lid](#)
 - [5.3 Cooking pot](#)
 - [5.4 Multicooker base](#)
- [6 Get started](#)
 - [6.1 Initial set up](#)
- [7 CAUTION](#)
- [8 References](#)
- [9 Related Posts](#)

Instant Pot Pro Plus Multi-Use Pressure Cooker User Manual



INSTANT POT® PRO PLUS USER MANUAL

Welcome!

Thank you for purchasing your new Instant Pot® Pro Plus Multi-Use Pressure Cooker. We hope you enjoy cooking with it for years to come.







Register your product

Help us keep in touch, in case we need to reach you.
Register at <https://www.instanthome.com/register>.

Contact Us

When you have questions about your new Instant Pot, we're here to help.
support@instanthome.com
[instanthome.com](https://www.instanthome.com)

Product Specifications

				
Model: Pro Plus 60	120 V ~ 60 Hz	1200 W	6 Quarts / 5.7 Litres	15.54 lb / 7.05 kg
	Pro Plus 60			
	in: 13.18L x 13.03W x 12.7H cm: 33.5L x 33.1W x 32.3H			

Find your model name and serial number

Find the model name on the silver rating label on the back of the multicooker base, near the power cord. The serial number is located on a white sticker beside the rating label.

IMPORTANT SAFEGUARDS

At Instant Brands® your safety always comes first. The Instant Pot® Pro Plus was designed with your safety in mind, and we mean business. Check out this Instant Pot's long list of safety mechanisms on [instanthome.com](https://www.instanthome.com) to see what we mean.

As always, be cautious when using electrical appliances and follow basic safety precautions.

01. READ ALL INSTRUCTIONS, SAFEGUARDS AND WARNINGS BEFORE USE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE.

02. Use only the Instant Pot Pro Plus lid with the Instant Pot Pro Plus multicooker base. Using any other pressure cooker lids may cause personal injury and/or property damage.

03. For household use only. NOT for commercial use. DO NOT use the appliance for anything other than its intended use.

04. For countertop use only. Always operate the appliance on a stable, noncombustible, level surface.

- DO NOT place on anything that may block the vents on the bottom of the appliance.
- DO NOT place on a hot stove.

05. Heat from an external source will damage the appliance.

- DO NOT place the appliance on or close to a hot gas or electric burner, or a heated oven.
- DO NOT use the appliance near water or flame.
- DO NOT use outdoors. Keep out of direct sunlight.

06. DO NOT touch the appliance's hot surfaces. Only use the side handles for carrying or moving.

- DO NOT move the appliance when it is under pressure.
- DO NOT touch accessories during or immediately after cooking.
- DO NOT touch the metal portion of the lid when the appliance is in operation; this could result in personal injury.
- Always use proper hand protection when removing hot accessories, and to handle the hot cooking pot.
- Always place hot accessories on a heat-resistant surface or cooking plate.

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious personal injury or property damage.

07. The removable cooking pot can be extremely heavy when full of ingredients. Care should be taken when lifting the cooking pot from the multicooker base to avoid burn and/or personal injury.

- Extreme caution must be used when the cooking pot contains hot food, hot oil or other hot liquids.

- DO NOT move the appliance while it is in use and use extreme caution when disposing of hot grease.

08. Overfilling may cause a risk of clogging the steam release pipe and developing excess pressure.

- DO NOT fill over the Max PC Fill line as indicated on the cooking pot.
- DO NOT fill the cooking pot over the Half Fill line (as indicated on the cooking pot) when cooking foods that expand during cooking such as rice or dried vegetables.

09. This appliance cooks under pressure. Any pressure in the appliance can be hazardous. Allow the appliance to depressurize naturally or release all excess pressure before opening. Inappropriate use may result in burns, personal injury and/or property damage.

- Make sure the appliance is properly closed before operating. Refer to Pressure control features: pressure cooking lid.
- DO NOT cover or obstruct the steam release valve and/or float valve with cloth or other objects.
- DO NOT attempt to open the appliance until it has depressurized, and all internal pressure has been released. Attempting to open the appliance while it is still pressurized may lead to sudden release of hot contents and may cause burns or other personal injuries.
- DO NOT place your face, hands or exposed skin over the steam release valve or float valve when the appliance is in operation or has residual pressure.
- DO NOT lean over the appliance when removing the lid, as heat and steam escape when the lid is removed.
- The unit keeps releasing steam for non-pressure settings in order to avoid pressure building inside the cooking pot.
- If steam escapes from the sides of the lid, turn the appliance off and wait for it to depressurize and cool, and make sure the sealing ring is properly installed. Refer to Pressure control features: sealing ring.
- DO NOT attempt to force the lid off the Instant Pot multicooker base.
Refer to Releasing pressure.

10. When cooking meat with skin (e.g. sausage with casing), the skin can swell when heated. DO NOT pierce the skin while it is swollen; this could result in scalding personal injury.

11. When pressure cooking food with a doughy or thick texture, or a high fat/oil content, contents may splatter when opening the lid. Follow recipe instructions for pressure release method. Refer to Releasing pressure.

12. Oversized foods and/or metal utensils must not be inserted into the cooking pot as they may cause risk of fire and/or personal injury and property damage.

13. Proper maintenance is recommended before and after each use:

- Check the steam release valve, steam release pipe, anti-block shield and float valve for clogging;
- Before inserting the cooking pot into the multicooker base, make sure both parts are dry and free of food debris;
- Let the appliance cool to room temperature before cleaning or storage.

14. DO NOT use this appliance for deep frying or pressure frying with oil.

15. To disconnect, select Cancel, then remove plug from power source.

Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

16. Regularly inspect the appliance and power cord. DO NOT operate the appliance if the power cord or plug is

damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by support@instanthome.com or by phone at 1-800-828-7280.

17. Spilled food can cause serious burns. A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

- DO NOT let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.
- DO NOT use below-counter power outlets, and never use with an extension cord.
- Keep the appliance and cord away from children.

18. DO NOT use any accessories or attachments not authorized by Instant Brands LLC. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of personal injury, fire or electric shock, and property damage.

- To reduce the risk of pressure leakage, cook only in an authorized stainless-steel Instant Brands cooking pot made for this model.
- DO NOT use the appliance without the removable cooking pot installed.
- To prevent personal injury and property damage to the appliance, only replace the sealing ring with an authorized Instant Brands sealing ring.

19. DO NOT attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or personal injury, property damage, and will void the warranty.

20 DO NOT tamper with any of the safety mechanisms, as this may result in personal injury or property damage.

21 The multicooker base contains electrical components. To avoid electrical shock:

- DO NOT put liquid of any kind into multicooker base;
- DO NOT immerse power cord, plug or the appliance in water or other liquid;
- DO NOT rinse the appliance under tap.

22. DO NOT use the appliance in electrical systems other than 120 V ~ 60 Hz for North America. DO NOT use with power converters or adapters.

23. This appliance is NOT to be used by children or by persons with reduced physical, sensory or mental capabilities. Close supervision is necessary when any appliance is used near children and these individuals. Children should not play with this appliance.

24. DO NOT leave the appliance unattended while in use. Never connect this appliance to an external timer switch or separate remote-control system.

25. DO NOT store any materials in the multicooker base or cooking pot when not in use.

26. DO NOT place any combustible materials in the multicooker base or cooking pot, such as paper, cardboard, plastic, Styrofoam or wood.

27. The cooking pot is compatible with electric/gas stoves, induction heating, and oven up to 400°F. DO NOT use the included accessories in a microwave, toaster oven, ceramic cooktop, electric coil or outdoor grill.

SAVE THESE INSTRUCTIONS.

WARNING

To avoid property damage and personal injury, read and understand the instructions in this user manual before attempting to use this appliance.

WARNING

Electrical shock hazard. Use grounded outlet only.

- DO NOT remove ground.
- DO NOT use an adapter.
- DO NOT use an extension cord.

Failure to follow these instructions may result in electric shock and/or serious personal injury, and property damage

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious personal injury or property damage.

WARNING

THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND/OR THE INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS PERSONAL INJURY AND PROPERTY DAMAGE.

Special cord set instructions

Per safety requirement, a short power supply cord is provided to reduce the hazards resulting from entanglement or tripping.

This appliance has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded electrical outlet that is easily accessible.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

SAVE THESE INSTRUCTIONS.

Contains FCC ID: 2AC7Z-ESPWROOM32D

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious personal injury or property damage.

 
 
Product, parts and accessories


Before using your new Instant Pot Pro Plus, make sure everything is accounted for, then see Care, cleaning and storage: Removing and installing parts to find out how everything fits together.

Top of lid

Top of lid


Steam release assembly

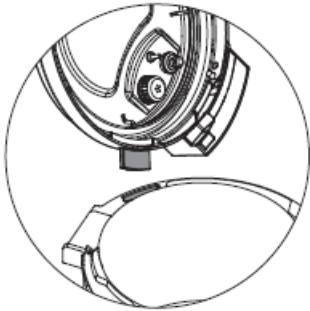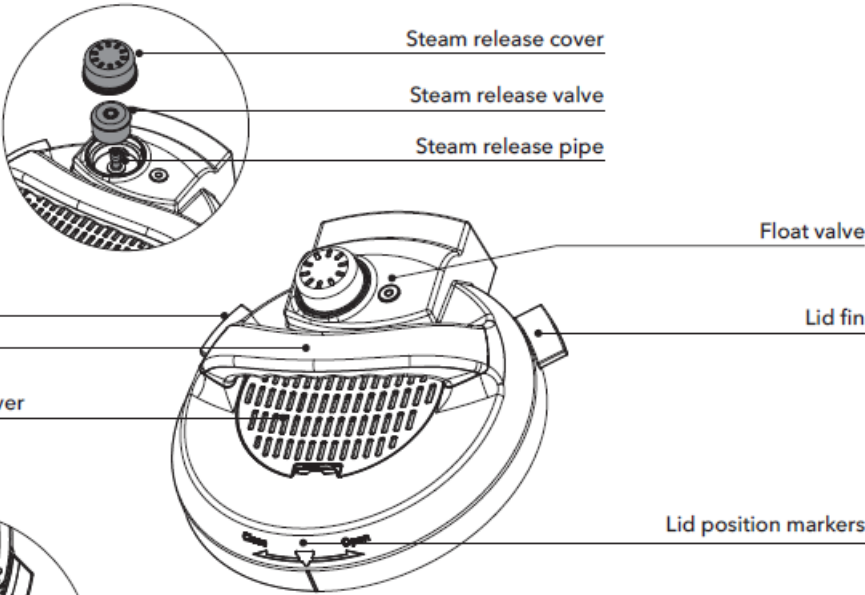

 **Instant Tip:** Stand the pressure cooking lid up to keep it off your countertop. Insert the left or right lid fin into corresponding lid holders on the base to stand it up and save some space!

Bottom of lid

 Bottom of lid

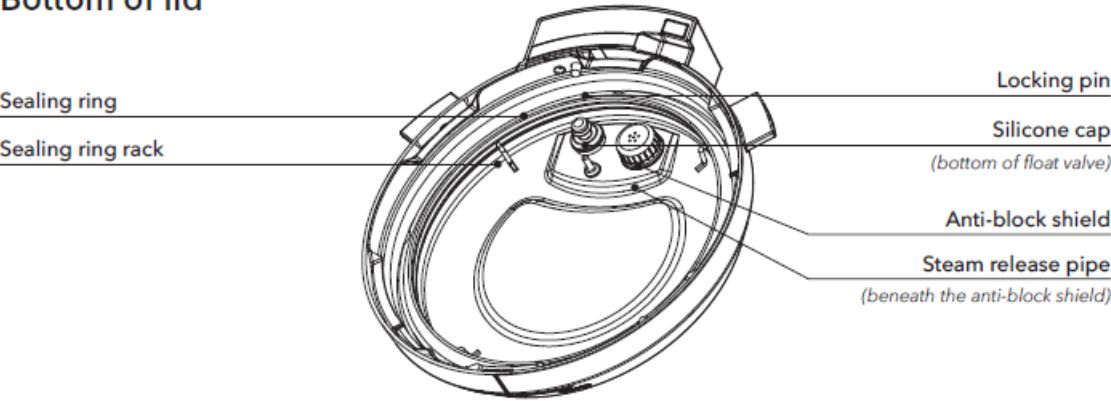

Always refer to the actual product.

 
Cooking pot

Cooking pot

Easy Grab silicone handles

Fill line indicators

Flat bottom

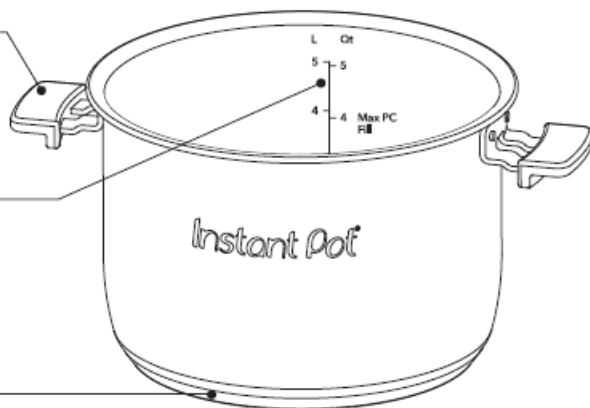

Instant Tip: Stove top and oven-friendly up to 400°F! The cooking pot features a cookware-grade impact bonded tri-ply bottom, which sounds complicated, but really just means you can use it just about anywhere — from the multicooker base to any electric, ceramic, gas or induction cooktop.

Multicooker base

Multicooker base

Outer pot

Condensation rim

Control panel

Black stainless-steel exterior

 
Lid holder

Condensation collector
(rear)


Multicooker handle

Heating element
(interior)


Cord holder
(rear)

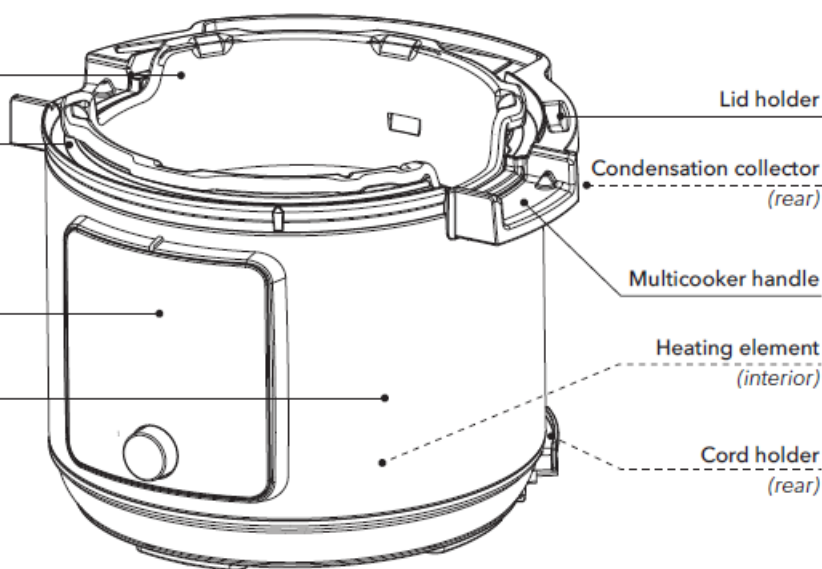

Accessories

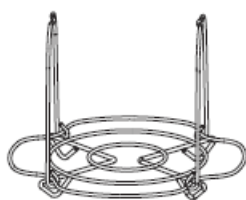 

Steam rack

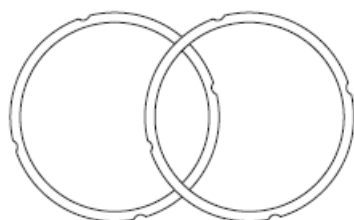 

Extra sealing ring

Illustrations in this document are for reference only and may differ from the actual product. Always refer to the actual product.

Get started

Initial set up

01. Pull that Instant Pot Pro Plus out of the box!

02. Remove the packaging material and accessories from in and around the multicooker and make sure all the parts are accounted for. See Product, parts and accessories for a full parts breakdown.

Make sure to check under the cooking pot!

03. Wash the cooking pot in a dishwasher or with hot water and dish soap. Rinse it well with warm, clear water and use a soft cloth to thoroughly dry the outside of the cooking pot.

04. Wipe the heating element with a soft, dry cloth to make sure there are no stray packaging particles left in the multicooker base.

Don't remove the safety warning stickers from the lid (unless specified on the sticker!) or the labels from the back of the multicooker base.

05. You may be tempted to put the Pro Plus on your stovetop — but don't do it! Place the multicooker base on a stable, level surface, away from combustible material and external heat sources.

Is something missing or damaged?

Get in touch with a Customer Care Advisor by email at support@instanthome.com and we'll happily make some magic happen for you!

CAUTION

- Read the Important safeguards before using the appliance. Failure to read and follow those instructions for safe use may result in damage to the appliance, property damage or personal injury.
- DO NOT place the appliance on a stovetop or another appliance. Heat from an external source will damage the appliance.
- To avoid risk of property damage and/or personal injury, DO NOT place anything on top of the appliance, and DO NOT cover or block the steam release assembly or anti-block shield, located on the appliance lid.

References

- [User Manual](#)