



## Instant Pot Viva V3 Multi-Use Pressure Cooker User Manual

[Home](#) » [Support](#) » Instant Pot Viva V3 Multi-Use Pressure Cooker User Manual 

### Contents

- [1 Instant Pot Viva V3 Multi-Use Pressure Cooker User Manual](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 Special cord set instructions](#)
- [4 Product specifications](#)
- [5 References](#)
- [6 Related Posts](#)

**Instant Pot Viva V3 Multi-Use Pressure Cooker User Manual**



## DUO VIVA MULTI-USE PRESSURE COOKER

Download the Instant Pot app with  
1000+ recipes at [instantpot.com/app](https://instantpot.com/app).



### IMPORTANT SAFEGUARDS

(Yes, we have to)

At Instant Brands™ your safety always comes first. The Instant Pot® Duo Viva was designed with your safety in mind, and we mean business. Check out this Instant Pot's long list of safety mechanisms to see what we mean.

As always, be careful when using electrical appliances and follow basic safety precautions.

01. READ ALL INSTRUCTIONS, SAFEGUARDS AND WARNINGS BEFORE USE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.
02. Use only the Instant Pot Duo Viva lid with the Instant Pot Duo Viva multicooker base. Using any other pressure cooker lids may cause injury and/or damage.
03. For household use only. Not for commercial use. DO NOT use the appliance for anything other than its

intended use.

04. For countertop use only. Always operate the appliance on a stable, non-combustible, level surface.

- DO NOT place on anything that may block the vents on the bottom of the appliance.
- DO NOT place on a hot stove.

05. Heat from an external source will damage the appliance.

- DO NOT place the appliance on or close to a hot gas or electric burner, or a heated oven.
- DO NOT use the appliance near water or flame.
- DO NOT use outdoors. Keep out of direct sunlight.

06. DO NOT touch the appliance's hot surfaces. Only use the side handles for carrying or moving.

- DO NOT move the appliance when it is under pressure.
- DO NOT touch accessories during or immediately after cooking.
- DO NOT touch the metal portion of the lid when the appliance is in operation; this could result in injury.
- Always use hand protection when removing accessories, and to handle the inner pot.
- Always place hot accessories on a heat-resistant surface or cooking plate.

07. The removable inner pot can be extremely heavy when full of ingredients. Care should be taken when lifting the inner pot from the multicooker base to avoid burn injury.

- Extreme caution must be used when the inner pot contains hot food, hot oil or other hot liquids.
- DO NOT move the appliance while it is in use and use extreme caution when disposing of hot grease.

08. Overfilling may cause a risk of clogging the steam release pipe and developing pressure, which may result in burns, injury, and/or property damage.

- DO NOT fill over PC MAX — 2/3 as indicated on the inner pot.
- DO NOT fill the inner pot over — 1/2 line when cooking foods that expand during cooking such as rice or dried vegetables.

09. This appliance cooks under pressure. Any pressure in the appliance can be hazardous. Allow the appliance to depressurize naturally or release all excess pressure before opening. Inappropriate use may result in burns, injury and/or property damage.

- Make sure the appliance is properly closed before operating.  
Refer to Pressure control features: pressure cooking lid.
- DO NOT cover or obstruct the steam release valve and/or float valve with cloth or other objects.
- DO NOT attempt to open the appliance until it has depressurized, and all internal pressure has been released.  
Attempting to open the appliance while it is still pressurized may lead to sudden release of hot contents and may cause burns or other injuries.
- DO NOT place your face, hands or exposed skin over the steam release valve or float valve when the appliance is in operation or has residual pressure, and do not lean over the appliance when removing the lid.
- Turn the appliance off if steam escapes from the steam release valve and/or float valve in a steady stream for

longer than 3 minutes.

- If steam escapes from the sides of the lid, turn the appliance off and make sure the sealing ring is properly installed. Refer to Pressure control features: sealing ring.
- DO NOT attempt to force the lid off the Instant Pot multicooker base.  
Refer to Releasing pressure.

10. When cooking meat with skin (e.g. sausage with casing), the skin can swell when heated. Do not pierce the skin while it is swollen; this could result in scalding injury.

11. When pressure cooking food with a doughy or thick texture, or a high fat/oil content, contents may splatter when opening the lid. Follow recipe instructions for pressure release method. Refer to Releasing pressure.

12. Oversized foods and/or metal utensils must not be inserted into the inner pot as they may cause risk of fire and/or personal injury.

13. Proper maintenance is recommended before and after each use:

- Check the steam release valve, steam release pipe, anti-block shield and float valve for clogging.
- Before inserting the inner pot into the multicooker base, make sure both parts are dry and free of food debris.
- Let the appliance cool to room temperature before cleaning or storage.

14. DO NOT use this appliance for deep frying or pressure frying with oil.

15. If the power cord is detachable, always attach the plug to the appliance first, then plug the cord into the wall outlet. To turn off, press Cancel, then remove the plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet.

Never pull from the power cord.

16. Regularly inspect the appliance and power cord. Do not operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email, chat, or by phone at 1-800-828-7280.

17. Spilled food can cause serious burns. A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

- DO NOT let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.
- DO NOT use below-counter power outlets, and never use with an extension cord.
- Keep the appliance and cord away from children.

18. DO NOT use any accessories or attachments not authorized by Instant Brands Inc. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of injury, fire or electric shock.

- To reduce the risk of pressure leakage, cook only in an authorized stainless-steel Instant Pot inner pot.
- DO NOT use the appliance without the removable inner pot installed.
- To prevent personal injury and damage to the appliance, only replace the sealing ring with an authorized Instant Pot sealing ring.

19. DO NOT attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.

20. DO NOT tamper with any of the safety mechanisms, as this may result in injury or property damage.

21. The multicooker base contains electrical components. To avoid electrical shock:

- DO NOT put liquid of any kind into multicooker base.
- DO NOT immerse power cord, plug or the appliance in water or other liquid.
- DO NOT rinse the appliance under tap.

22. DO NOT use the appliance in electrical systems other than 120 V~60 Hz for North America. Do not use with power converters or adapters.

23. This appliance is NOT to be used by children or by persons with reduced physical, sensory or mental capabilities. Close supervision is necessary when any appliance is used near children and these individuals. Children should not play with this appliance.

24. DO NOT leave the appliance unattended while in use. Never connect this appliance to an external timer switch or separate remote-control system.

25. DO NOT store any materials in the multicooker base or inner pot when not in use.

26. DO NOT place any combustible materials in the multicooker base or inner pot, such as paper, cardboard, plastic, Styrofoam or wood.

27. DO NOT use the included accessories in a microwave, toaster oven, convection or conventional oven, or on a ceramic cooktop, electric coil, gas range or outdoor grill.

## SAVE THESE INSTRUCTIONS.

## WARNING

Read this manual carefully and completely and retain for future reference.  
Failure to adhere to safety instructions may result in serious injury or damage.







## Special cord set instructions

Per safety requirement, a short power supply cord is provided to reduce the hazards resulting from entanglement and tripping.

This appliance has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded electrical outlet that is easily accessible.

## Product specifications

The tables below represent all available models in the 9-in-1 Duo Viva family. To view a full list of sizes, colors and patterns, go to [instantpot.com/viva](https://www.instantpot.com/viva).

					
Duo Viva 60 Black SS	1000 W	120 V ~ 60 Hz	5.7 Litres / 6 Quart	5.48 kg / 12.08 lbs.	cm: 33.5L x 31W x 31.7H in: 13.2L x 12.2W x 12.5H



















## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)