



Intel Corporation BE200D2 Intel WiFi Adapter Installation Guide

[Home](#) » [INTEL CORPORATION](#) » Intel Corporation BE200D2 Intel WiFi Adapter Installation Guide 

Contents

1 BE200D2 Intel WiFi Adapter

2 Documents / Resources



2.1 References

3 Related Posts







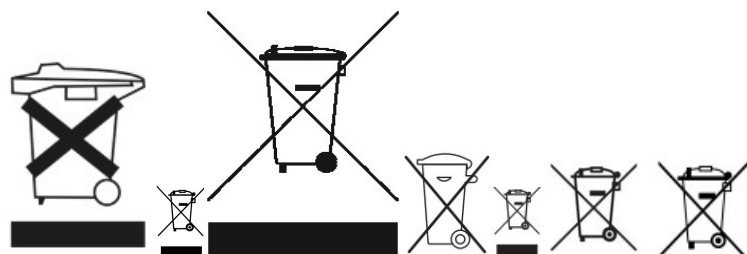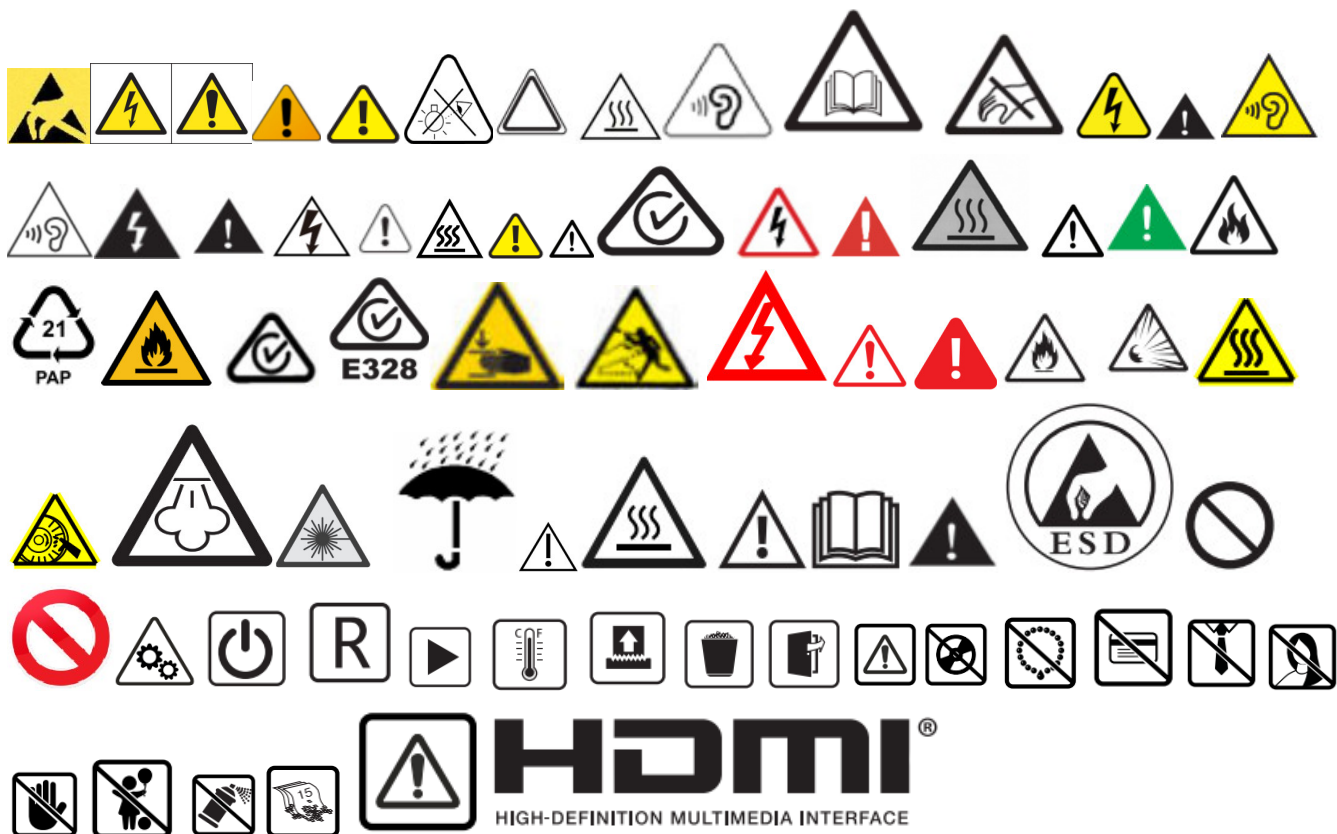



BE200D2 Intel WiFi Adapter













Indicator lamps			Remaining capacity
Lighted 	Off 	Blinking 	
			75% to 100%
			50% to 75%
			25% to 50%
			0% to 25%
			Charge the battery.
	 ↑ ↓ 		The battery may have malfunctioned.

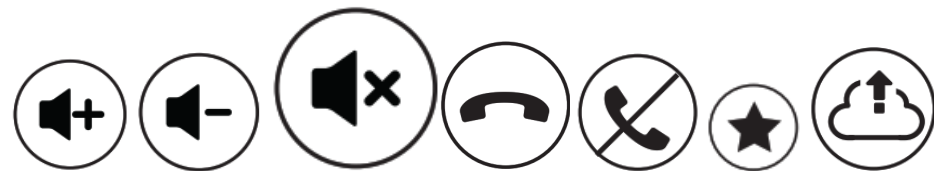

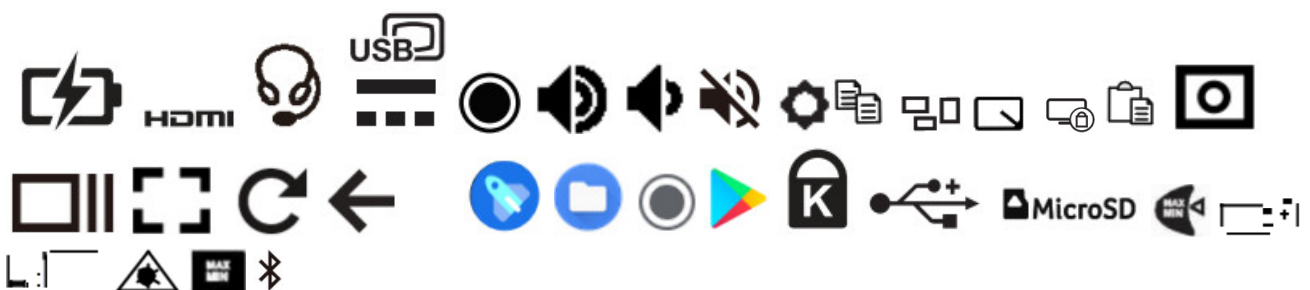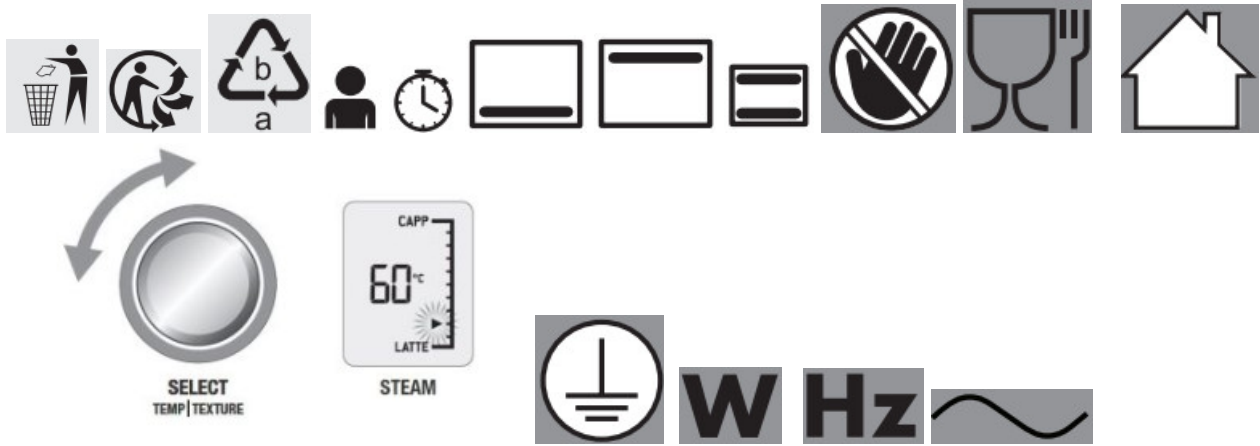

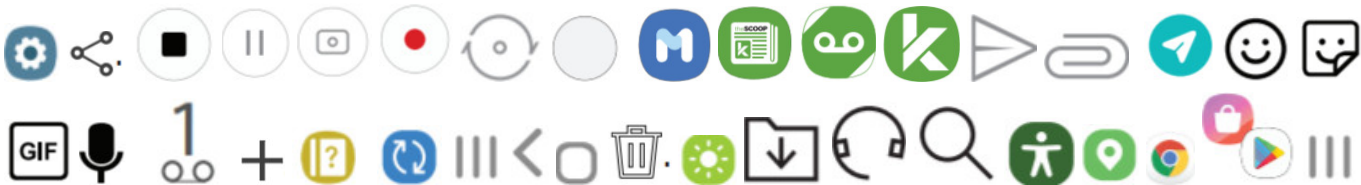

Documents / Resources

	Intel Corporation BE200D2 Intel WiFi Adapter [pdf] Installation Guide BE200D2 Intel WiFi Adapter, BE200D2, Intel WiFi Adapter, WiFi Adapter
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.