



# INTELLINET 561068 16 Port Gigabit Ethernet Switch Instructions

[Home](#) » [INTELLINET](#) » INTELLINET 561068 16 Port Gigabit Ethernet Switch Instructions 

## Contents

- [1 INTELLINET 561068 16 Port Gigabit Ethernet Switch](#)
- [2 Connections & Indicators](#)
- [3 Placement
  - \[3.1 Desktop\]\(#\)
  - \[3.2 Rackmount\]\(#\)](#)
- [4 WASTE ELECTRICAL & ELECTRONIC EQUIPMENT](#)
- [5 WARRANTY INFORMATION](#)
- [6 REGULATORY STATEMENTS](#)
- [7 Documents / Resources
  - \[7.1 References\]\(#\)](#)
- [8 Related Posts](#)



## INTELLINET 561068 16 Port Gigabit Ethernet Switch



## Connections & Indicators



## LEDs

The LED indicators make it easier to monitor the switch and its connections.

LED	Color	Status	Status Description
PWR	Green	Off	Power Off
		On	Power On
LNK/ ACT	Green	Off	No link established
		Flashing	Sending or receiving data
		On	Valid port connection

## Ports

All ports on the switch support Auto-MDI/MDI-X functionality, so crossover cables and uplink ports are not needed for connections to PCs, routers, other switches, etc. Cat5/5e/6 UTP/STP cables provide optimal performance; if a status LED doesn't indicate a link, check the corresponding device for proper setup and operation.

## Power (rear panel)

Use the included power cord to connect the device to an AC outlet. Confirm that the power LED (PWR) on the front panel is lit.

## Placement

### Desktop

Prior to use, it is recommended that the switch be placed/positioned:


- on a level surface that can support the weight of the switch
- with a minimum of 25 mm (approx. 1") of clearance on the top and sides for adequate ventilation
- away from sources of electrical noise: radios, transmitters, broadband amplifiers, etc.
- where it cannot be affected by excessive moisture

### Rackmount

The switch includes brackets and screws for optional rack mounting.

1. Disconnect any cables from the switch.
2. Position a bracket over the mounting holes on one side of the switch and secure it in place with screws.
3. Repeat Step 2 on the other side of the switch.
4. Position the switch in the rack and screw the brackets to the rack.

5. Reconnect any cables.

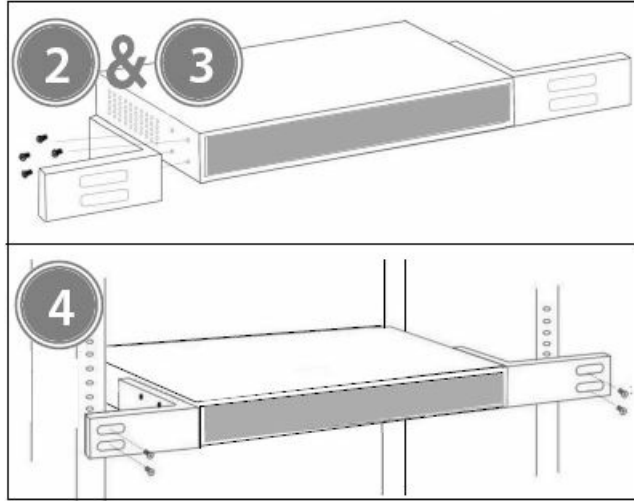

For specifications, visit [intellinetnetwork.com](http://intellinetnetwork.com). Register your product at [register.intellinet-network.com/r/561068](http://register.intellinet-network.com/r/561068) or scan the QR code on the cover.

**Scan to register your product warranty**



Or, go to: [register.intellinet-network.com/r/561068](http://register.intellinet-network.com/r/561068).

## WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

This symbol on the product or its packaging means that this product must not be treated as unsorted household waste. In accordance with EU Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), this electrical product must be disposed of in accordance with the user's local regulations for electrical or electronic waste. Please dispose of this product by returning it to your local point of sale or recycling pickup point in your municipality.

## WARRANTY INFORMATION

MÉXICO: Póliza de Garantía Intellinet Network Solutions — Datos del importador y responsable ante el consumidor IC Intracom México, S.A.P.I. de C.V. • Av. Interceptor Poniente # 73, Col. Parque Industrial La Joya, Cuautitlán Izcalli, Estado de México, C.P. 54730, México. • Tel. (55)1500-4500 [intellinetnetwork.com](http://intellinetnetwork.com).

## REGULATORY STATEMENTS

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense. Any changes or modifications made to this equipment without the approval of the manufacturer could result in the product not meeting the Class A limits, in which case the FCC could void the user's authority to operate the equipment.

This device complies with the requirements of CE 2014/30/EU and/or 2014/35/EU. The Declaration of Conformity for is available at: [support.intellinet-network.com/barcode/561068](https://support.intellinet-network.com/barcode/561068).

### North America

IC Intracom America 550 Commerce Blvd. Oldsmar, FL 34677 USA

### Asia & Africa


IC Intracom Asia 4-F, No. 77, Sec. 1, Xintai 5th Rd. Xizhi Dist., New Taipei City 221 Taiwan.

### Europe

IC Intracom Europe Löhbacher Str. 7, D-58553 Halver Germany.

All trademarks and trade names are the property of their respective owners. © IC Intracom. All rights reserved. Intellinet Network Solutions is a trademark of IC Intracom, registered in the U.S. and other countries.

## Documents / Resources

	<p><a href="#">INTELLINET 561068 16 Port Gigabit Ethernet Switch</a> [pdf] Instructions 561068, IES-16GD, 561068 16 Port Gigabit Ethernet Switch, 16 Port Gigabit Ethernet Switch, Gigabit Ethernet Switch, Ethernet Switch, Switch</p>
---	---

## References

- [Intellinet Network Solutions - Provider of PoE and Data Center Product – Intellinet Solutions](#)
- [DropCatch.com](#)
- [Intellinet Network Solutions Account and Product Registration](#)