



Interactive CS-3110 CueServer 3 Core DMX Lighting Control Unit User Guide

[Home](#) » [Interactive](#) » Interactive CS-3110 CueServer 3 Core DMX Lighting Control Unit User Guide 




Cue Server 3 Core (CS-3110)
Quick Start Guide




Contents

- [1 Hardware Overview](#)
- [2 What's in the Box](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

Hardware Overview

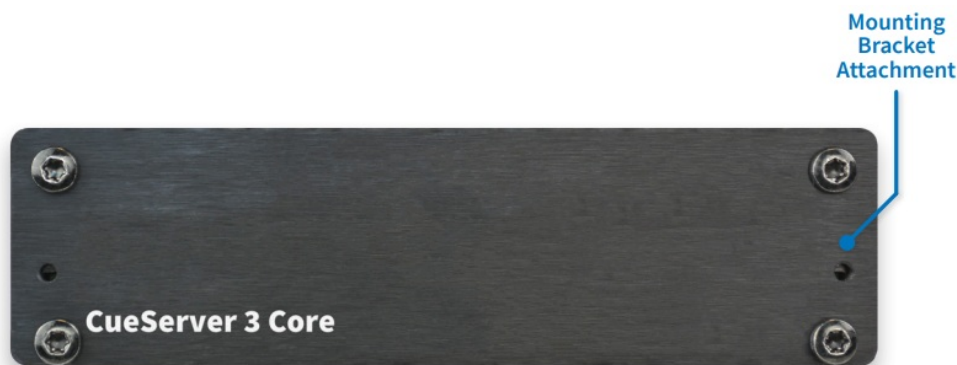

Front Panel

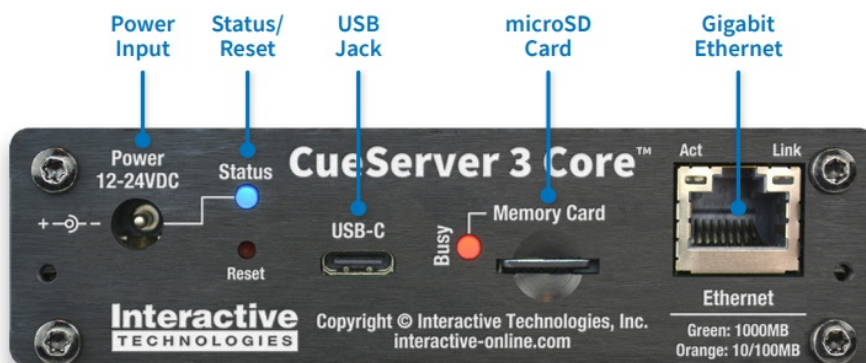

Rear Panel

What's in the Box

- CS-3110 Cue Server 3 Core Processor
- Power Supply

Startup Procedure

	• Connect Cue Server to the Network Use an Ethernet patch cable to connect Cue Server to your Ethernet Switch or directly to your computer.
	• Connect Cue Server to Power Use the included Power Supply with Cue Server.
	• Open Cue Server Studio on your Computer You can download Cue Server Studio from cueserver.com.
	• Cue Server should appear in the Navigator Window Cue Server Studio's main Navigator Window searches for and displays all Cue Servers found on the network.

What's Next

- Visit our Website for More

Our website contains more information, including User's Manual, Downloads, Guides, Examples, Training and more. You can start your Cue Server journey at: cueserver.com



Interactive Technologies, Inc.
5295 Lake Pointe Center Drive
Cumming, GA 30041 USA
1-678-455-9019

interactive-online.com

Specifications subject to change without notice.
Interactive Technologies is not responsible for errors or omissions.
All trademarks are the property of their respective
owners. Copyright © 2022-23,
Interactive Technologies, Inc.
All rights reserved worldwide.
D0551A 1/16/2023

Documents / Resources

	Interactive CS-3110 CueServer 3 Core DMX Lighting Control Unit [pdf] User Guide CS-3110 CueServer 3 Core DMX Lighting Control Unit, CS-3110, CueServer 3 Core DMX Light ing Control Unit, 3 Core DMX Lighting Control Unit, Lighting Control Unit, Control Unit
---	--

References

- cueserver.com
- interactive-online.com