




Interactive CS-3150 CueServer 3 Core DX User Guide

[Home](#) » [Interactive](#) » Interactive CS-3150 CueServer 3 Core DX User Guide 

Interactive CS-3150 CueServer 3 Core DX User Guide

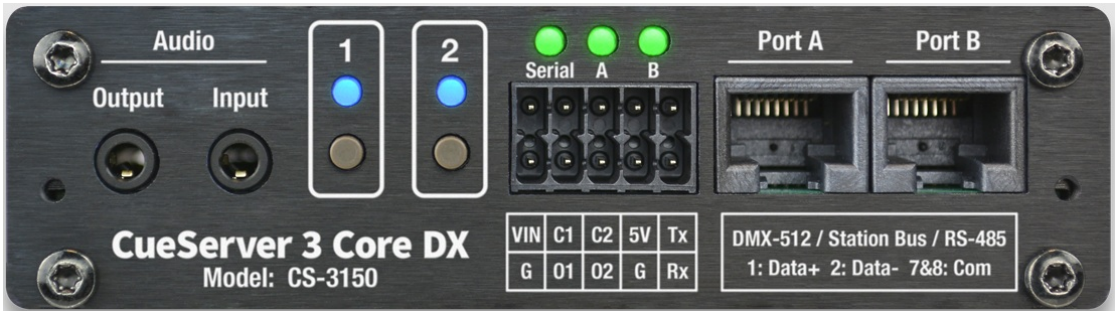

Contents


- [1 What's in the Box](#)
- [2 Hardware Overview](#)
- [3 Startup Procedure](#)
- [4 What's Next](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

What's in the Box


- CS-3150 CueServer 3 Core DX Processor
- 10-Position Removable Terminal Block
- Power Supply

Hardware Overview

Front Panel

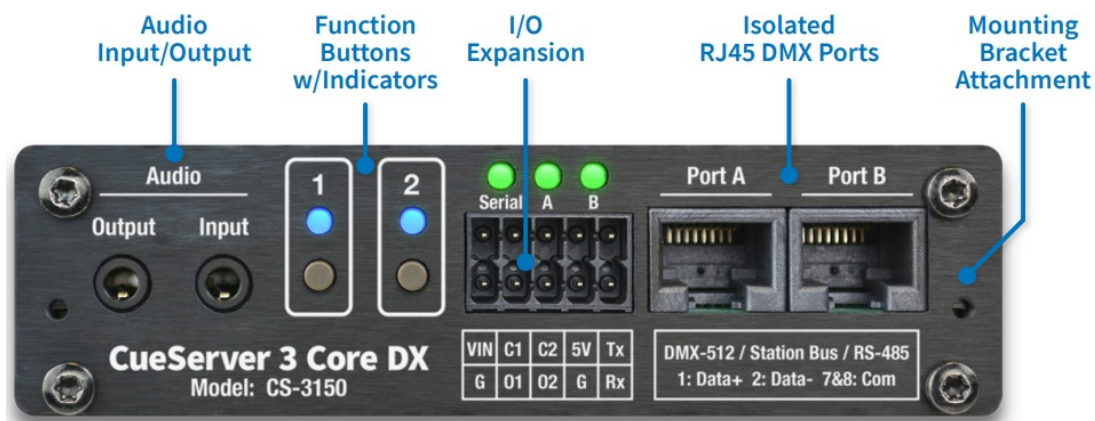

Rear Panel

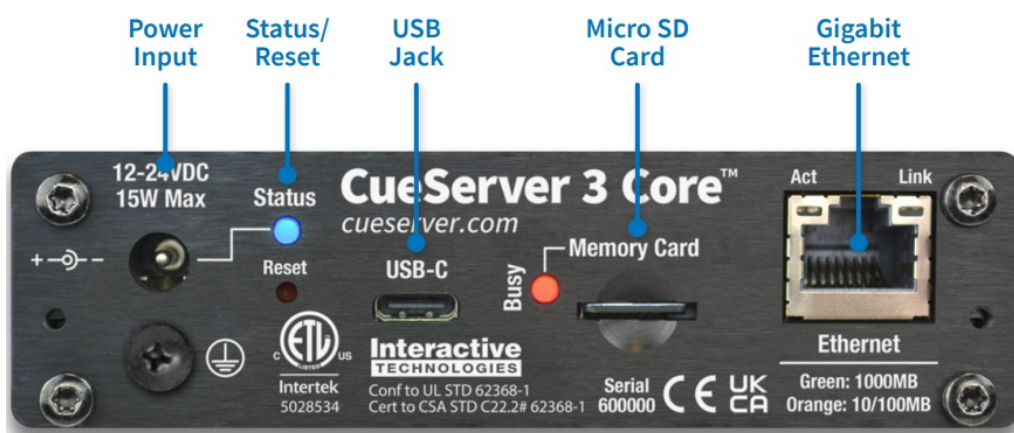

Startup Procedure



• Connect CueServer to the Network

Use an Ethernet patch cable to connect CueServer to your Ethernet Switch or directly to your computer



• Connect CueServer to Power

Use the included Power Supply with CueServer.



• Open CueServer Studio on your Computer

You can download CueServer Studio from cueserver.com.



• CueServer should appear in the Navigator Window

CueServer Studio's main Navigator Window searches for and displays all CueServers found on the network.

What's Next

• Visit our Website for More

Our website contains more information, including User's Manual, Downloads, Guides, Examples, Training and more. You can start your CueServer journey at: cueserver.com

Interactive Technologies, Inc.
5295 Lake Pointe Center Drive
Cumming, GA 30041 USA
1-678-455-9019
interactive-online.com

Specifications subject to change without notice. Interactive Technologies is not responsible for errors or omissions. All trademarks are the property of their respective owners.
Copyright © 2022-23, Interactive Technologies, Inc. All rights reserved worldwide.



Documents / Resources

	Interactive CS-3150 CueServer 3 Core DX [pdf] User Guide CS-3150 CueServer 3 Core DX, CS-3150, CueServer 3 Core DX, Core DX
---	--

References

- cueserver.com
- [User Manual](#)