



INTERCOAX R-01EUP T-01E Extender PoE and Ethernet Distance Long ,Speed-H Converters User Guide

[Home](#) » [INTERCOAX](#) » INTERCOAX R-01EUP T-01E Extender PoE and Ethernet Distance Long ,Speed-H Converters User Guide 

INTERCOAX R-01EUP T-01E Extender PoE and Ethernet Distance Long ,Speed-H Converters



Please read carefully the instruction manual before use.

 
Contents of this manual are subject to change without prior notice for reasons such as functionality enhancements.

Contents

- 1 Package
- 2 Hardware Overview
- 3 LED Indicators
- 4 Overview
- 5 Features
- 6 Installation Guide
- 7 Applications
- 8 Specification
- 9 Caution
- 10 Warranty
- 11 CUSTOMER SUPPORT
- 12 Documents / Resources
 - 12.1 References

Package

- EUP-01 T (Transmitter)
EUP-01 R (Receiver)

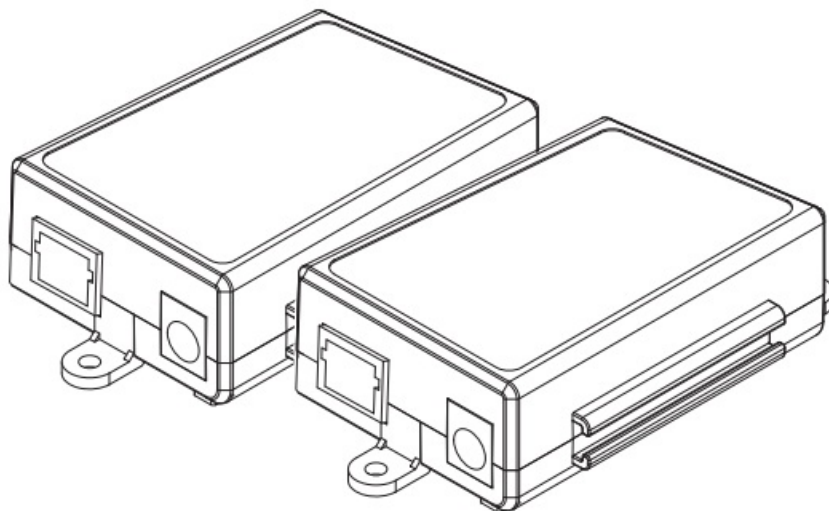


- Quick Start Guide




Hardware Overview

  
Right

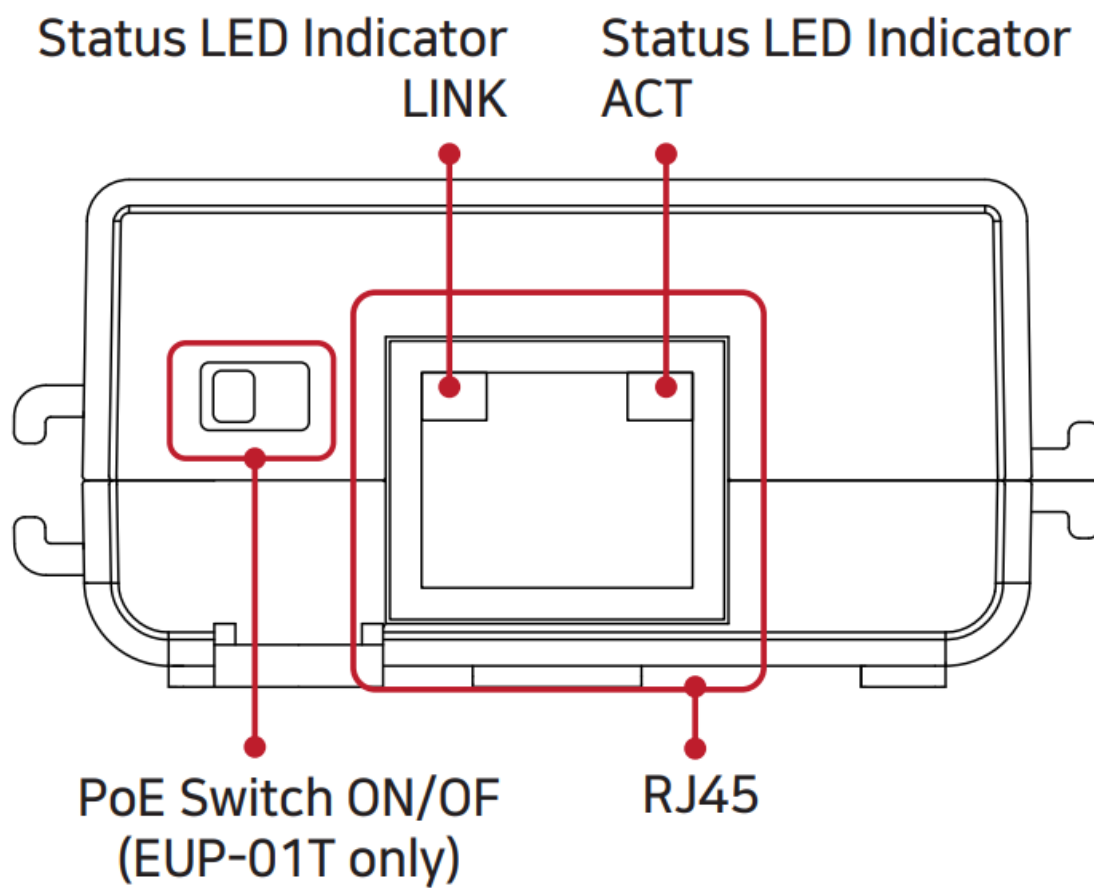

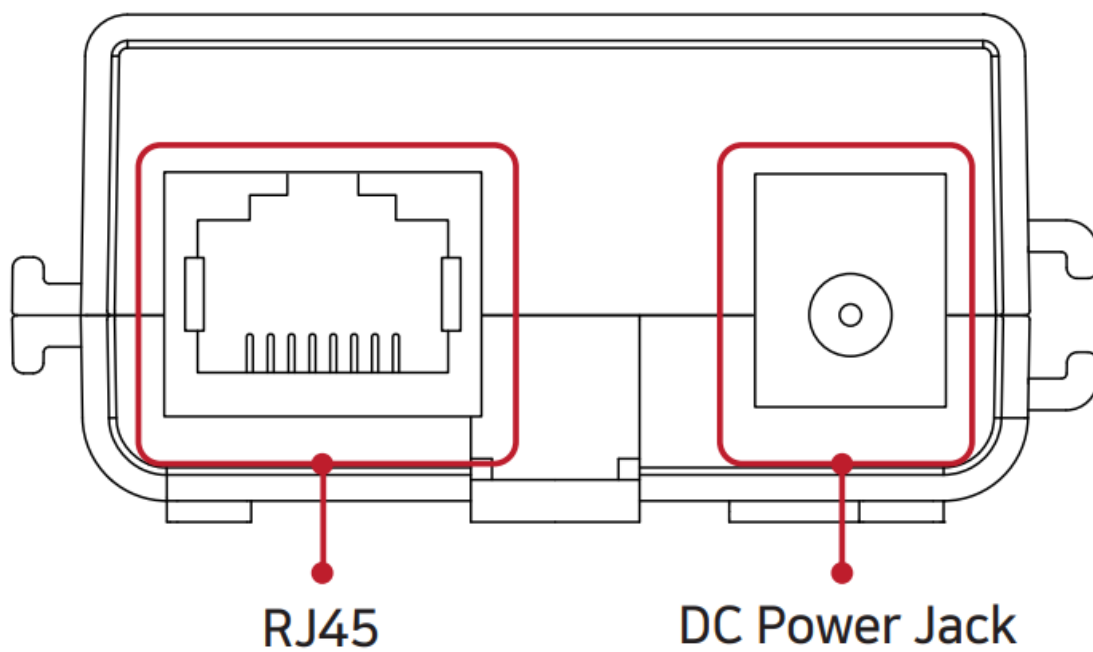

Left

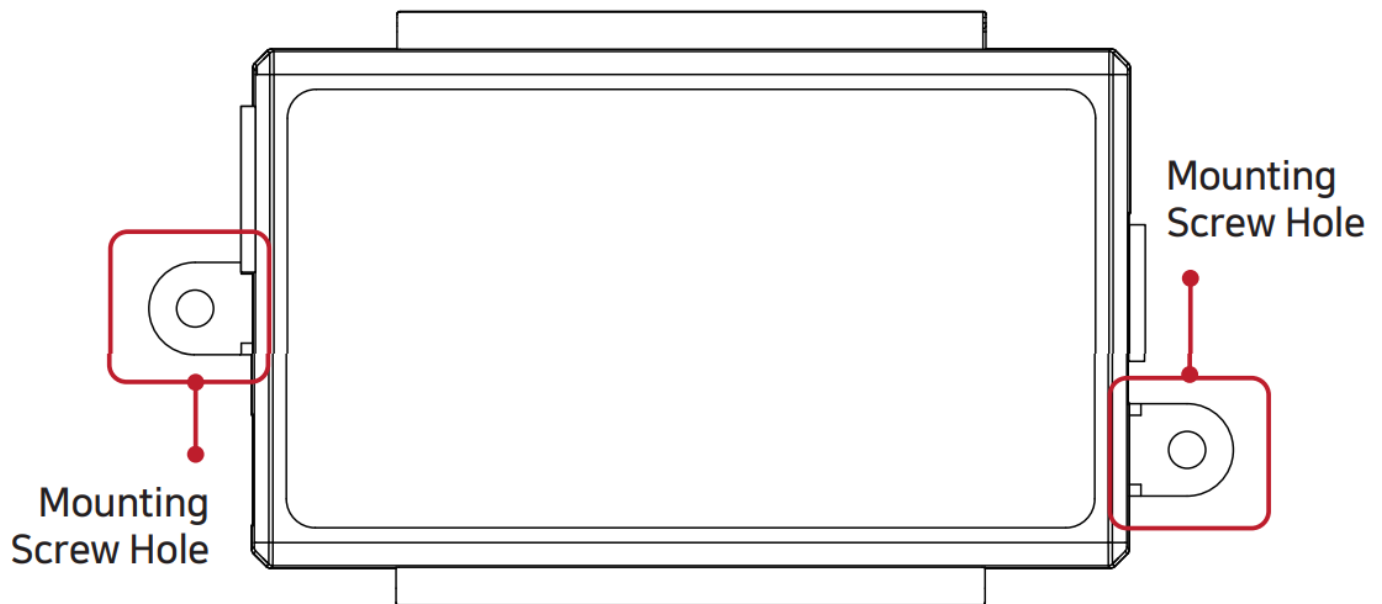 

Top



LED Indicators

Indicator	Color	Function
LINK		Ethernet Data Act
ACT		Ethernet Connect Act

Overview

EUP-01 Series are High-Speed, long distance Ethernet & PoE extender that makes possible to transmit the Ethernet signal and PoE up to 400m through UTP cable. It is cost-effective and time saving solution to migrate existing system to IP based system since EUP-01 series support easy installation utilizing the existing UTP cables. With long distance transmission feature, the device makes to overcome 100 meters distance limitation easily and reduces the construction cost significantly compared with fiber optic configuration.

 
Features

- Long reach Ethernet & PoE extension over UTP cable
- Data + Power over UTP cable
- Data & PoE distance up to 400m
- Data up to 1 00Mbps
- 1 00Mbps Full Duplex
- Multicast ready
- PoE, PoE+, Extra PoE (Max. 60W PoE output, EUP-01 T model only with DC Power adapter)
- PoE ON/OFF Switch (EUP-01 T on1ly)
- LED Indication (Data, Power)
- Plug & Play
- Built-in surge protection
- Support PoE, PoE+ Input (25.5W) from PoE Switch / PoE NVR

- Slim design


Installation Guide

1. Connect Ethernet cable (Cat5e or better) from PoE Switch/NVR to EUP-01 R. Check LEDs on EUP-01 R.

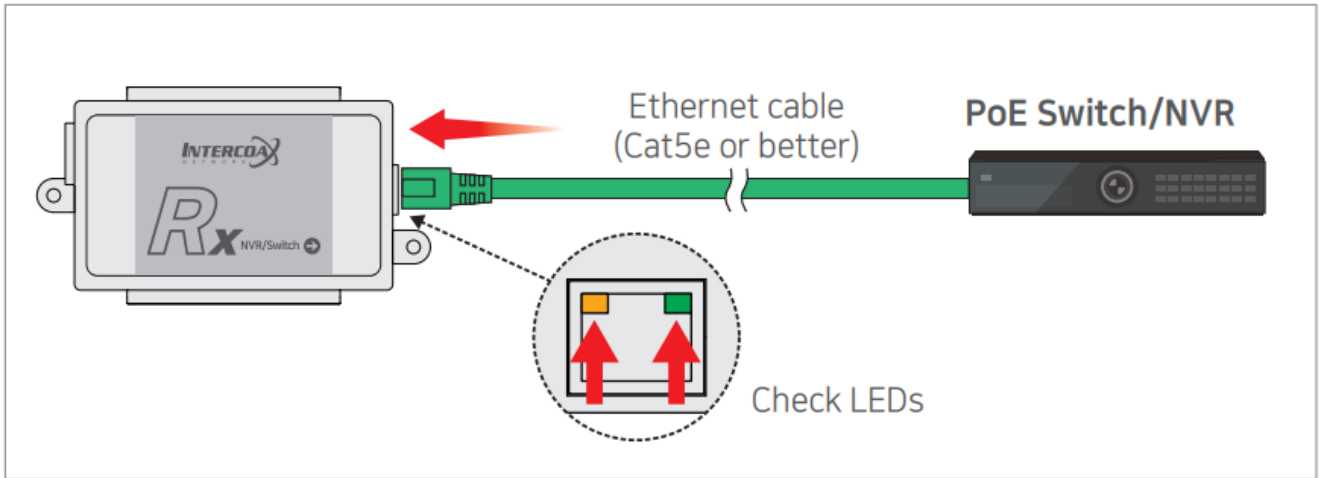

2. Connect Ethernet cable to EUP-01 R.

 
Connect Ethernet cable from EUP-01 R to EUP-01T.

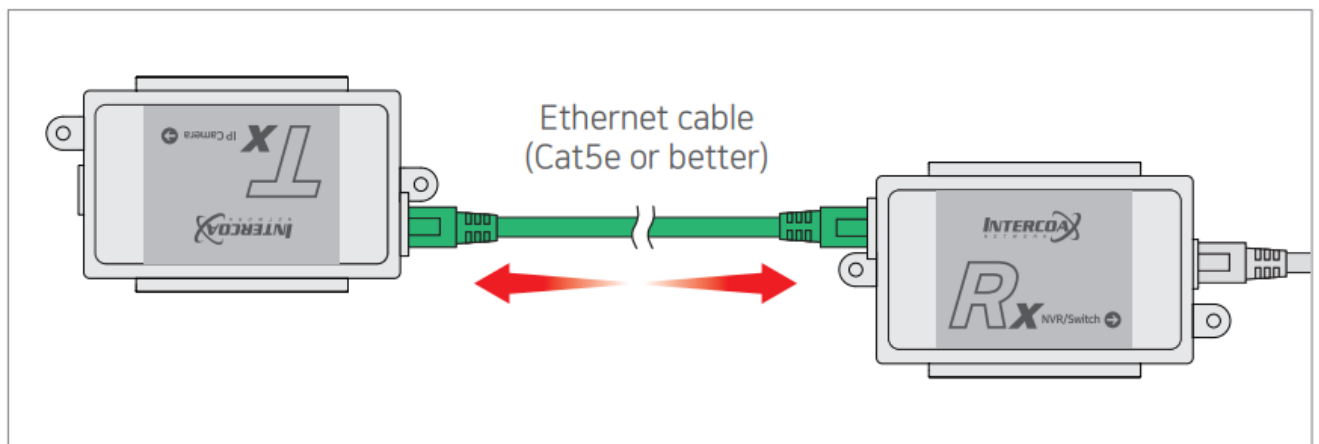

3. Connect Ethernet cable (Cat5e or better) from EUP-01 T to IP Camera (PoE Model Only). Check LEDs on EUP-01 T.


→ Set EUP-01T, PoE Switch ON to supply direct power to IP camera.

 Set EUP-01 T, PoE Switch OFF to connect PC or network switch devices.

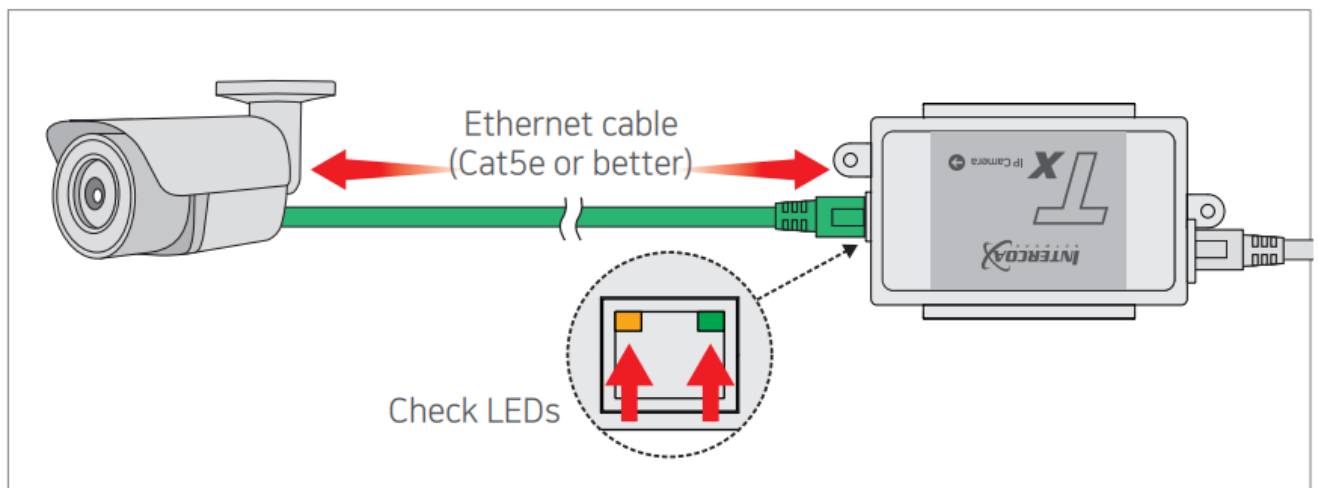


Applications

 
[Simple IP and Power of Ethernet]

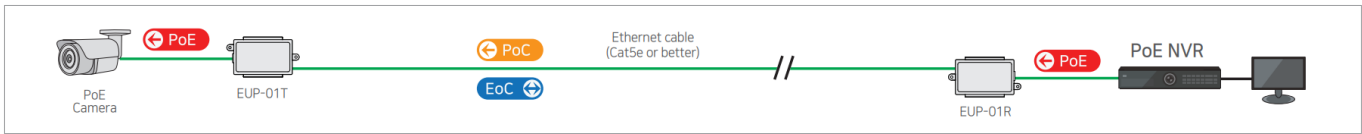

[High Power over Ethernet]

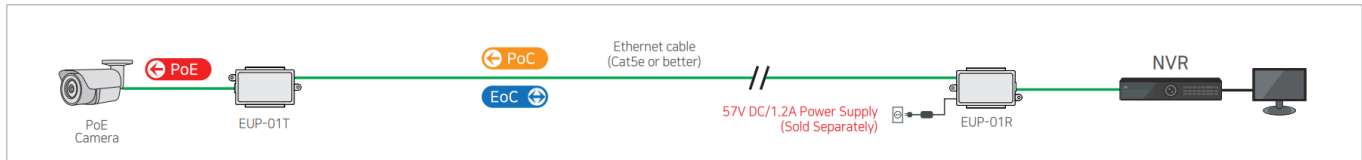 

[Extra PoE (60W) over Ethernet]

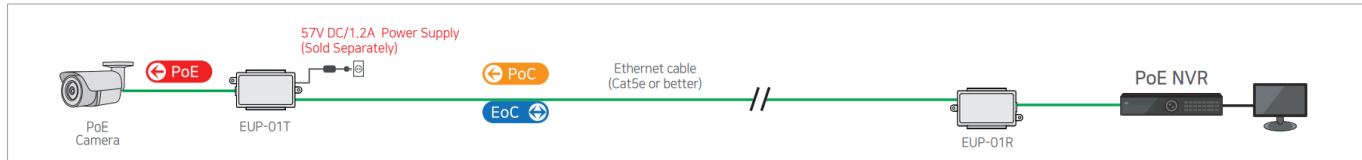 

Specification

Model			EUP-01T		EUP-01 R	
Interface			EoC Signal	1 x RJ45 – Ethernet over UTP (T-LinX)		
			Ethernet	1 x RJ45 – 10/100 Base-T with manual		
Transmission Rate			10/100 Mbps Full Duplex			
Transmission Distance			Ethernet	up to 400 m (Cat5e UTP Cable)		
			PoE (PoC)	up to 400 m (Cat. Se/ 20W)		
LED Indication		Ethernet		1 x Link (Yellow) / 1 x ACT (Green)		
Power		Input		B-Link or DC4 8V~57V		PoE Switch or DC48 V~57V
		PoE Output		IEEE802.3af (PoE), IEEE802.3at (PoE+), Extra PoE up to 60W with 57V Power Adaptor		PoE Not Supported Poe Only
		PoE Input		Up to 25.SW (PD)		Up to 25.SW (PD)
Mechanical	Dimension		93(L) x 51 (W) x 24(H)mm			
	Weight		52 g			
Mechanical	Operating Temp		-20~60°(
	Storage Temp		-30 ~ 80°(
	Relative Humidity		10% ~ 90%			
Compliance	Certification		FCC,CE,KC, RoHS			
	Surge Protection		IEC 61000-4-5 4kV(1 .2 / sous), 2kA(8 / 20us)			
Optional Accessories			57VDC / 1.2A External Power Supply			

Caution

- Please install the device following the installation guide.
- Do not touch the device and cable with wet hands.
- Keep away from moisture and shock.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus that produce heat.
- Indoor use only. (Use waterproof junction box when it is used in outdoor)
- Do not use for other purposes.
- Do not disassemble or modify this device.
- Do not put any sticker or paint on it.
- If this device is defective or malfunctioning, please unplug the power source immediately and contact dealer or service center.
- Please use the rated power supply for the product.
- Connect DC power to this device first and then to AC outlet when using DC power supply.

Warranty

- This device has passed the quality control and product inspection.
- Please install and use according to the installation guide.
- The warranty period for this product is 24 months from the date of purchase.
- If this device is defective or malfunctioning, please unplug the power adapter immediately and contact dealer or service center.
- Any damages or breakage from user's abuse, accident, modification or natural disasters will not be covered manufacturer's warranty.

This device complies with part 15 of the fee rules. Operation is subject to the following two conditions :

1. This device may not cause harmful interference, and
2. This device must accept any interference received including interference that may cause undesired operation

CUSTOMER SUPPORT

Please visit below website for more detailed information.

Web: <http://www.intercoax.com>

Tel: +82. 31. 365. 3133~4


E-mail: info@intercoax.com

Fax: +82.31.365.3135

© Intercoax Co., Ltd.



Documents / Resources

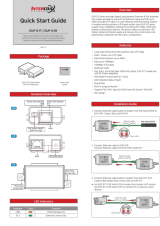	<p>INTERCOAX R-01EUP T-01E Extender PoE and Ethernet Distance Long Speed-H Converters [pdf] User Guide</p> <p>R-01EUP T-01E Extender PoE and Ethernet Distance Long Speed-H Converters, R-01EUP, T-01E, Extender PoE and Ethernet Distance Long Speed-H Converters, PoE and Ethernet Distance Long Speed-H Converters, Ethernet Distance Long Speed-H Converters, Distance Long Speed-H Converters, Long Speed-H Converters, Speed-H Converters, Converters</p>
---	--

References

-  [intercoax.com](http://www.intercoax.com)
- [User Manual](#)

