



Intercomp WC3-D Auto Dispense Instructions

[Home](#) » [Intercomp](#) » Intercomp WC3-D Auto Dispense Instructions 

Intercomp WC3-D Auto Dispense Instructions



Intercomp Instructions for Auto Dispense

Start Auto Dispense

1. Make sure Toggle switch is set to Auto
2. Press UNLOAD
3. Most recent target weight is displayed. Default is 100 lbs.
4. If correct target weight is displayed press enter.
 - a. If you need to change target weight enter in new weight with numeric keypad and press ENTER
5. PREACT IS BRIEFLY DISPLAYED before showing the most RECENT PREACT setting (DEFAULT IS 20 lbs.)
 - a. If correct PREACT IS DISPLAYED PRESS ENTER

b. If you need to change target weight enter in new weight with numeric keypad and press ENTER

Contents

[1 Documents /](#)

[Resources](#)

[1.1 References](#)

Documents / Resources

 <small>Intercomp S.A. - Via S. Maria Maddalena, 10 - 00187 Roma (RM) - Italy Tel: +39 06 47811111 - Fax: +39 06 47811112 Email: info@intercomp.it Website: www.intercomp.it</small>	<p>Intercomp WC3-D Auto Dispense [pdf] Instructions WC3-D Auto Dispense, WC3-D, Auto Dispense, Dispense</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.