



INTERMATIC Ascend Smart In-Wall Timer User Guide

[Home](#) » [Intermatic](#) » INTERMATIC Ascend Smart In-Wall Timer User Guide 

INTERMATIC Ascend Smart In-Wall Timer User Guide



Before setting up your timer, please watch support videos at: [Intermatic.com/AscendSupport](https://www.intermatic.com/AscendSupport)

Search for 'Ascend Intermatic' and download the app.



1. Open Ascend app and select "Skip For Now" or "Create Account" if remote access is needed.

- 2. Open mobile device Wi-Fi settings and select the timer **SSID** (7DT-xxx).
- 3. Enter password “intermatic”.
- 4. Open the Ascend app and tap “New Timer” to set up.
- 5. Enter the requested 5-digit pin found in **INFO/WIRELESS** on the timer.
- 6. Follow the steps in the app to complete the set up.



Contents

1 Documents / Resources

1.1 References

2 Related Posts

Documents / Resources

http://webfile.intermatic.com/intermatic-timers-and-manuals.html Ascend™ Smart In-Wall Timer Quick Start-Up Guide Before setting up your timer, please review support videos at intermatic.com/AscendSupport Search for "Intermatic" and download the app.   1. Open Ascend app and select "New" or "On the go" on the "On the go" screen. 2. Open mobile device Wi-Fi settings and select the timer SSID (7DT-xxx). 3. Enter password "intermatic". 4. Open the Ascend app and tap "New Timer" to set up. 5. Enter the requested 5-digit pin found in INFO/WIRELESS on the timer. 6. Follow the steps in the app to complete the set up. 	INTERMATIC Ascend Smart In-Wall Timer [pdf] User Guide Ascend, Smart In-Wall Timer, Ascend Smart In-Wall Timer, Ascend Smart App, Ascend Intermatic App
--	--

References

-  Intermatic.com/AscendSupport
-  [Intermatic timers and manuals](#)

[Manuals+](#).