



INTERMATIC DTAV40 Series Auto-Voltage Defrost Timer Instructions

[Home](#) » [Intermatic](#) » **INTERMATIC DTAV40 Series Auto-Voltage Defrost Timer Instructions** 




Contents

- [1 Setting Defrost Times:](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Setting Defrost Times:

Follow this procedure to configure defrost times:

1. On the timer wheel, choose a defrost starting time.
2. Slide the tripper upward that is directly above the desired time. The timer will initiate a 15-minute defrost at the configured time.
3. To increase the duration of the defrost, slide up the trippers that are adjacent to the starting time.

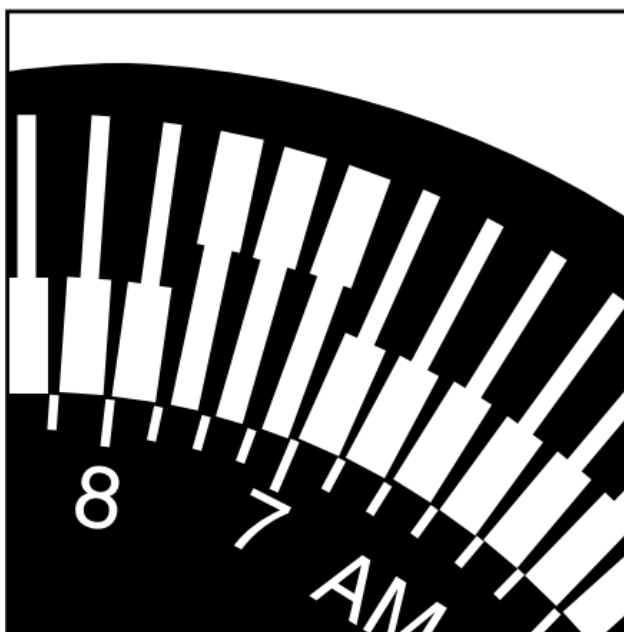

NOTE: Each tripper on the time wheel represents 15 minutes. For example, to set a 45-minute to defrost, slide the two trippers adjacent to the starting time.

NOTE: The AM and PM locations on the wheel represent 6 AM and 6 PM.

4. Repeat steps 1 through 3 as necessary to configure multiple defrost times for a given day

300GR10138

Documents / Resources

<p>INTERMATIC</p> <p>DTAV40 Series</p> <p>Setting Defrost Times:</p> <p>1. To determine when to start a defrost cycle, slide the tripper on the wheel and make a 15-minute defrost at the configured time.</p> <p>2. To determine the duration of the defrost, slide the tripper on the wheel and make a 45-minute defrost at the configured time.</p> <p>NOTE: Each tripper on the time wheel represents 15 minutes. For example, to set a 45-minute defrost, slide the tripper on the wheel and make a 45-minute defrost at the configured time.</p> <p>NOTE: The AM and PM locations on the wheel represent 6 AM and 6 PM.</p> <p>4. Repeat steps 1 through 3 as necessary to configure multiple defrost times for a given day.</p>	<p>INTERMATIC DTAV40 Series Auto-Voltage Defrost Timer [pdf] Instructions</p> <p>DTAV40 Series, Auto-Voltage Defrost Timer, DTAV40 Series Auto-Voltage Defrost Timer</p>
---	--