

INTERMATIC EC200 In Wall Countdown Timer with Hold Feature



INTERMATIC EC200 In Wall Countdown Timer with Hold Feature Instruction Manual

[Home](#) » [Intermatic](#) » **INTERMATIC EC200 In Wall Countdown Timer with Hold Feature Instruction Manual** 

Contents

- [1 INTERMATIC EC200 In Wall Countdown Timer with Hold Feature](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 MODEL SERIES](#)
- [5 IMPORTANT SAFETY INSTRUCTIONS](#)
- [6 Ratings](#)
- [7 Installation](#)
- [8 Operation](#)
- [9 LIMITED ONE-YEAR WARRANTY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



INTERMATIC EC200 In Wall Countdown Timer with Hold Feature



Product Information

Specifications:

- **Model Series:** EC200, EC210, EI200, EI210, EI220, EI230
- **Timer Mode:** Yes
- **Hold Feature:** Yes
- **Colour:** White
- **Power Source:** Electrical Outlet
- **Warranty:** Available

Product Usage Instructions

Installation:

1. Disconnect power to the circuit.
2. Remove the wall plate and disconnect the light switch.
3. Ensure that both hot and neutral wires are present in the junction.
4. Refer to the provided figures for proper wiring connections.

Operation: Timer Mode

EC/EI200 Series:

1. Connect the hot wire (black or red) from the fixture to the hot terminal (black) on the timer.
2. Connect the neutral wire (white) from the fixture to the neutral terminal (white) on the timer.

3. Connect the ground wire (green) from the fixture to the ground terminal on the timer.
4. Follow the specific instructions for setting the timer duration and functionality as provided in the user manual.

EC/EI210 Series:

Follow the same steps as mentioned for the EC/EI200 Series.

EI220 Series:

Follow the same steps as mentioned for the EC/EI200 Series, but connect the red wire from the fixture to the red terminal on the timer.

EI230 Series:

Follow the same steps as mentioned for the EC/EI200 Series, but connect the red wire from the fixture to the red terminal on the timer and connect the black wire from the fixture to the black terminal on the timer.

FAQ (Frequently Asked Questions)

- **Q: Where can I get warranty service for the product?**

A: Warranty service can be obtained by either returning the product to the dealer from whom it was purchased or completing a warranty claim online at www.intermatic.com. For further assistance, you can also call 815-675-7000.

- **Q: What should I do if I have a problem with the installation?**

A: If you encounter any issues during installation, refer to the user manual for troubleshooting tips. If the problem persists, contact Intermatic customer service at the provided address or visit their website for further assistance.

MODEL SERIES**MODEL SERIES:**

- EC200
- EC210
- EI200
- EI210
- EI220
- EI230



IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

WARNING Risk of Fire or Electric Shock

- Disconnect power at the circuit breaker(s) or disconnect switch(es) before installing or servicing.
- Installation and/or wiring must be by national and local electrical code requirements.
- Connect to copper conductors only.
- Do not use a timer to control devices that could have dangerous consequences due to inaccurate timing, such as sun lamps, saunas, heaters, crock pots, etc.

NOTICE

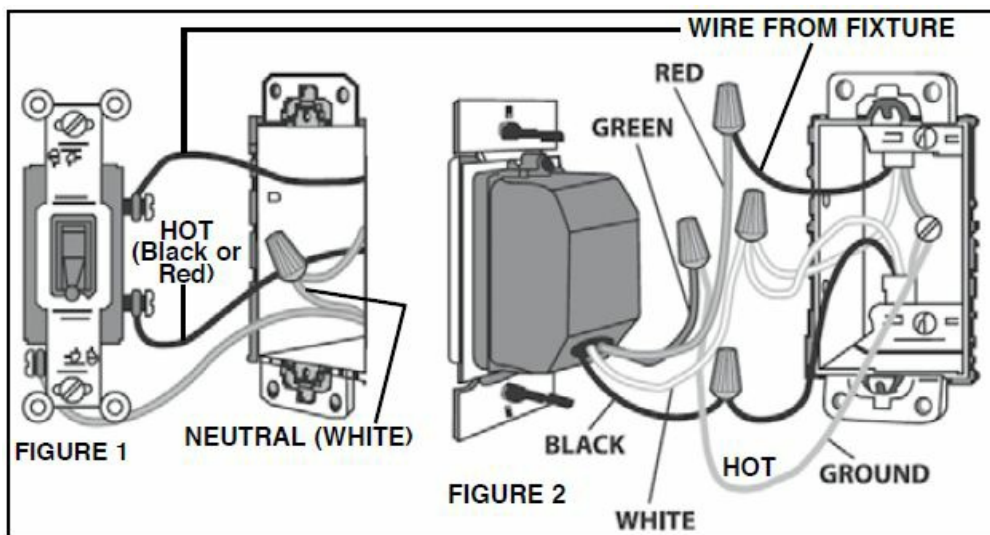
No user-serviceable parts.

Ratings

- 15 A General Purpose
- 15 A Resistive
- 1000 W Tungsten
- 1/4 HP Motor
- 500 VA Electronic Ballast
- 1000 VA Ballast
- 120 Vac 60Hz
- Leads: Black-Line, White-Neutral, Red-Load, Green-Ground

Installation

- Disconnect power to the circuit.
- Remove the wall plate and disconnect the light switch.
- Make sure both “hot” and neutral wires are present in the junction box. (See Fig. 1.)
NOTE: If both wires are not present, additional wiring will be necessary before installation can be completed.
Remove the insulation from each conductor and make sure the ends of the wire are straight.
- Connect the red timer wire to the fixture wire and secure it with a wire connector. (See Fig. 2)
- Connect the black timer wire to the “hot” wire in the junction box and secure it with a wire connector.
- Cut white wire in the junction box (or open splice) and strip 7/16 ” of insulation on both wires.
- Connect the white timer wire to the white wires in the junction box and secure it with a wire connector. (See Fig. 2)
- Connect the green wire from the new timer to the existing ground in the box.
- Verify all wire connections are secure.
- Place the timer and all wires inside the junction box.
- Install the timer and secure it with supplied mounting screws.
- Reconnect electrical power.



Operation

Timer Mode

Press and release the timer button repeatedly to select the desired time setting or to select OFF. The illuminated LED indicates which time setting is selected and the connected load is turned ON. After the selected time interval counts down, the LED and the connected load turn OFF.

Hold Mode (Continuous Operation)

To turn the timer ON for extended periods, press and hold the timer button for more than 2 seconds. The timer enters HOLD mode, the HOLD LED turns on, and the connected load is turned ON. To exit HOLD mode press and release the timer button. LED goes off and the connected load turns OFF.

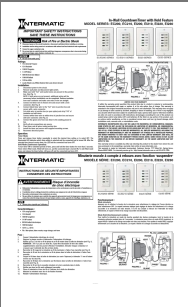
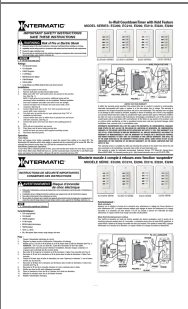
LIMITED ONE-YEAR WARRANTY

If within the warranty period specified, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, at its sole option, free of charge. This warranty is extended to the original household purchaser only and is not transferable. This warranty does not apply to (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used under instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LED's and batteries; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs.

INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN PLACE OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIS LIMITED WARRANTY AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased or (b) completing a warranty claim online at www.intermatic.com. This warranty is made by: Intermatic Incorporated, Customer Service 7777 Winn Rd., Spring Grove, Illinois 60081-9698. For warranty service go to: <http://www.Intermatic.com> or call 815-675-7000.

Documents / Resources

	<p>INTERMATIC EC200 In Wall Countdown Timer with Hold Feature [pdf] Instruction Manual EC200 In Wall Countdown Timer with Hold Feature, EC200, In Wall Countdown Timer with Hold Feature, Countdown Timer with Hold Feature, Timer with Hold Feature, Hold Feature, Feature</p>
	<p>INTERMATIC EC200 In Wall Countdown Timer with Hold Feature [pdf] Instruction Manual EC200 In Wall Countdown Timer with Hold Feature, EC200, In Wall Countdown Timer with Hold Feature, Countdown Timer with Hold Feature, Hold Feature, Feature</p>

References

- [intermatic.com](#)
- [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.