



INTERONE FCC-500 RGB Dual Function Controller Slave User Manual

[Home](#) » [INTERONE](#) » INTERONE FCC-500 RGB Dual Function Controller Slave User Manual 



INTERONE


- Model: FCC-500
RGB Dual Function Controller/Slave
- Input Power: 12V/24V
 - Max Output: 300W
 - Built-in Modes: 33 Modes with Speed Control

Contents

- [1 FCC-500 RGB Dual Function Controller Slave](#)
- [2 Documents / Resources](#)

FCC-500 RGB Dual Function Controller Slave

- Modes 01-25 RGB
- Modes 26-33 BangBang
- Mode 00 Slave/Amplifier (Requires connection of communication ports)

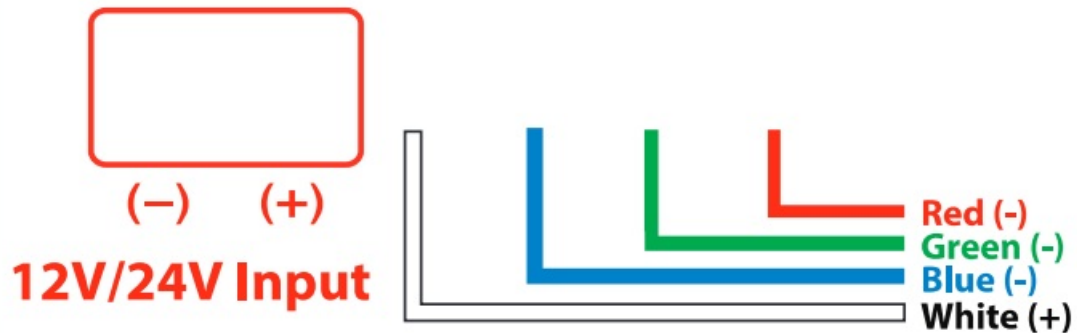


★ Initial Setting

- After connecting power, open the cover and set to desired mode before connecting modules.
- If the speed is set too low there could be a timing gap between board indicator and modules. Reboot the controller to reset.



Controller Interface

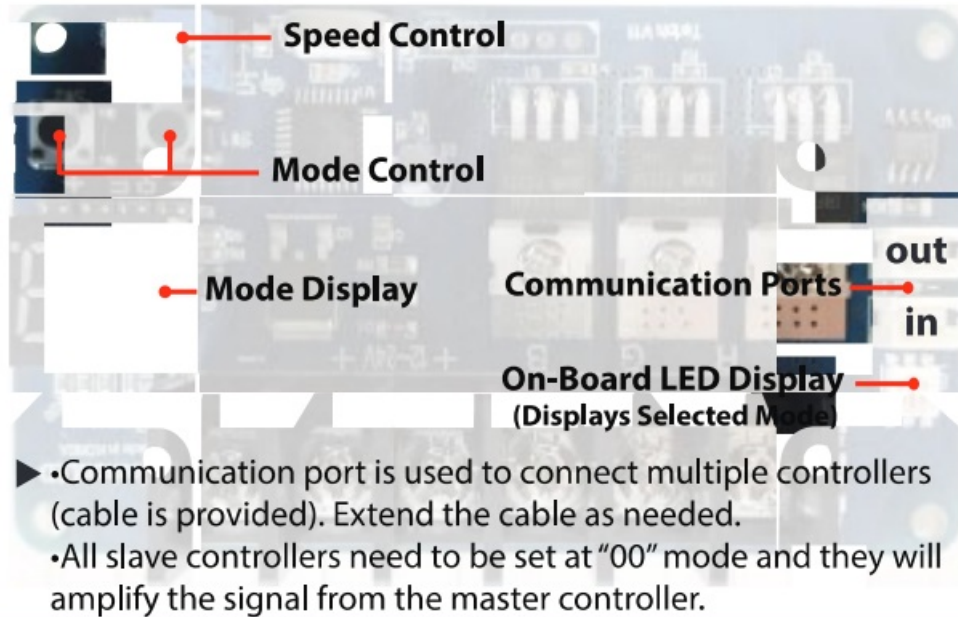

RGB Modes

Solid Color	Flashing	Dimming	Multi-Color
01 Red	08 Red	15 Red	22 7 Color Dimming
02 Green	09 Green	16 Green	23 7 Color Changing
03 Blue	10 Blue	17 Blue	24 7 Color Transition
04 Yellow	11 Yellow	18 Yellow	25 7 Color Flashing
05 Pink	12 Pink	19 Pink	
06 Sky Blue	13 Sky Blue	20 Sky Blue	
07 White	14 White	21 White	00 Slave (Amplifier) Mode

Bang Bang Modes

26~35

 


INTERONE

(949) 514-8253

sales@interoneusa.com

www.interoneusa.com



[INTERONE FCC-500 RGB Dual Function Controller Slave](#) [pdf] User Manual
FCC-500 RGB Dual Function Controller Slave, FCC-500, RGB Dual Function Controller Slave,
Function Controller Slave, Controller Slave, Slave