


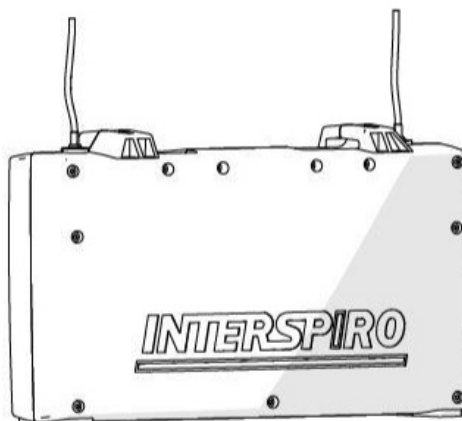
INTERSPIRO 33317D01 Spirolink Repeater User Manual

[Home](#) » [INTERSPIRO](#) » INTERSPIRO 33317D01 Spirolink Repeater User Manual 


Contents

- [1 INTERSPIRO 33317D01 Spirolink Repeater User Manual](#)
- [2 Battery status and network indication](#)
- [3 Battery status \(long pulse\)](#)
- [4 Network Indication \(shorter pulses\)](#)
- [5 Replacing batteries](#)
- [6 Caution](#)
- [7 Use a Phillips screwdriver.](#)
- [8 Waste Electrical and Electronic Equipment \(WEEE\) Disposal Instructions](#)
- [9 Read More About This Manual & Download PDF:](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

INTERSPIRO 33317D01 Spirolink Repeater User Manual



1. The repeater is activated (turned ON) by removing the tally key from the
2. The repeater is deactivated (turned OFF) by inserting the tally key into the

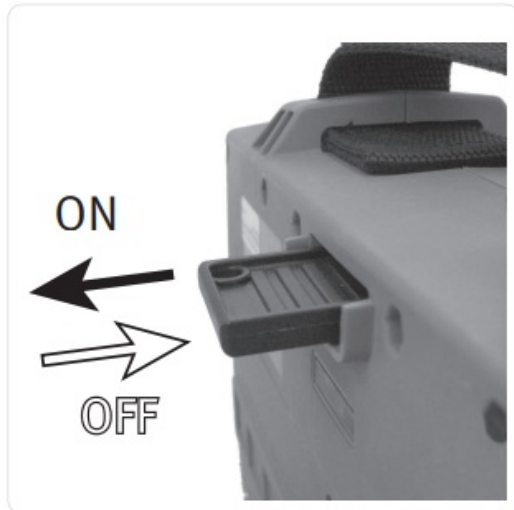

Battery status and network indication

1. Battery status and network indication are both shown by the LED indicator on the back side of the unit.



2. Battery status and network indication are alternately displayed on the LED; with long pulses (battery) and shorter pulses (network).

Battery status (long pulse)

1. The long pulse (2 second) shown on the LED show the battery status:
 - GREEN long pulse = OK battery
 - RED long pulse = Low battery
2. If battery is empty, then the LED constantly shows RED

Network Indication (shorter pulses)

- The network number is shown as one or more continuous pulses, thenumber of pulses is equal to the network

number.

Example: • = network 1, •• = network 2, ••• = network 3, etc.Examples:

- Roaming: Battery status GREEN or RED long pulse, followed by REDnetwork number.
- Connected: Battery status GREEN or RED long pulse, followed by
- GREEN network number.
- Low battery: Battery status RED long pulse, followed by GREEN orRED network number.
- Battery empty: The LED is constantly showing RED.

Replacing batteries


Always use the specified Energizer Lithium L91 batteries.

Interspiro assumes no liability for mechanical, electrical or any other type of battery failure.

Do not mix battery manufacturers or old with new batteries

Caution

Batteries must only be changed in an area known to be nonhazardous.

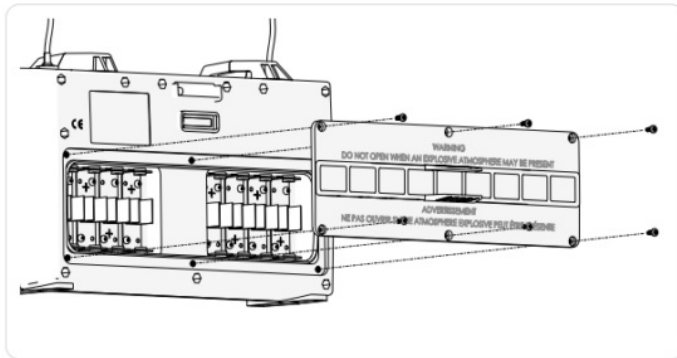

Use a Phillips screwdriver.

Use a screwdriver to unscrew the screws holding the battery cover. Remove the battery cover

Replace the batteries according the the orientation marked in the batterycompartment.

Reassemble the battery cover and the screws.

Tighten the screws moderately.



Waste Electrical and Electronic Equipment (WEEE) Disposal Instructions

In compliance with the European Community Directive 2002/96/EC, applicable as of January 27, 2003, it is important to dispose of Waste Electrical and Electronic Equipment (WEEE) in an environmentally responsible manner.

Correct Disposal of This Product:


1. Do Not Dispose in Regular Waste: This product is marked with the crossed-out wheeled bin symbol. This indicates that it should not be disposed of as regular household
2. Separate Collection: To prevent potential harm to the environment and human health from hazardous substances in electrical and electronic equipment, ensure that this product is disposed of at an authorized

recycling facility or through a dedicated collection

3. Local Disposal Regulations: Please consult your local waste management authority or the retailer where you purchased the product for information on approved collection points or recycling programs. These facilities will ensure that WEEE is recycled properly, reducing the impact on the
4. Battery Disposal: If your product contains batteries, dispose of them separately in accordance with local laws and regulations for battery By properly disposing of this product, you contribute to the sustainable reuse of materials and the conservation of natural resources. For more information on recycling and disposal, please contact your local authorities.

Read More About This Manual & Download PDF:

Documents / Resources

	<p>INTERSPIRO 33317D01 Spirolink Repeater [pdf] User Manual 33317D01, 33317D01 Spirolink Repeater, Spirolink Repeater, Repeater</p>
--	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.