



inventor CR2VO-24B Air Conditioning Systems User Manual

[Home](#) » [inventor](#) » inventor CR2VO-24B Air Conditioning Systems User Manual 



**AIR CONDITIONING SYSTEMS
REMOTE CONTROLLER
USER'S MANUAL**



**MODELS: CRPVI32-09WFI/CRPVO32-09
CRPVI32-12WFI/CRPVO32-12 CR2VI-18WFIB/CR2VO-18B
CR2VI-24WFIB/CR2VO-24B**


Contents

- 1 Remote Controller Specifications
- 2 Handling the Remote Controller
- 3 Buttons and Functions
- 4 Remote Screen Indicators
- 5 Setting the TIMER
- 6 How to Use Advanced Functions
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

Remote Controller Specifications

Model	RG10B1(D)/BGEF
Rated Voltage	3.0V(Dry batteries R03/LRO3x2)
Signal Receiving Range	8m
Environment	-5°C–60°C(23°F'-140°F)

Quick Start Guide

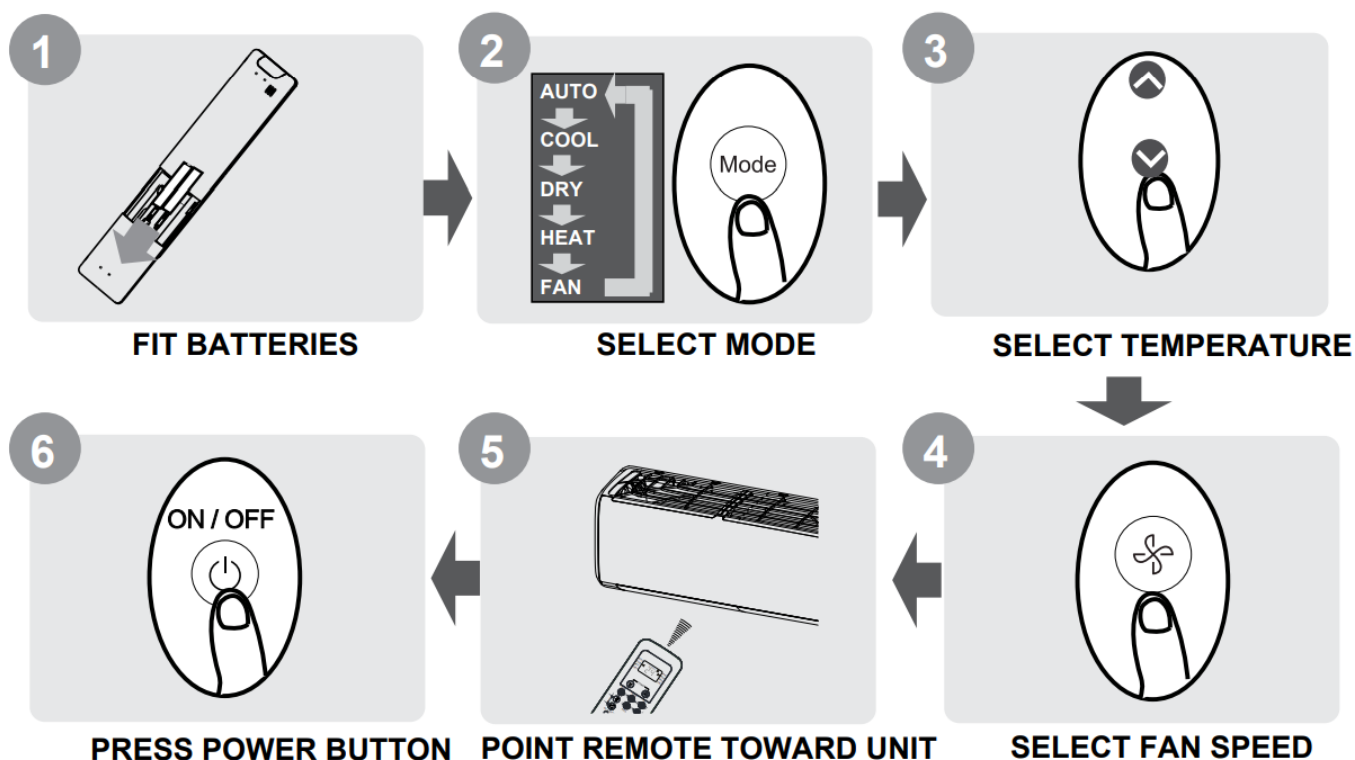

NOT SURE WHAT A FUNCTION DOES?

Refer to the How to Use Basic Functions and How to Use Advanced Functions sections of this manual for a detailed description of how to use your air conditioner.

SPECIAL NOTE

- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing that function's button on the remote control will

have no effect.


- When there are wide differences between “Remote controller Manual” and “USER’S MANUAL” on the function description, the description of “USER’S MANUAL” shall prevail.

Handling the Remote Controller

Inserting and Replacing Batteries

Your air conditioning unit may come with two batteries(some units). Put the batteries in the remote control before use.

1. Slide the back cover from the remote control downward, exposing the battery compartment. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment. Slide the battery cover back into place.

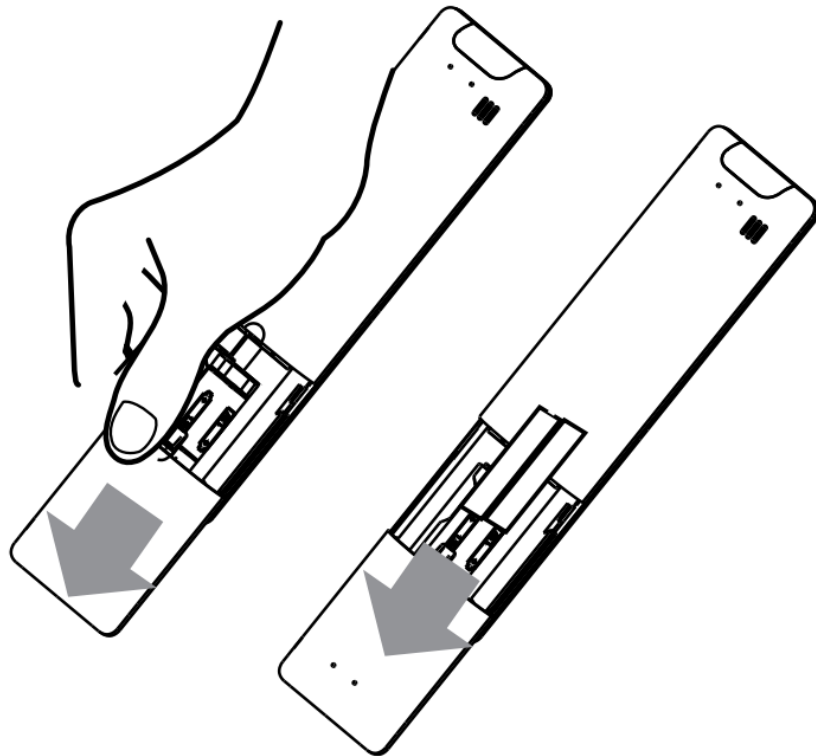

BATTERY NOTES

For optimum product performance:

- Do not mix old and new batteries or batteries of different types.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.



BATTERY DISPOSAL

Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.

TIPS FOR USING REMOTE CONTROL

- The remote control must be used within 8 meters of the unit.
The unit will beep when a remote signal is received.
Curtains, other materials and direct sunlight can interfere with the infrared signal receiver
- Remove batteries if the remote will not be used for more than 2 months.

NOTES FOR USING REMOTE CONTROL

The device could comply with the local national regulations.

- In Canada, it should comply with CAN ICES-3(B)/NMB-3(B).
- In the USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.


Buttons and Functions

Before you begin using your new air conditioner, make sure to familiarize yourself with its remote control. The following is a brief introduction to the remote control itself. For instructions on how to operate your air conditioner, refer to the How to Use Basic Functions section of this manual.

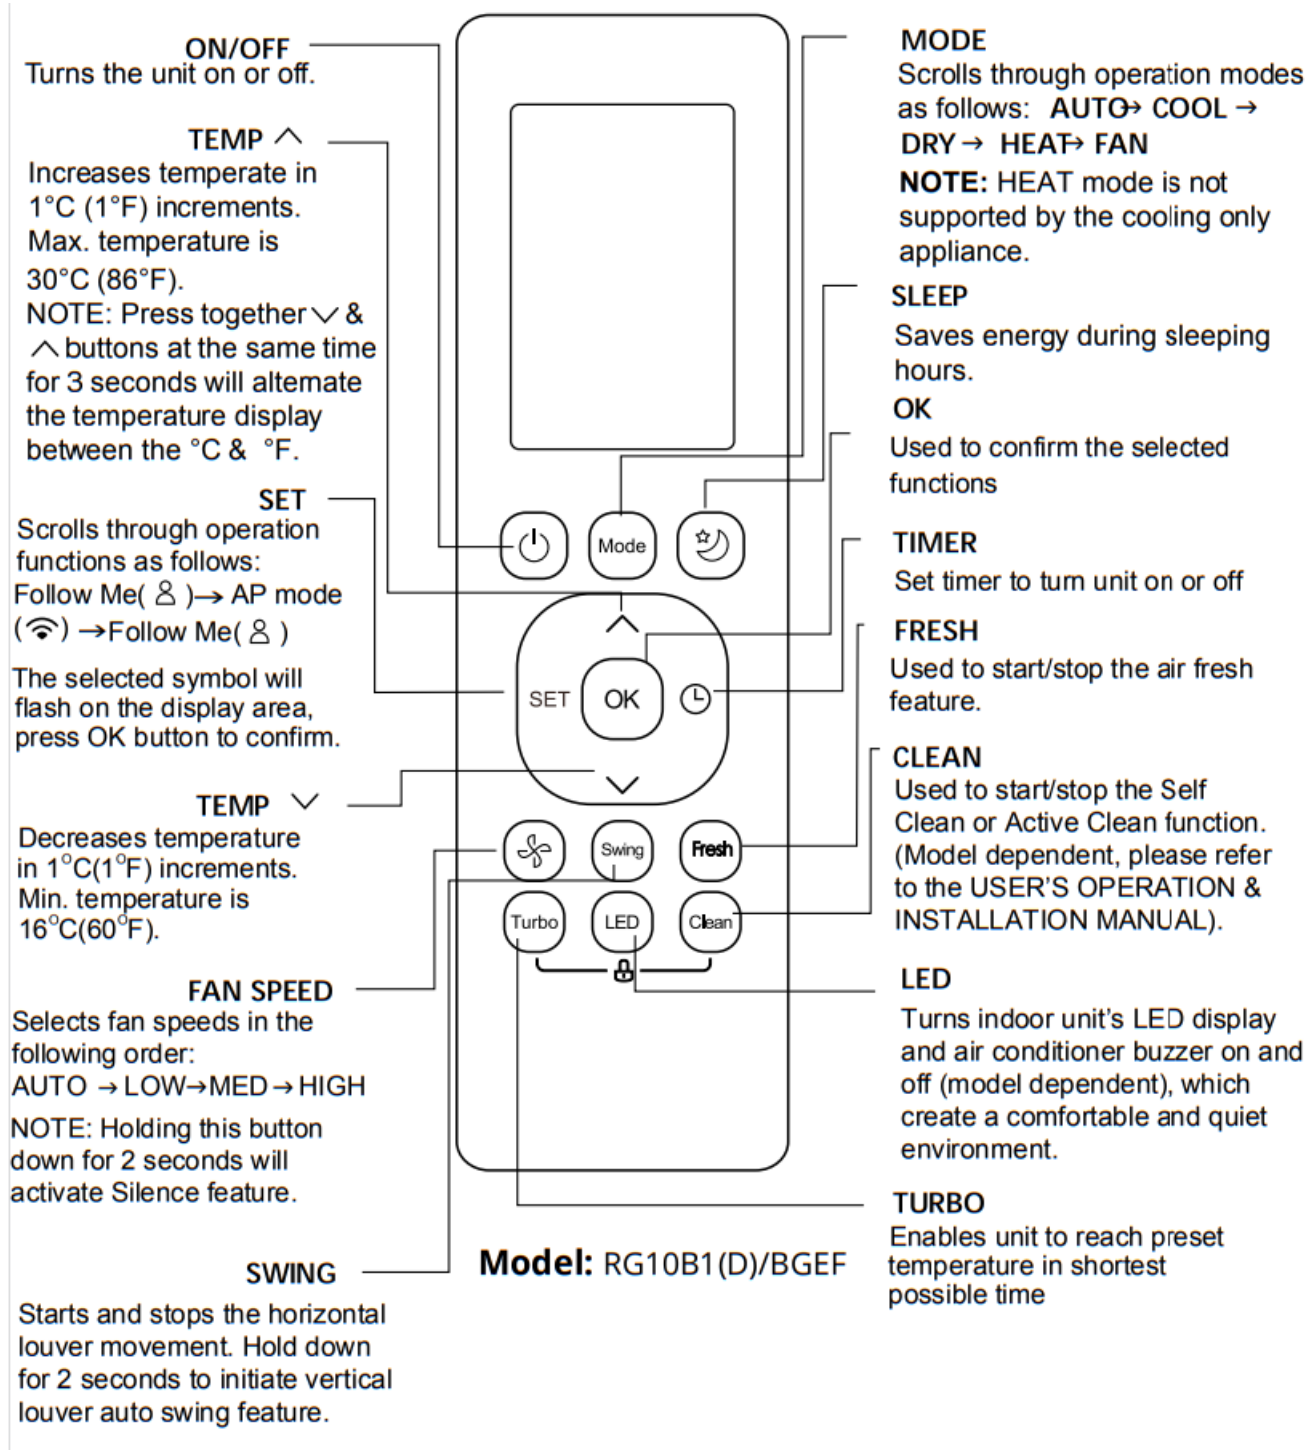

Remote Screen Indicators

Information are displayed when the remote controller is power up.

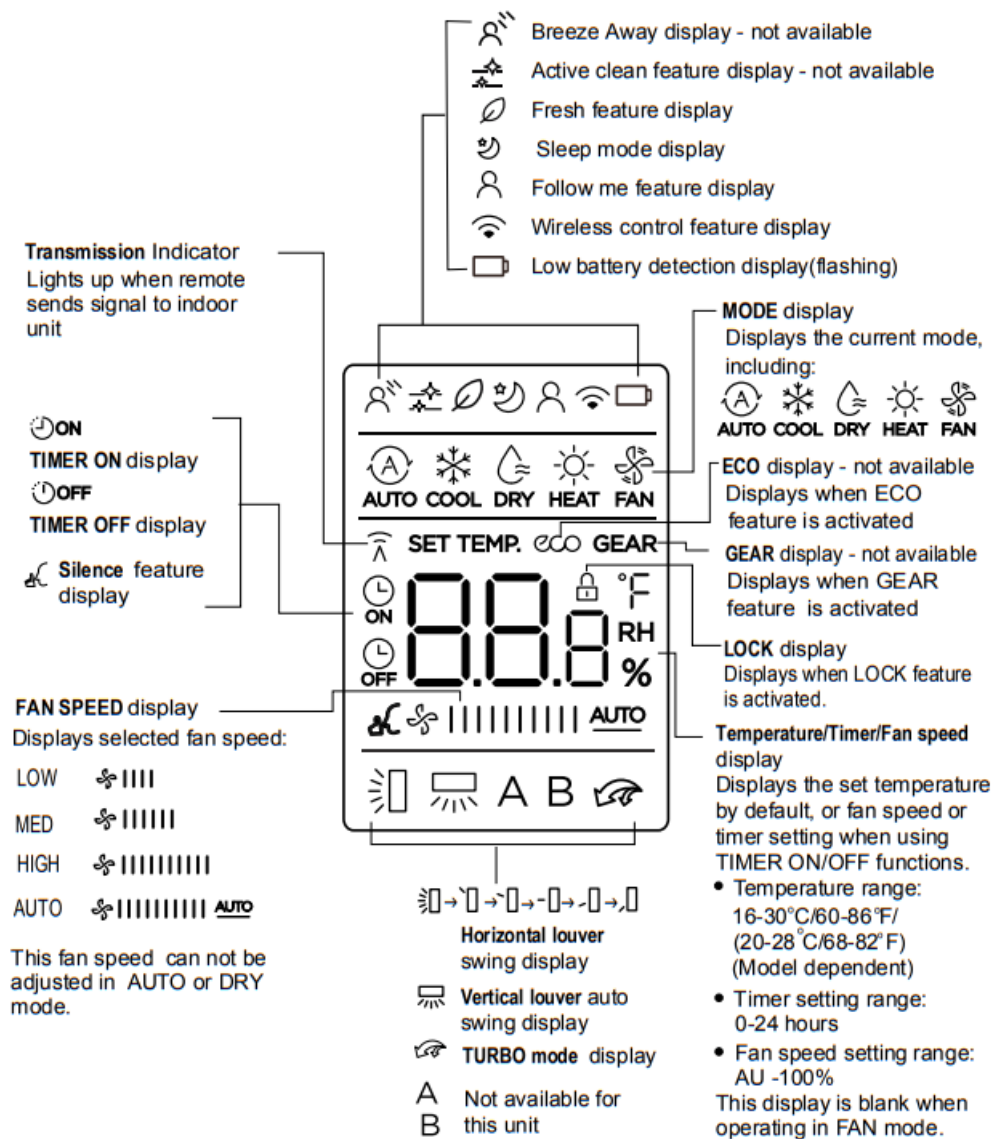

Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation, only the relative function signs are shown on the display window.

How to Use Basic Functions




ATTENTION

Before the operation, please ensure the unit is plugged in and power is available.

AUTO Mode

Select AUTO mode

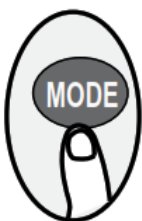

Set your desired temperature



Turn on the air conditioner



NOTE:

1. In AUTO mode, the unit will automatically select the COOL, FAN, or HEAT function based on the set temperature.
2. In AUTO mode, fan speed can not be set.

COOL or HEAT Mode

Select COOL/HEAT mode



Set the temperature



Set the fan speed




Turn on the air conditioner



DRY Mode

Select DRY mode

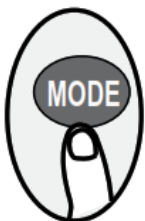

Set your desired temperature




Turn on the air conditioner



NOTE: In DRY mode, fan speed can not be set since it has already been automatically controlled.

FAN Mode

Select FAN mode

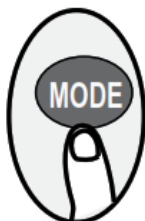

Set the fan speed



Turn on the air conditioner



NOTE: In FAN mode, you can't set the temperature. As a result, no temperature displays in the remote screen.


Setting the TIMER

TIMER ON/OFF – Set the amount of time after which the unit will automatically turn on/off.

TIMER ON setting

Press TIMER button to initiate the ON time sequence.


Press Temp. up or down button multiple times to set the sired time to turn on the unit.

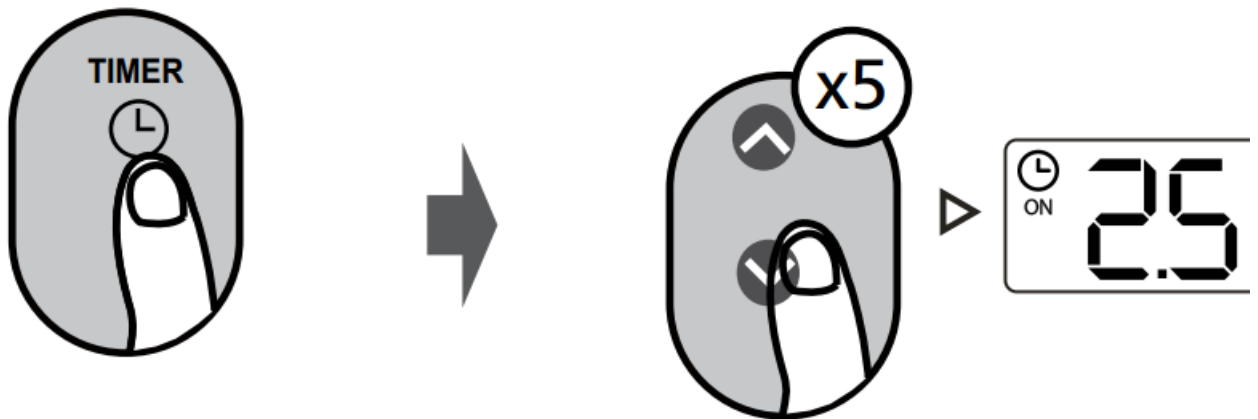

TIMER OFF setting

Press TIMER button to initiate the OFF time sequence.

Press Temp. up or down button multiple times to set the sired time to turn off the unit.

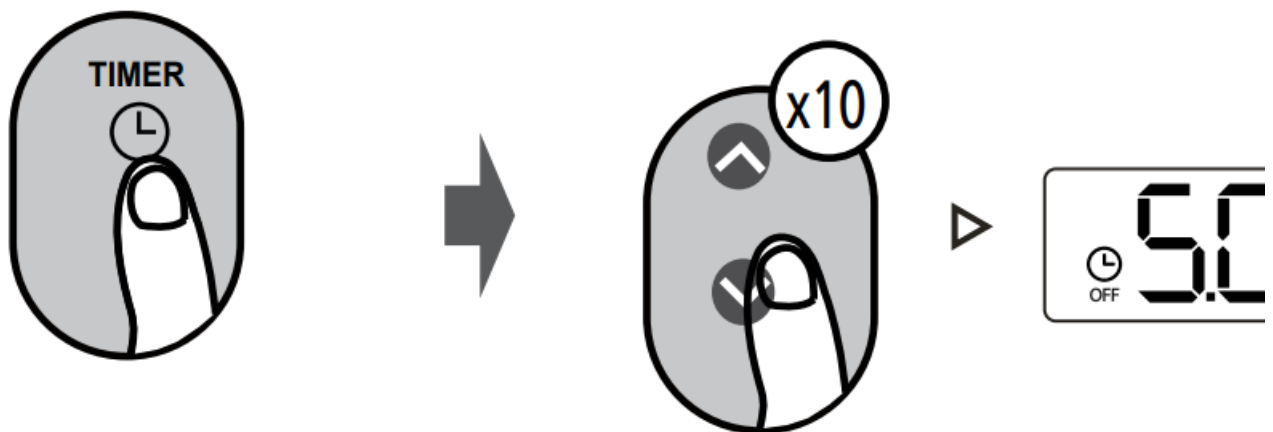


NOTE:

1. When setting the TIMER ON or TIMER OFF, the time will increase by 30 minutes increments with each press, up to 10 hours. After 10 hours and up to 24, it will increase in 1-hour increments. (For example, press 5 times to get 2.5h, and press 10 times to get 5h,) The timer will revert to 0.0 after 24.
2. Cancel either function by setting its timer to 0.0h.

TIMER ON & OFF setting (example)

Keep in mind that the time periods you set for both functions refer to hours after the current time.

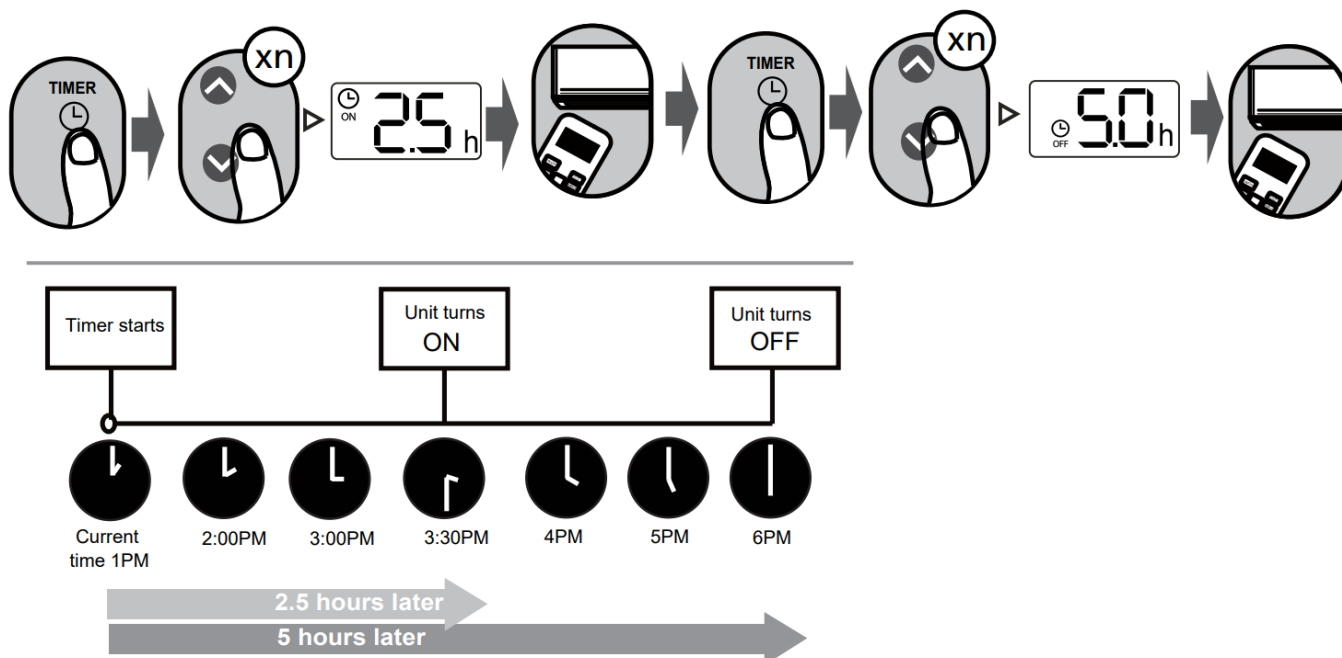


Example: If the current timer is 1:00 PM, to set the timer as the above steps, the unit will turn on 2.5h later (3:30 PM) and turn off at 6:00 PM.

How to Use Advanced Functions


Swing function

Press Swing button

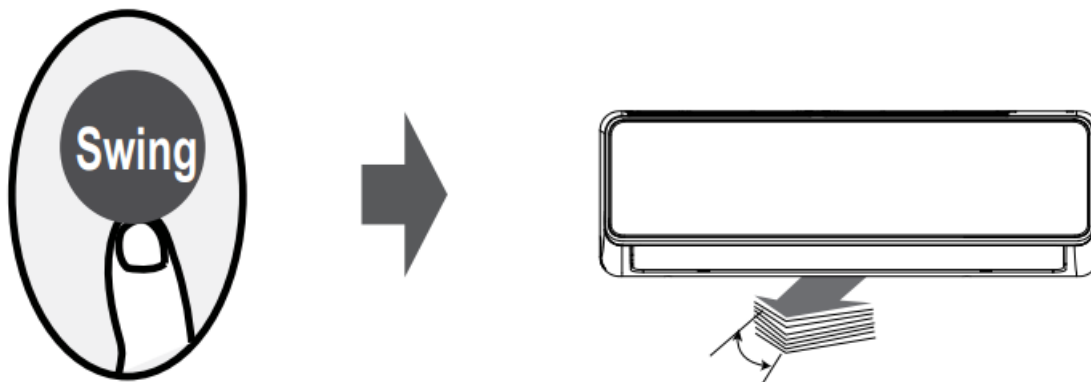

The horizontal louver will swing up and down automatically when pressing Swing button. Press again to make it stop.



LED DISPLAY

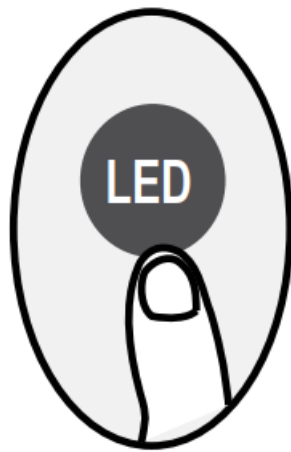

Press LED button

Press this button to turn on and turn off the display on the indoor unit.

The horizontal louver will swing up and down automatically when pressing the Swing button. Press again to make it stop.

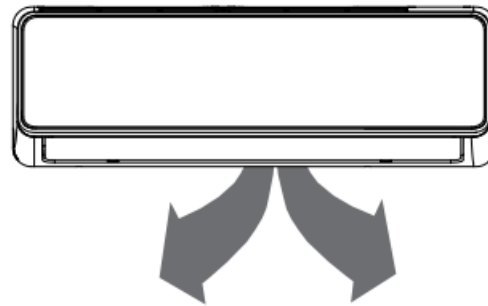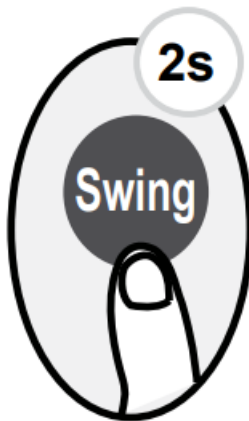

Silence function




Keep pressing the Fan button for more than 2 seconds to activate/disable the Silence function.

Due to the low-frequency operation of the compressor, it may result in insufficient cooling and heating capacity. Pressing ON/OFF, Mode, Sleep, Turbo or Clean buttons while operating will cancel the silence function.

8°C function


Press this button 2 times for one second under HEAT Mode and set the temperature of 16 C/60 F or 20 C/68 F.

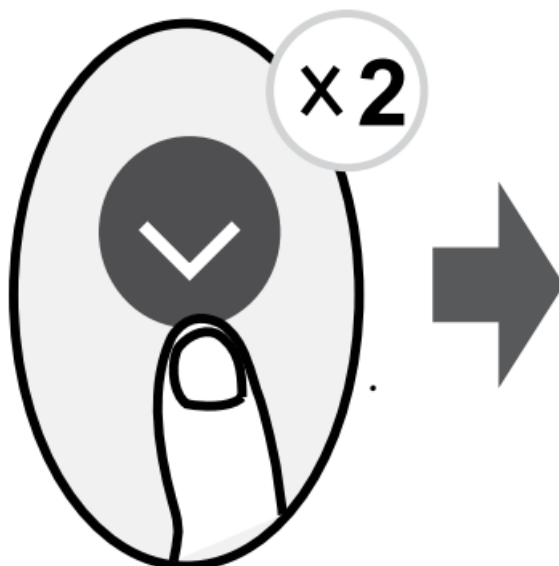

The unit will operate at high fan speed (while the compressor is on) with the temperature automatically set to 8 C/46 F.


Pressing On/Off, Sleep, Mode, Fan, and Temp. button while operating will cancel this function.

LOCK function

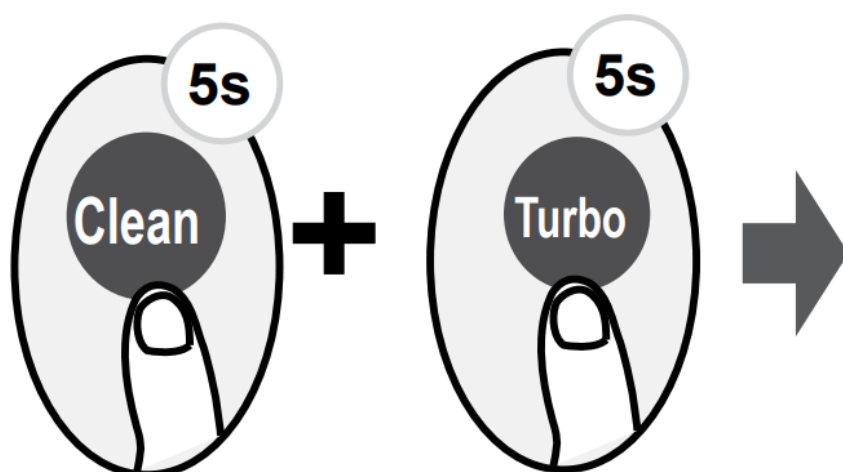



Press together the Clean button and Turbo button at the same time for more than 5 seconds to activate the Lock function. All buttons will not respond except pressing these two buttons for two seconds again to disable locking.

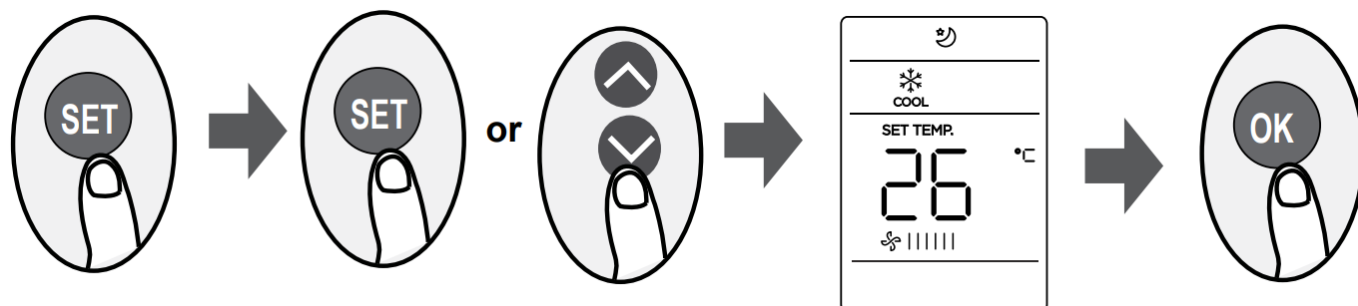
SET function




Press the SET button to enter the function setting, then press the SET button or TEMP \wedge or \vee TEMP button to select the desired function. The selected symbol will flash on the display area, press the OK button to confirm. To cancel the selected function, just perform the same procedures as above.


Press the SET button to scroll through operation functions as follows: Sleep() Follow Me() AP mode(




Sleep function(): The SLEEP function is used to decrease energy use while you sleep (and don't need the same temperature settings to stay comfortable). This function can only be activated via remote control. , For the detail, see sleep operation in USER S MANUAL. ,

Note: The SLEEP function is not available in FAN or DRY mode.

FRESH (): When the FRESH function is initiated, the UV-C lamp and the ion generator are energized and will help to purify the air in the room.

Follow me function(): The FOLLOW ME function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner every 3 minutes interval. When using AUTO, COOL or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.

NOTE: Press and hold the Turbo button for seven seconds to start/stop memory feature of Follow Me function. If the memory feature is activated, ON displays for 3 seconds on the screen. "OF " If the memory feature is stopped, OF displays for 3 seconds on the screen. While the memory feature is activated, press the ON/OFF button, shift the motor power failure will not cancel the Follow me function.

AP function(): Choose AP mode to do wireless network configuration. For some units, it doesn't work by pressing the SET button. To enter the AP mode, continuously press the LED button seven times in 10 seconds. All the pictures in the manual are for explanatory purposes only. The actual shape of the unit you purchased may be slightly different, but the operations and functions are the same. The company may not be held responsible for any misprinted information. The design and the specifications of the product for reasons, such as product improvement, are subject to change without any prior notice.

Please consult with the manufacturer at +30 211 300 3300 or with the Sales agency for further details. Any future updates to the manual will be uploaded to the service website, and it is advised to always check for the latest version.



<https://www.inventorairconditioner.com/media-library>

Scan here to download the latest version of this manual. www.inventorairconditioner.com/media-library



**AIR CONDITIONING SYSTEMS
REMOTE CONTROLLER**




V:1.1.102021

Manufacturer: INVENTOR A.G. S.A.

24th km National Road Athens – Lamia & 2 Thoukididou Str., Ag.Stefanos, 14565

Tel.: +30 211 300 3300, Fax: +30 211 300 3333 – www.inventor.ac

Documents / Resources

 <p>inventor AIR CONDITIONING SYSTEMS REMOTE CONTROLLER</p> <ul style="list-style-type: none"> • USER'S MANUAL • ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ • MANUAL UTILIZATORULUI • BENUTZERHANDBUCH <p>MODELS CRPVI32-09WFI, CRPVO32-09, CRPVI32-12WFI, CRPVO32-12, CR2VI-18WFIB, CR2VO-18B, CR2VI-24WFIB, CR2VO-24B</p> <p>PRECISION REMOTE & DIGITAL CONTROL</p>	<p>inventor CR2VO-24B Air Conditioning Systems [pdf] User Manual</p> <p>CRPVI32-09WFI, CRPVO32-09, CRPVI32-12WFI, CRPVO32-12, CR2VI-18WFIB, CR2VO-18B, CR2VI-24WFIB, CR2VO-24B, Air Conditioning Systems, CR2VO-24B Air Conditioning Systems, Conditioning Systems</p>
---	--

References

- [Κλιματιστικά Inverter WiFi, Ψυγεία, Αφυγραντήρες, Air Conditioners - Inventor](#)
- [Biblioteca media - Inventor](#)
- [Αρχεία και Υποστήριξη - Inventor](#)
- [Media Library & Support - Inventor](#)
- [Media Library & Support - Inventor](#)