



INVENTUM HW217B and HW217W Kettle Instruction Manual

[Home](#) » [INVENTUM](#) » INVENTUM HW217B and HW217W Kettle Instruction Manual 

INVENTUM

maakt 't moment

waterkoker

HW217B and HW217W Kettle
Instruction Manual



2 JAAR
INVENTUM
GARANTIE

OMRUIL
SERVICE

OER
HOLLANDS
SINDS 1908

Contents

- [1 Safety Instructions](#)
- [2 Appliance Description](#)
- [3 Before First Use](#)
- [4 Boiling Water](#)
- [5 Switching the kettle off](#)
- [6 Descaling](#)
- [7 Cleaning & Maintenance](#)
- [8 General terms and conditions of service and warranty](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Safety Instructions

- Please read these instructions before operating the appliance and retain it for future use.
- The appliance is intended solely for domestic use within the home.
- **Attention!** Avoid touching hot surfaces, especially the outside of the appliance when the appliance is in use.
- **Attention!** In case of overfilling the kettle, it is possible that boiling water is ejected.
- Before plugging into a socket, check that the voltage in your home corresponds with the voltage printed on the bottom of the appliance.
- Never let the power cord of the appliance hang over the edge of a table or counter, touch hot surfaces, or become knotted.
- Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during use.
- Always use the appliance on a secure, dry, level surface.
- Never leave the appliance unattended when in use.
- Always carry out regular checks of the power cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to the Customer Service Department in order to avoid a hazard.
- For your own safety, only use the accessories and spare parts from the manufacturer which are suitable for the appliance.
- Always return the appliance after a malfunction, or if it has been damaged in any manner to the Customer Service Department for examination, repair, or adjustment as special purpose tools are required.
- Never unplug it from the socket by pulling the cable.
- Always ensure that your hands are dry before handling the plug, switch, or power cord.
- This appliance shall not be used by children from 0 to 8 years. This appliance can be used by children over the age of 8 and above if they are continuously supervised.
- This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and maintenance shall not be made by children.
- Children should be supervised to ensure that they do not play with the appliance.

- Unplug the appliance as soon as you have finished using it and when you are cleaning it.
- If an extension cord is used, compare the marked electrical rating of the extension cord with the electrical rating on the appliance. Make sure that it can not be pulled by children or tripped over unintentionally.
- Should you decide not to use the appliance anymore, make it inoperative by cutting the power cord after removing the plug from the socket. We also recommend making all potentially dangerous parts of the appliance harmless, particularly for children who might be tempted to play with them.
- Never use the appliance if it is not working properly, or if it has been damaged. Any intervention other than cleaning and normal maintenance by the customer must be carried out by an approved Service Centre.
- Never immerse any part of the main body, or power cord, and plug into water or any other liquid to protect yourself against electrical hazards.
- When the appliance is used for other purposes than intended or when it is not handled in accordance with the instruction manual, the full responsibility for any consequences will rest with the user. Any damages to the product or other things are not covered by the warranty.



- Legislation requires that all electrical and electronic equipment must be collected for reuse and recycling. Electrical and electronic equipment marked with the symbol indicating a separate collection of such equipment must be returned to a municipal waste collection point.

Appliance Description



1. Spout
2. Anti-scale filter
3. Lid
4. Button for opening lid
5. Handle
6. Waterlevel-indicator
7. On/ off switch with pilot lamp
8. Base

Before First Use

Before you use the appliance for the first time, please do as follows: Carefully unpack the appliance and remove all the packaging material. Keep the material (plastic bags and cardboard) out of reach of children. Check the appliance after unpacking for any damage, possible from transportation. Place the appliance on a stable and heat-resistant surface.

The minimum amount of water must be 0.5 litres. The maximum amount of water to be used is 1.7 litres.

Before use, you must fill the water kettle to the maximum level and boil this amount. Do this twice. Throw away the boiled water and rinse the kettle with cold water. The appliance is now ready to use.

The kettle is only suitable for boiling water. Never fill the kettle with milk, tea, coffee or other drinks.

Boiling Water

Before plugging into a socket, check that the voltage in your home corresponds with the voltage printed on the bottom of the appliance. Put the appliance on a cool, flat and stable surface. Connect the appliance to an earthed socket. You can adjust the length of the cord by pulling it out from, or pushing it into, the interior of the appliance.

1. Open the lid by pushing the button.
2. Fill the kettle with an amount of water and close the lid by pushing it down.
3. Place the kettle on the base and make sure that the plug is in the socket.
4. Switch the kettle on by pressing the on/off switch down to position 1. The pilot lamp will light up. The kettle will now boil the water.
5. The kettle will automatically switch off when the water is boiled. The pilot lamp will switch off.

Attention: never switch the kettle on without water. If for whatever reason, the kettle is switched on without water, the dry-boil protection will automatically switch the kettle off. Put the switch back up. In this case, take the kettle from the base and let it cool down for several minutes. After that, refill the kettle and switch it on again. Make sure that the lid is closed properly, if not the kettle will go on boiling and will not automatically switch off.

Switching the kettle off

The kettle will automatically switch off when the water is boiled and the pilot lamp will switch off. If you want to boil the water again, you must wait approx. 30 seconds before you switch it on again so that the switch can cool down. The kettle can also be switched off at any time with the switch. When you take the water kettle off the base while boiling, it will switch off. When you place the water kettle back on the base, you must again wait approx. 30 seconds to let the switch cool down before you can switch it back on.

Attention! It may occur that you see condensation on the base. This is completely normal and has no consequences for the use of the water kettle.

Descaling

Scale can form on the inside of the water kettle. We advise descaling the water kettle from time to time. Use a suitable descaling product for water kettles/ coffee machines and follow the instructions.

You can also descale the water kettle with lemon juice. The acid in this juice will remove the scale. This natural method avoids the use of chemicals. Fill the water kettle half-full with warm water. Add the juice of half a lemon. Boil the water and leave it to cool for half an hour. Throw away the boiled water and rinse the water kettle to remove any remainders. Fill the water kettle with fresh water and boil it again. Throw away the water and rinse the kettle once more. Never clean the appliance with detergents. These products can damage your water kettle.

To remove the anti-scale filter for cleaning, take the water kettle off the base and let it cool down. Do not remove the anti-scale filter when the water kettle is still warm and/ or filled with water. Pull the anti-scale filter straight back out of the spout and clean it with warm water. Make sure while replacing the filter to place it correctly in the spout. Place the point of the anti-scale filter first and then push the filter back in place.

Never place the anti-scale filter loose in the water kettle.

Cleaning & Maintenance

Clean the water kettle on regular bases for continued performance. Never immerse the water kettle, the base or the plug in water or other liquids. Let the water kettle cool off and always unplug the appliance before cleaning. Wipe the outside of the water kettle with a damp cloth and dry the kettle afterwards. Never use any abrasives!

General terms and conditions of service and warranty

We do not need to remind you of the importance of service. After all, we develop our products to a standard so that you can enjoy them for many years, without any concerns. If nevertheless, there is a problem, we believe you are entitled to a solution straight away. Hence our products come with an exchange service, on top of the rights and claims you are entitled to by law. By exchanging a product or part, we save you time, effort and costs.

2-year full manufacturer's warranty

1. Customers enjoy a 2-year full manufacturer's warranty on all Inventum products. Within this period, a faulty product or part will always be exchanged for a new model, free of charge. In order to claim under the 2-year full manufacturer's warranty, you can either return the product to the shop you bought it from or contact the Inventum customer service department via the form at www.inventum.eu/service-aanvraag.
2. The 2-year warranty period starts from the date the product is bought.
3. In order to claim under the warranty, you must produce a copy of the original receipt.
4. The warranty applies only to normal domestic use of Inventum products within the Netherlands.

Breakdowns or faults outside the warranty period

1. Breakdowns or faults in small or large domestic appliances outside the warranty period can be reported to the customer services department via the form at www.inventum.eu/service-aanvraag or by calling the customer services department.
2. The customer services department may ask you to send the product for inspection or repair. The costs of dispatch will be at your expense.
3. The inspection to establish whether the repair is possible involves a charge. You need to grant your permission for this, in advance.
4. In the event of a large domestic appliance, Inventum, at your request, can send out a service engineer. In that case, you will be charged the call-out costs, as well as parts and labour.
5. In the event of an instruction to repair, the repair costs must be paid in advance. In the event of a repair by a service engineer, the costs of the repair must be settled with the engineer onsite, preferably by means of PIN payment.

Warranty exclusions

1. The following is excluded from the aforesaid warranties:
 - normal wear and tear;
 - improper use or misuse;
 - insufficient maintenance;
 - failure to comply with the operating and maintenance instructions;
 - unprofessional installation or repairs by third parties or the customer himself;

- non-original parts used by the customer;
 - use for commercial or business purposes;
 - removal of the serial number and/or rating label.
- In addition, the warranty does not apply to normal consumer goods, such as
 - dough hooks, baking tins, (carbon) filters, etc.;
 - batteries, bulbs, carbon filters, fat filters etc.;
 - external connection cables;
 - glass accessories and glass parts such as oven doors;
 - and similar items.
 - Transport damage not caused by Inventum is also excluded. Therefore, inspect your new device before starting to use it. If you detect any damage, you must report this to the store where you purchased the product within 5 working days, or to the Inventum customer service department via the form at www.inventum.eu/service-aanvraag. If transport damage is not reported within this period, Inventum does not accept any liability in this respect.
 - The following are excluded from warranty and/or replacement: faults, loss of and damage to the device as a result of an event that is normally insured under the home contents insurance.

Important to know

- The replacement or repair of a faulty product, or a part thereof, does not lead to an extension of the original warranty period.
- If a complaint is unfounded, all costs arising from it will be at the customer's expense.
- Following the expiry of the warranty period, all costs of repair or replacement, including administration costs, dispatch and call-out charges, will be charged to the customer.
- Inventum cannot be held liable for damage caused by external events unless this liability arises from mandatory statutory provisions.
- These warranty and service provisions are governed by Dutch law. Disputes will be settled exclusively by the competent Dutch court.

			
Klein	witgoed	witgoed	persoonlijke

INVENTUM

maakt 't moment
Inventum Huishoudelijke

Apparaten B.V.
 Meander 901
 6825 MH Arnhem
 T 0800 -4583688

info@inventum.eu
www.inventum.eu

 facebook.com/inventum1908

 youtube.com/inventum1908

HW217BW/01.0720

Modifications and printing errors reserved

Documents / Resources

 • gebruiksaanwijzing • instructieboekje • gebruiksaanwijzing • mode-kaartje	INVENTUM HW217B and HW217W Kettle [pdf] Instruction Manual HW217B and HW217W Kettle, HW217B, HW217W, HW217B Kettle, HW217W Kettle, Kettle
--	--

References

-  [Inventum Huishoudelijke Apparaten - Altijd 5 jaar garantie!](#)
-  [Inventum Huishoudelijke Apparaten - Altijd 5 jaar garantie!](#)

Manuals+.