

INVENTUM IKK1222S Built in cooler



# INVENTUM IKK1222S Built in cooler User Manual

[Home](#) » [INVENTUM](#) » INVENTUM IKK1222S Built in cooler User Manual 

## Contents

- 1 INVENTUM IKK1222S Built in cooler
- 2 Product Information
- 3 Product Usage Instructions
- 4 Safety Instructions
- 5 REFRIGERANT
- 6 INFORMATION ABOUT
- 7 Appliance description
- 8 Before the first use
- 9 How to Operate the Appliance
- 10 Cleaning & Maintenance
- 11 Troubleshooting
- 12 Documents / Resources
  - 12.1 References

# INVENTUM

INVENTUM IKK1222S Built in cooler



## Product Information

- **Specifications:**
  - **Model:** IKK1222S
  - **Type:** Built-in Cooler
  - **Manufacturer:** Inventum
- **Temperature Ranges:**
  - **Koelkast:** +2°C to +8°C
  - **Freezer (\*\*):** -18°C
  - **Freezer (\*\*):** -18°C
  - **Freezer (\*\*):** -12°C
  - **Freezer (\*):** -6°C
  - **0-stars Freezer:** -6°C to 0°C
  - **Koeling:** -2°C to +3°C
  - **Vers voedsel:** 0°C to +4°C
  - **Wine:** +5°C to +20°C

## Product Usage Instructions

- **Safety Instructions:**

- Ensure the appliance has a minimum clearance of 4 cm around it.
- Avoid damaging the refrigerant circuit pipes of the appliance.
- Make sure ventilation openings in the housing of the appliance or the built-in structure are not blocked.
- **Appliance Description:**
  - The appliance has different compartments suitable for storing various types of food at specific temperature ranges.
  - Refer to the specifications for recommended temperature settings for each compartment.
- **Using the Appliance for the First Time:**
  - Before placing food in the appliance, ensure it is properly installed and connected to a power source following the manufacturer's guidelines.
- **How to Operate the Appliance:**
  - Adjust the temperature settings as per the type of food you are storing in each compartment.
  - Refer to the recommended temperature ranges for different types of food.
- **Placing Food in the Appliance:**
  - Organize your food items in the appropriate compartments based on the recommended temperature settings.
  - Follow the guidelines provided for storing different types of food.
- **Cleaning & Maintenance:**
  - Regularly clean the appliance inside and out to ensure no visible damage.
  - Contact customer service if you notice any signs of damage to the appliance or power cable.
  - Use only manufacturer-approved accessories and spare parts for safety reasons.
- **Troubleshooting:**
  - Refer to the troubleshooting section in the manual for common issues and solutions.
  - Do not attempt to repair electrical components yourself; contact authorized service personnel for assistance.
- **Frequently Asked Questions (FAQ):**
  - **Q: How often should I clean the appliance?**
    - **A:** It is recommended to clean the appliance regularly to prevent any buildup of dirt or debris that may affect its performance.
  - **Q: Can I store fresh meat in the freezer compartment?**
    - **A:** Yes, you can store fresh meat in the freezer compartment, ensuring it is properly wrapped or sealed to maintain freshness and prevent freezer burn.
  - **Q: What should I do if the appliance is not cooling properly?**
    - **A:** Check if the temperature settings are correct and that the vents are not blocked. If the issue persists, contact customer service for assistance.

## Safety Instructions

### GENERAL SAFETY INSTRUCTIONS

- Fully read the instruction manual before using the appliance.
- Carefully store the instruction manual for future reference or subsequent owners.
- Only use this appliance for the purpose described in the instruction manual. This appliance is intended as a built-in device.

- Do not allow children to play or hide inside the appliance – there is a risk of becoming trapped and suffocating.
- Keep the appliance out of reach of children. Children do not see the dangers when handling electrical appliances. Therefore, never allow children to work with electrical appliances without supervision.
- Keep the appliance and supply cord out of reach of children younger than 8 years of age.
- The manufacturer is not responsible for damage which is caused by improper use or incorrect operation.
- **Warning:** Danger of suffocation! Packaging material is dangerous to children. Keep the packaging material out of the reach of children.
- This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they are supervised by someone who is responsible for their safety, or have been instructed in how to use the appliance safely and have understood the risks involved in not using it properly.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be performed by children unless they are supervised.
- This appliance is intended to be used in household and similar applications, such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farmhouses and by clients in hotels, motels and other residential environments;
  - Bed and breakfast type environments;
  - Catering and similar non-retail applications.
- If the safety instructions and warnings are not observed, the manufacturer cannot be held liable for any resulting damage.
- Damage as a result of incorrect connection, incorrect installation or incorrect use does not fall under the warranty.

## REFRIGERANT

### Caution: Risk of fire

- The refrigerant isobutene R600a is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.
- **WARNING:** Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that the tubing of the refrigerant circuit is not damaged before disposal.
- If the refrigerant circuit should be damaged, avoid open flames and sources of ignition and thoroughly ventilate the room in which the appliance is situated. It is dangerous to alter the specifications or modify this product in any way. Any damage to the power supply cord may cause a short circuit, fire, and/or electric shock.

## SAFETY INSTRUCTIONS FOR INSTALLATION

- The appliance must be handled and installed by two or more persons.
- Wear safety gloves to unpack and install the appliance.
- Only connect the appliance to alternate current, to an earthed mains socket. Make sure that the voltage in your home corresponds with the voltage printed on the type plate of the appliance.

- After unpacking the appliance, make sure that it has not been damaged during transport. If this is the case, do not install the appliance before consulting the dealer of our service department.
- The appliance may only be fitted by a certified installer.
- The electrical connection must meet national and local regulations.
- The connection point, mains socket and mains plug must always be accessible.
- The appliance must always be earthed.
- Do not operate the appliance with an external timer or a separate remote control system.
- Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

**Warning:** Risk of electric shock

- Make sure that the power supply cord does not get damaged during installation or is running along sharp edges.
- Be careful not to damage the floor when you move the appliance.
- When moving the appliance, do not lift it or pull it by the door(s).
- Make sure the appliance is not positioned near a heat source.
- Do not place heat-generating appliances such as (microwave) ovens above the appliance.
- Make sure that there is sufficient ventilation, and leave a space of at least 4 cm at the back of the appliance.

**Caution:**

- Do not damage the refrigerant circuit pipes of the appliance.

**Caution:**

- Keep ventilation openings, in the appliance enclosure or the built-in structure, clear of obstruction.
- Install the appliance on a firm and stable surface.
- Install the appliance in a dry and well-ventilated area. The appliance is intended for operation in environments where ambient temperatures fall within the following ranges, depending on the appliance.
- The appliance may not work properly if it is left for a long time at a temperature outside the specified range.

Climate class	Ambient temperature
SN	From 10°C to 32°C
N	From 16°C to 32°C
ST	From 18°C to 38°C
T	From 18°C to 43°C

**SAFETY INSTRUCTIONS FOR OPERATION**

- Only use the refrigerator compartment for storing fresh food and the freezer compartment only for storing frozen food, freezing fresh food and making ice cubes.
- Do not use the appliance outdoors.

- Wait at least three hours before switching the appliance on, to ensure the refrigerant circuit is fully efficient.

**Warning:** Risk of fire

- Do not store explosive substances such as aerosol cans or other flammable materials in or near your appliance.
- Do not store glass bottles or containers with liquids in the freezer compartment, since they may break.
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer, since they may cause frost burns.
- Do not re-freeze frozen goods after they have thawed out. This may cause health issues like food poisoning.

**SAFETY INSTRUCTIONS FOR CLEANING AND MAINTENANCE**

- Always disconnect the appliance from the mains supply before carrying out any work or maintenance on it.
- Do not use a high-pressure cleaner or steam cleaner to clean the appliance

**Caution:**

 
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use abrasive or harsh cleaners such as window sprays, scouring cleaners, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior and door lines or gaskets.
- Do not use paper towels, scouring pads or other harsh cleaning tools.

**Warning:** Risk of electric shock

- Always carry out regular checks of the appliance and the power supply cord to ensure no damage is evident.
- Should there be any signs that the appliance or power supply cord is damaged to the slightest degree, contact the customer service department.
- If the power supply cord is damaged, it must only be replaced by the manufacturer, its service organization agent or similarly qualified persons, to prevent hazardous situations.
- For your safety, only use the accessories and spare parts from the manufacturer that are suitable for the appliance.

**Warning:**

- The light source shall be replaced by a certified installer.
- **Energy efficiency class:** F

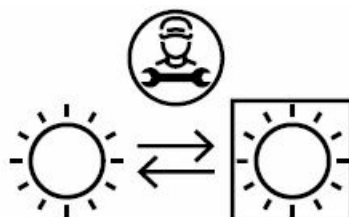

## **INFORMATION ABOUT**

### **INFORMATION ABOUT HOW TO AVOID FOOD CONTAMINATION**

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase in the temperature in the compartments of the appliance.
- Clean regularly surfaces that come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp. [°C]	Appropriate food
1	Fridge	+2 ~ +8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.
2	(***)*-Freezer	≤-18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
3	***-Freezer	≤-18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
4	** -Freezer	≤-12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
5	*-Freezer	≤-6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
6	0-star	-6 ~ 0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (non-freezable foods).
7	Chill	-2 ~ +3	Fresh/ frozen pork, beef, chicken, freshwater aquatic products, etc. (7 days below 0°C and above 0°C is recommended for consumption within that day, preferably no more than 2 days). Seafood (less than 0 for 15 days, it is not recommended to store above 0°C).
8	Fresh food	0 ~ +4	Fresh pork, beef, fish, chicken, cooked food, etc. (recommended to eat within the same day, preferably no more than 3 days).
9	Wine	+5 ~ +20	Red wine, white wine, sparkling wine, etc.

#### NOTE:

- Please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch it off.
- Defrost, clean and dry it and leave the door open to prevent mould developing within the appliance. Water dispenser cleaning (special for water dispenser products):
- Clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days.

## **WARNING**

- Food needs to be packed in bags and liquids in bottles or capped containers before putting into the refrigerator to avoid the problem that the inside of the appliance is not easy to clean.

## **ENVIRONMENTAL PROTECTION**

The appliance is energy-efficient. Save even more energy when using the appliance with the following tips, and how to dispose of your appliance in an environmentally-friendly way.

### **Saving energy**

- A high ambient temperature will hurt the energy consumption. Direct sunlight and other heat sources near the appliance also have a negative effect.
- Keep ventilation holes free. Covered and dirty holes cause a high energy consumption. Ensure sufficient space around the refrigerator, so that proper ventilation and air flow around the appliance is possible.
- Do not open the doors of the appliance more often than necessary and leave the doors open as briefly as possible.
- The distance between the shelves and the rear wall ensures free air circulation. Do not place food against the rear wall.
- Set the thermostat to a lower setting if circumstances allow.
- Allow cooked food that you want to store in the appliance to cool down to room temperature before placing it in the appliance.
- A door rubber that does not close properly could increase energy consumption. Therefore, have it replaced by a qualified person in time?
- If the instructions are not observed, this could lead to a higher energy consumption.

 
### **Environmentally-friendly disposal Recycling – WEEE**

- Dispose of packaging in an environmentally-friendly manner.
- This appliance is labelled per European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE).
- The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## **Appliance description**

1. Glass shelf
2. Thermostat with interior light
3. Glass shelves

4. Glass shelf on the vegetable drawer
5. Vegetable drawer
6. Bottle rack
7. Door compartments
8. Egg tray

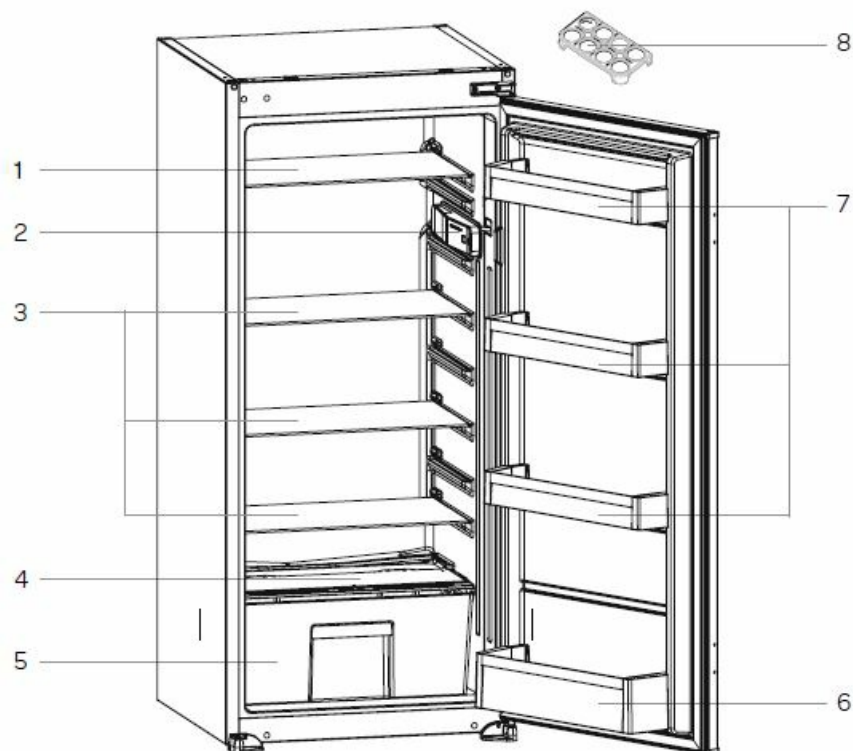


## Before the first use

- Leave the appliance to stand for at least 3 hours before you insert the plug into the socket. Otherwise, you may damage the compressor.
- Before you use the appliance for the first time, please do as follows: Carefully unpack the appliance and remove all the packaging material. Keep the material (plastic, polystyrene and cardboard) out of reach of children.
- Check the appliance after unpacking for any damage, possibly from transportation. Place the appliance on a flat and stable surface.
- The installation procedure is given in the Installation Instructions.
- Clean the appliance thoroughly, especially in the interior, before use (see Cleaning & Maintenance).
- The installation and electrical connection must be carried out by a qualified technician, following installation instructions and local regulations.
- The appliance must be connected with a properly installed fused socket. The power supply (AC) and voltage at the operating point must correspond with the details on the rating label of the appliance.
- The rating label is located on the inside left of the appliance.
- When the product is plugged in for the first time, the interior lights may turn on 1 minute late due to opening tests.
- There can be an odour when you first switch on the appliance. It will disappear after the appliance starts to cool.
- First, clean the interior of the appliance. Use warm water and a neutral detergent. After cleaning, rinse the interior with clean water and rub dry. Leave the appliance to dry for 1 to 2 hours.

## How to Operate the Appliance

### SETTING THE TEMPERATURE

 - The temperature set button allows you to set the temperature of the appliance.
- Use the temperature set button also for activating the super cooling mode.
- The appliance will cool continuously until the set temperature has been reached.
- Allow the appliance to reach the required temperature with no food in the larder.
- Usually, this will take 2 to 3 hours. After that, you can set the required temperature and fill the refrigerator with food.
- Repeatedly press the set button until the indicator light of the required temperature lights up.
- It may be set to any value ranging from MIN to MAX and supercool mode.
- As you press the temperature set button from MIN to MAX, the temperature decreases.

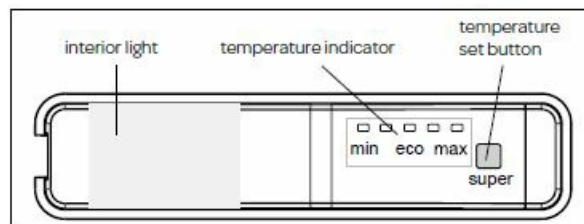

### SUPER COOL When can super cool be used?

- If you want to cool large quantities of food
- If you want to cool food quickly
- If you want to store seasonal vegetables properly for a longer period

### activating super cool

1. Set the temperature to MAX with the set button.
2. Hold down the set button for 5 seconds until all indicator lights light up constantly. The indicator lights remain on during super cool.
3. Hold down the set button for 5 seconds to deactivate the super cool mode.
  - **NOTE:** Super Cool will be cancelled automatically after max. 48 hours.

### Attention:

- The ambient air temperature, how often the door is opened and the position of the appliance can affect the internal temperature. These factors must be taken into account when setting the thermostat.
- Never introduce volatile, inflammable or explosive fluids such as alcohol, acetone or petrol because of the risk of explosion.
- A 5-minute delaying function is applied to prevent damage to the compressor of your appliance, when you take the plug out and then plug it in again to operate it or when an energy breakdown occurs.
- Your appliance will start to operate normally after 5 minutes.

### STAND-BY MODE

When can the stand-by mode be used? If you will not use your appliance for a long time (e.g. in summer holidays). In standby mode; all components will be disabled. activating stand-by mode

 
1. Set the temperature to MIN with the set button.
2. Hold down the set button for 5 seconds until all indicator lights blink three times.
3. If you push the set button while the appliance is in standby mode, all indicator lights will blink three times to show standby mode is active.
4. Push and hold the set button until the display returns to normal working.

## **DOOR OPEN ALARM**

- If the door is left open for more than 2 minutes, the interior light will start flashing.

## **ACCESSORY**

- Bottle holder: use the bottle holder to prevent bottles from slipping or falling over.

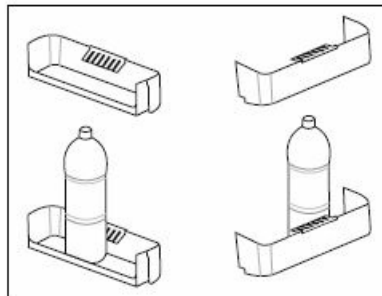

## **Food Storage in the Appliance COOLING COMPARTMENT**

- The cooling compartment is used for storing fresh food for a few days.
- Do not place food in direct contact with the rear wall of the cooling compartment. Leave some space around the food to allow the air to circulate.
- Do not place hot food or evaporating liquids in the appliance.
- Never introduce volatile, inflammable or explosive fluids such as alcohol, acetone or petrol because of the risk of explosion.
- Always store food in closed containers or wrapped. To reduce humidity and avoid the formation of frost, never place liquids in unsealed containers in the appliance.
- The meat of all types, wrapped in packages, is recommended to be placed on the glass shelf just above the vegetable drawer, where the air is cooler.
- You can put the fruits and vegetables into the vegetable drawer without the packaging.
- To avoid the cold air escaping, try not to open the door too often and not leave the door open for a long time.

 
## **Cleaning & Maintenance**

- Before cleaning the larder, always unplug the appliance.
- Remove all food from the appliance. Clean the interior of the appliance. Use warm soapy water with a neutral cleaning agent to prevent nasty smells.
- Wipe the inside of the appliance after cleaning with clean water and properly wipe everything dry.

- Leave the appliance to dry for 1 to 2 hours. The shelves, vegetable drawer and door compartments can be removed from the appliance easily and washed by hand.
- The components may not be cleaned in the dishwasher.
- For areas in the appliance that are difficult to clean, such as small openings or corners, it is recommended to wipe them clean regularly with a soft cloth or brush.
- If necessary, a tool can be used such as thin sticks (cocktail sticks, for example), to make sure no contamination can occur in these areas.
- Clean the outside of the appliance and the door gasket with a soft damp cloth.
- Clean the rear of the appliance at least once per year with a vacuum cleaner so that the condenser and ventilation holes remain clean and the appliance can function as optimally as possible.
- Do not use hard brushes, steel wool, abrasives (such as toothpaste), organic solvents (such as alcohol, acetone, oil, etc.), boiling water, acid or alkaline products to clean the appliance, as this could damage the surface and interior of the appliance.
- Boiling water and benzene could deform or damage plastic components.

## DEFROSTING THE COOLING COMPARTMENT

- The defrosting of the cooling compartment is completely automatic.
- Droplets of water on the rear wall of the cooling compartment indicate that the periodic automatic defrost cycle is in progress.
- The defrost water is automatically routed to a drain outlet and into a container from which it evaporates.
- The drain hole should be cleaned periodically with the defrost drain plug to prevent the water from collecting on the bottom of the appliance instead of flowing out.

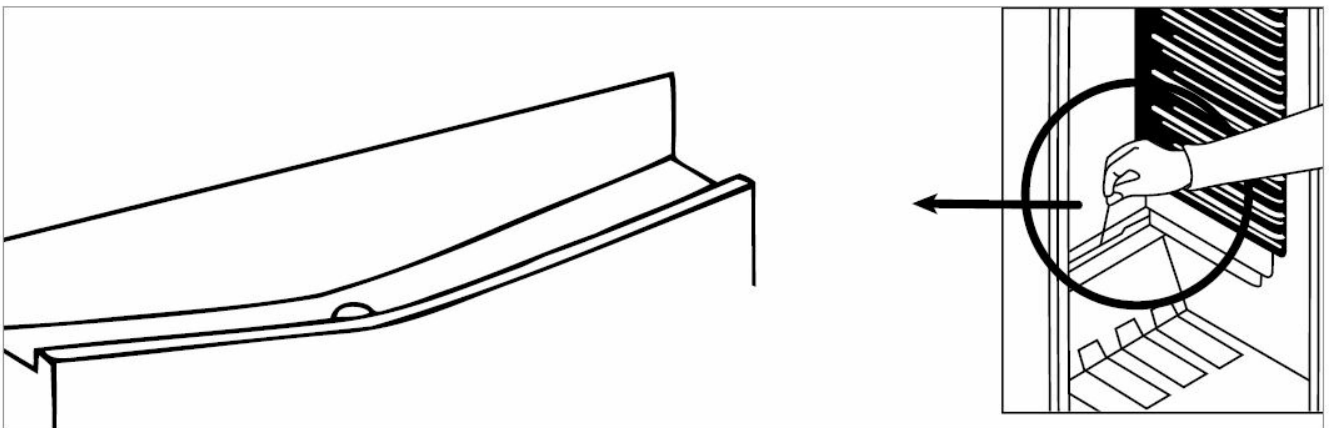

## REPLACING THE LED LIGHTING

- This appliance is equipped with an LED light bulb. It can be used for a long time.
- In case, the LED bulb is blown, it must be replaced by a qualified person to avoid any hazard.
- Contact the Inventum service department.

## TIPS

- High ambient temperatures hurt energy use. Keep the appliance in a position away from direct sunlight or other sources of heat.
- Keep ventilation openings free. Clogged openings lead to higher use of energy.

- Try not to open the door too often, especially when the weather is wet and hot. Once you open the door, mind to close it as soon as possible.
- The space between the shelves and the rear wall of the cooling compartment must be unobstructed to allow the cool air to circulate. Therefore don't place any food items against the back.
- Set the thermostat to a lower setting when the circumstances allow it.
- Before storing freshly cooked food, make sure the food has cooled at least to room temperature.
- Ice and frost layers increase energy consumption, so clean the appliance as soon as the layer is 3 to 5 mm thick.
- If the gasket is damaged or if it turns out that the sealing is poor, the energy consumption is substantially higher. To restore efficiency, replace the gasket.
- Keep the condensor on the rear wall always clean, and free of dust or any impurities.
- Always consider the instructions, otherwise, the energy consumption is substantially higher.
- If you will not use your appliance for a long time (e.g. in the summer holidays), activate the standby mode. Clean your appliance. Leave the door open to prevent humidity and smell.

## **Troubleshooting**

**If your appliance is not working properly, it may be a minor problem, therefore check the following:**

Problem	Cause	Solution
The appliance is not functioning; the light does not work	The appliance is not plugged in	Plug the appliance in
	There is a power failure	Check the fuse box
The temperature inside the appliance is too high or too low	The thermostat has been set incorrectly	Set the thermostat correctly
	The door of the appliance is opened too frequently or remains open for too long	Open the door less often and/or reduce the time that the door remains open
	A large amount of warm food has been placed in the appliance in the last 24 hours	Temporarily set the thermostat to a lower position
	The ambient temperature is higher or lower than the temperature indicated in the table with technical data	The appliance is intended for operation in an ambient temperature indicated in the table with technical data supplied with the appliance
	Air circulation vents are blocked	Clean the ventilation openings
The interior light flashes	The door has been open for too long or does not close properly	Check there is nothing between the door that prevents it from closing and close the door.
Water is running out of the appliance	The drain outlet is blocked	Clear the drain outlet with a skewer
The appliance is excessively noisy	Has the appliance been installed correctly?	Check the installation
	The appliance is standing against something	Place the appliance in such a way that it is not standing against anything
The inside light is not working	Lamp is defective	Contact the customer service department

**Note:** During normal use of the cooling appliance, different types of noises can occur that do not have any effect on the correct operation of the appliance. Noises that can be heard during normal use of the appliance are caused by the operation of the thermostat, compressor (activation), and cooling system (shrinkage and expansion of the material under the influence of temperature differences and flow of cooling liquid). [www.inventum.eu](http://www.inventum.eu).

## Documents / Resources



[INVENTUM IKK1222S Built in cooler](#) [pdf] User Manual  
IKK1222S Built in cooler, IKK1222S, Built in cooler, in cooler, cooler

## References

- [📄 Inventum Huishoudelijke Apparaten - Altijd 5 jaar garantie!](#)
- [📄 Algemene voorwaarden | Inventum](#)
- [📄 Inventum Huishoudelijke Apparaten - Altijd 5 jaar garantie!](#)
- [User Manual](#)

### Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.