




INVENTUM IOM6170RK Build-In Oven Instruction Manual

[Home](#) » [INVENTUM](#) » INVENTUM IOM6170RK Build-In Oven Instruction Manual 

INVENTUM

maakt 't moment

BUILT-IN OVEN

inbouw oven

IOM6170RK

instruction manual

5 JAAR
INVENTUM
GARANTIE

OMRUIL
SERVICE

OER
HOLLANDS
SINDS 1908



Contents


- [1 Safety instructions](#)
- [2 Appliance description](#)
- [3 Before first use](#)
- [4 Using the oven](#)
- [5 Cleaning & maintenance](#)
- [6 Problems & solutions](#)
- [7 Installation instructions](#)
- [8 Product fiche](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Safety instructions




- Please read these instructions before operating the appliance and retain for future use.
- The appliance is intended solely for domestic use within the home. Do not use corrosive chemicals or vapors in this appliance. This oven is especially designed to prepare food. It is not designed for industrial or laboratory use.
- Do not place any object between the door of the oven. Don't allow soil or cleaner residue to accumulate on the sealing surfaces.
- **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- It is hazardous for anyone other than a competent person to carry out any service or repairs that involve the removal of the cover.




- **Attention!** Avoid touching hot surfaces, especially the inside of the appliance.
- An electrical appliance is not a toy, and should therefore always be placed outside the reach of children. Children are not always able to understand potential risks. Teach children a responsible handling of electrical appliances.
- This appliance shall not be used by children from 0 to 8 years. This appliance can be used by children over the age of 8 and above if they are continuously supervised. This can be used by people with reduced physical, sensory or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and maintenance shall not be made by children.
- Children must not play with the appliance.
- Only use utensils suitable for use in ovens.
- The oven should be cleaned regularly and any food deposits should be removed.
- The appliance may not be cleaned with a high-pressure cleaner or a steam cleaner.
- When you see smoke, switch off and unplug the oven. Keep the door closed in order to stifle any flames.
- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Do not place accessories on the open oven door.
- Never cover the bottom of the oven with aluminium foil. The foil blocks the heat flow, which may result in inferior cooking results. This can also damage the enamel of the bottom of the oven.
- The oven has a fan that cools the oven casing. The fan may run for some time after the oven is switched off.

- The appliance should only be connected by a registered installer.
 - Faulty parts may only be replaced by original parts. The manufacturer can only guarantee that original parts meet safety requirements.
 - Damage caused by incorrect connection, incorrect fitting, or incorrect use is not covered by the warranty.
 - If the connecting cable is damaged, it may only be replaced by the manufacturer, the manufacturer's service organisation or equivalently qualified persons, in order to avoid dangerous situations.
 - The electrical connection must comply with national and local regulations.
 - The wall plug socket and plug should always be accessible.
 - The appliance should not be connected to the network via a multiplug socket or extension lead, as the safe use of the appliance can then not be guaranteed.
 - The appliance must always be earthed.
 - If the connecting cable is damaged, it may only be replaced by the manufacturer, the manufacturer's service organisation or equivalently qualified persons, in order to avoid dangerous situations.
 - Only use and store the appliance indoors.
 - Do not use the oven near water, in a wet basement/ garage or near a swimming pool.
 - Do not cover any vents of the oven.
 - Do not let the cord hang over the edge of the table or counter and keep it away from the heated surface.
 - Failure to maintain the oven clean could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
 - The appliance is not intended to be operated by means of an external timer or separate remote-control system.
 - Before plugging into a socket, check that the voltage in your home corresponds with the voltage printed on the appliance.
 - Never unplug it from the socket by pulling on the cable.
 - Always ensure that your hands are dry before handling the plug, switch or power cord.
 - Should you decide not to use the appliance anymore, make it inoperative by cutting the power cord after removing the plug from the socket. We also recommend making all potentially dangerous parts of the appliance harmless, particularly for children who might be tempted to play with it.
 - Never immerse any part of the main body, lid, power cord and plug in water or any other liquid to protect against electrical hazards.
 - If the appliance is used for other purposes than intended, or is it not handled in accordance with the instruction manual, the full responsibility for any consequences will rest with the user. Any damages to the product or other things are not covered by the warranty.
-  If you decide not to use the appliance any more due to a defect, we recommend cutting off the cord after removing the plug from the wall socket. Household appliances are not normal waste. Take the appliance to the waste processing department concerned of your municipality.

Appliance description

1. Handle
2. Oven door
3. Oven function knob (retractable)
4. Display
5.  Cooking timer key
6.  Clock key
7.  Pause/ stop key

8.  Start key
9. [- / +] knob (retractable)
10. Oven lamp
11. Insertion slots [9]
12. Baking tray
13. Rack







Before first use




Before you use the appliance for the first time, please do as follows: Carefully unpack the appliance and remove all the packaging material. Keep the material (plastic bags and cardboard) out of reach of children. Check the appliance after unpacking for any damage, possible from transportation. Check that the voltage in your home corresponds with the voltage printed on the appliance and plug it in a socket. Follow the installation instructions in chapter 7 for installing the oven.

Clean the oven and the accessories with warm water and a mild detergent. Rinse well and dry thoroughly. Operate the oven for about 90 minutes at 250°C to burn off all traces of grease which might otherwise create unpleasant smells when preparing food. Make sure to ventilate the room during this process.

Using the oven

To set the oven, use the two retractable knobs and the four keys.


Oven function knob		for selecting an oven function
[- / +] knob		for setting the time and the temperature
Cooking timer key		
Clock key		
Pause/ and stop key		for pausing, stopping or canceling a program selection
Start key		for starting the oven and to confirm a selection

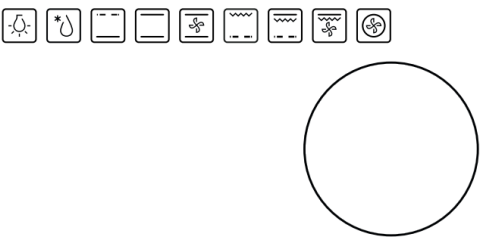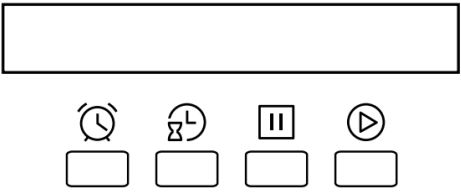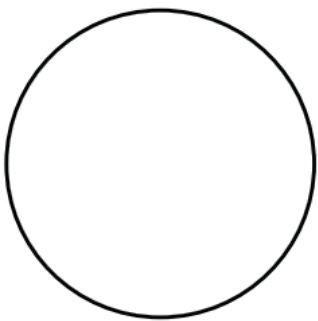Oven function knob	Display	-/+ knob
		



Switching the oven on and off

SWITCHING ON










 
Switch the oven on according to the following steps:

- Press the retractable oven function knob and turn it left or right to select the desired oven function. The corresponding symbol lights up.
- Press the retractable [-/+] knob and turn it left or right to select the desired temperature.
- Press the start key  to confirm the setting and start the oven. The cooking time is automatically set to 9 hours.

SWITCHING OFF

To switch the oven off, press the stop key  twice (pressing the stop key  once, will only pause the program).




The oven has the following functions:

Oven function		Description
	Oven light	Oven lamp, can be switched on independent from the oven. When selecting an oven function the lamp automatically switches on and stays on while oven is in use, except when using the ECO function.
	Defrost	For slowly thawing frozen food. The circulation of air at room temperature enables quicker defrosting of the frozen food (without using any heat).
	Bottom heating element	Only the bottom heating element radiates heat. This is ideal for slow cooking dishes such as casseroles, stews and pastries where a crispy base is desired. The range is: 60 -120°C.
	Top and bottom heating element	The dish is heated by the radiation heat of the top and bottom element. Always place the dish in the centre of the oven. For pizzas, meat, flans or cake. The range is: 50 – 250°C.
	Conventional with fan	The heat of both top and bottom heating elements is circulated inside the oven by the fan. The dish is being cooked evenly all around. The range is: 50 – 250°C.
	Grill	The inner part of the grill element is active. For grilling meat, fish, toast or gratins. The range is:180 – 240°C.
	Double grill	The inner heating element and the outer heating element in the top of the oven are working. It is suitable for grilling larger quantities of food. The range is:180 – 240°C.
	Double grill with fan	The inner heating element and the outer heating element in the top of the oven are working with the fan. It is suitable for grilling a large amount of meat. The range is: 80 – 240°C.
	Turbo convection	The heat of the element and the fan ensures the dish is heating all around by hot air. The range is: 50 – 240°C.
	ECO function	This is an optimised heating function designed to save energy when preparing food. The top and bottom elements are on. The oven lighting is off during use of this function.

Setting the time of day

As soon as you plug the appliance in, 0:00 appears in the display. Ensure the correct time of day is set before using the oven.




Attention: the clock is a 24 hour clock, for example 2PM is shown as 14.00.



- Press the clock key . The hour indication will blink.
- Press the retractable [-/+] knob and turn it left or right to adjust the hour setting (0-23).
- Press the clock key  again. The minute indication will blink.
- Turn the [-/+] knob left or right to adjust the minute setting (0-59).
- Press the clock key  again to confirm the time. The colon “ : ” in the display blinks and the time of day is

shown.

Setting the cooking timer


The cooking timer can be used to receive an audible signal when the set time has passed. The cooking timer has no influence on the functioning of the oven and can be used without switching on the oven.

- Press the cooking timer key  to select the cooking timer.
- Turn the [-/+] knob left or right to adjust the hour setting (0-9).
- Press the cooking timer key  again. The minute indication will blink.
- Turn the [-/+] knob left or right to adjust the minute setting (0-59).
- Press the start key  to confirm the time. The colon “ : ” will blink in the display and the time will count down.

Note: the beep signal sounds 10 times after the cooking timer has ended. Setting the cooking timer can be canceled by pressing the stop key . Press the stop key twice to cancel the cooking timer after it has been set completely. The cooking timer symbol  disappears.




Automatic switch off according to cooking time

When setting the duration of the cooking time, the oven will automatically switch off as soon as the set cooking time has passed.





- Turn the oven function knob to the desired oven setting. The corresponding symbol lights up.
- Turn the [-/+] knob left or right to select the desired temperature.
- Press the start key  to confirm the setting and start the oven. The cooking time is automatically set to 9 hours.
- Turn the oven function knob to the desired cooking time and press the start key again to confirm the adjusted cooking time.

Setting a delayed starting time


















Set the time the oven has to start. The oven will automatically switch on at the time you have set at the preset oven function and temperature.

- Press the clock key .
- Turn the [-/+] knob left or right to adjust the hour setting (0-23).
- Press the clock key  again. The minute indication will blink.
- Turn the [-/+] knob left or right to adjust the minutes (0-59).
- Attention: do not press the clock key, but select the desired oven function with oven function knob.
- Press the start key  to set the temperature and the cooking time.
- Select with the [-/+] knob the desired temperature and select after doing that, with the oven function knob the


 

 

 
desired cooking
time.

- Press the start key  to confirm all the settings. The time of day will re-appear in the display, as well as the symbol . The setting of the delayed time can be checked by pressing the clock key . After 3 seconds the time of day will be shown again.
- As soon as the clock has reached the set starting time, a beep signal will sound and the oven automatically switches on. The symbol  disappears.




The table below is indicative for preparing different dishes.

											
	Cake		Cupcakes & cookies		Sausages	Beef		Pork		Poultry	
Function											
°C	170-190	170-190	170-190	150-170	200	225-250	160-180	210-230	160-190	200	200
Slot	1-3	3-5	1-3	3-5	6-7	3	3	3	3	5	2-3
Time (min.)	35-45	35-45	20-40	10-40	10-15	120-150	120-160	90-120	90-120	50-60	45-60

The table below is indicative for preparing dishes with the ECO function.





Recipes	Function	Temperature – °C	Slot	Time – min.	Pre-heat
Potato cheese gratin	 	180	1	90 -100	No
Cheese cake	 	160	1	100 -150	No
Meatloaf	 	190	1	120 -130	No

Switching on the oven lamp

- Turn the oven function knob to the desired function , the corresponding symbol lights up.
- Press the start key . 0:00 and the lamp symbol  light up. The oven lamp lights up and the colon “:” blinks.

Checking the settings



Checking the settings is possible with a few functions. After 3 seconds the time of day will be displayed again.

- Press the clock key  while the oven is switched on to see the time of day.
- When the cooking timer has been set, press the cooking timer key  to check the remaining time.
- Press the clock key  if you want to check the time of day while the cooking timer is activated.
- When you have set a delayed starting time, press the clock key  to check the starting time.



Setting the child lock function

The function child lock prevents unwanted use of the oven.

Activating the child lock:


Press the start key  and the stop key  simultaneously for more than 3 seconds. A long beep signal sounds and the symbol indicates the child lock has been activated.

De-activating the child lock:



Press the start key  and the stop key  simultaneously for more than 3 seconds when the child lock is activated. A long beep signal sounds and the symbol disappears. The child lock has been de-activated.

starting/ pausing / canceling a function


Start

- Press the start key  to activate the oven when a cooking time is set.

Pause


- Press, during cooking, the pause/ stop key  once to pause the functioning of the oven. To re-activate the functioning of the oven, press the start key  again.

Stop or cancel

- To switch the oven off or to cancel a setting, press the stop key  twice.

Energy saving mode LED display

To save energy, it is possible to automatically switch off the LED display.

- Press the start key  for 3 seconds, while the display is in standby mode. After 3 seconds a signal sounds to confirm. The LED display will no longer be lit.

- When no knob or key has been touched in 10 minutes, the LED display will also automatically switch off.
- When the LED display is off, press the pause/ stop key for 3 seconds to de-activate the energy saving mode of the LED display.

After 3 seconds a signal sounds to confirm. The LED display will be lit and the clock stays visible.

Cleaning & maintenance

Switch the appliance off before cleaning and let it cool down. Do not clean the appliance with a pressure cleaner or steam cleaner.

Interior

Clean the inside of the appliance after every use. Use a damp cloth. To clean the oven thoroughly, an oven spray may be used. Rinse well. Dry the inside with a dry cloth.

Accessories

Clean the accessories, such as the baking tray and the grid with warm water and a mild detergent. Dry thoroughly before reusing.

Exterior

Clean the exterior of the appliance with a damp cloth or sponge. If necessary, clean the exterior with warm water and a mild detergent.

Also clean the oven door and the door seal.

Tips for cleaning

- Clean the oven after every use to prevent food residue to stain.
- Grease can be best removed when the oven is still a bit warm. Use warm water and a mild detergent.
- Use for stubborn stains a special oven cleaner. Rinse the residue of the cleaning agent with water.
- Never use any abrasive pads or corrosive cleaners.
- Make sure not to spray on the heating element when using a special oven spray.

Removing and installing the oven door


The oven door can be removed to clean the interior and the door easily.

REMOVE

- To remove the oven door, open it completely.
- Lift the two levers at the hinges. If necessary use a small screwdriver.
- Carefully close the door as far as the first stop, caused by the raised levers.
- Lift the door upwards and outwards, to remove it from the mountings.

INSTALL


- Place the hinges of the oven door in the mountings. Make sure the door is aligned straight.
- Lower the two levers at the hinges back.
- Close the oven door.

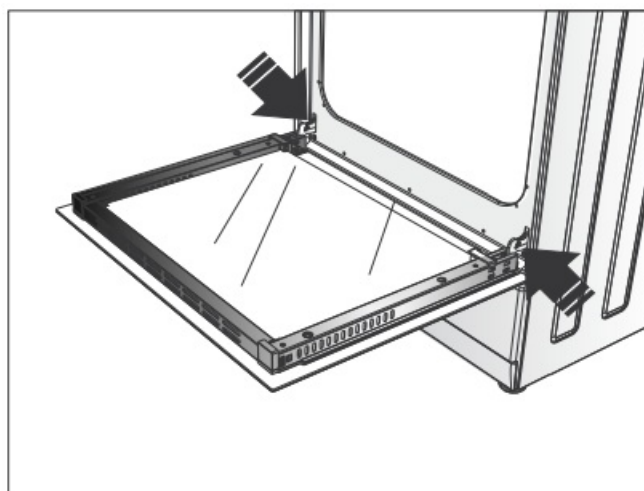

Replacing the oven lamp

Before proceeding, disconnect the appliance from the power line to avoid the possibility of electric shock.

- Unscrew the glass cover of the lamp.
- Replace the light bulb with a new equal bulb (25 W, 220-240V, T300°C halogen lamp).
- Refit the glass cover.
- Plug the appliance in.

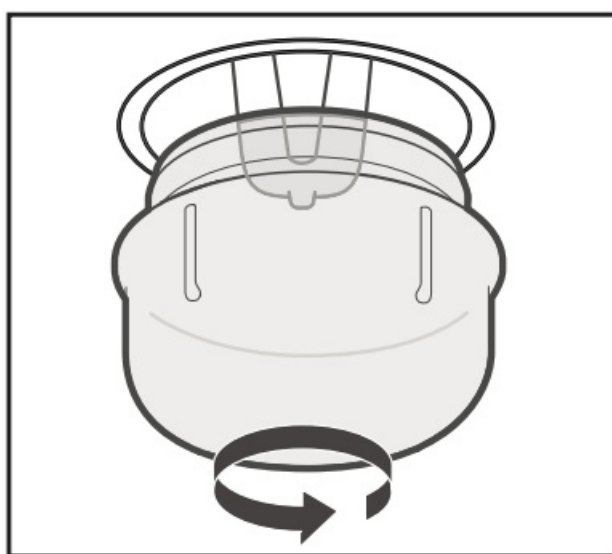

Problems & solutions

Problem	Solution
The oven lamp is not lit.	Replace the oven lamp according to the instructions.
The oven is not heating up.	<ul style="list-style-type: none"> – Has the correct temperature and oven function been set? – Is the door of the oven closed properly?
The display is not lit.	<ul style="list-style-type: none"> – Is the energy saving mode activated? Press any key to activate the LED display.


Installation instructions

- The safety during use can only be guaranteed when the hob is installed correctly and according to the regulations. The installer is responsible for any damage caused by a faulty installation.
- The electrical connection must be made by a qualified electricien. This person is aware of the national and local regulations the installation must comply with.
- The appliance falls under protection class III and can only be used in combination with a grounding conductor connection. The manufacturer accepts no responsibility for any malfunction or damage caused by incorrect electrical installations.
- The appliance must be connected to a fixed installation and the means of disconnecting it from the fixed installation must be installed according to the installation instructions.
- The connection cable must hang freely. Do not tie the power cable or pass it along sharp edges. It must be positioned so that it does not touch any of the hot parts of the oven.
- The connection point, the wall socket and/or plug must always be accessible.
- The cabinet into which the oven is fitted, must be heat resistant ($> 100^{\circ}\text{C}$).
- Ensure that the cabinet into which the oven is installed is secure. For example, by mounting it to the adjoining elements.
- Damage caused by incorrect connection, incorrect use or incorrect fitting is not covered by the guarantee.

Attention: any change to the appliance's interior, including fitting and changing the power cable, must only be performed by a qualified electricien.

INSTALLATION DIMENSIONS


In the drawing below, all the dimensions are displayed in mm.

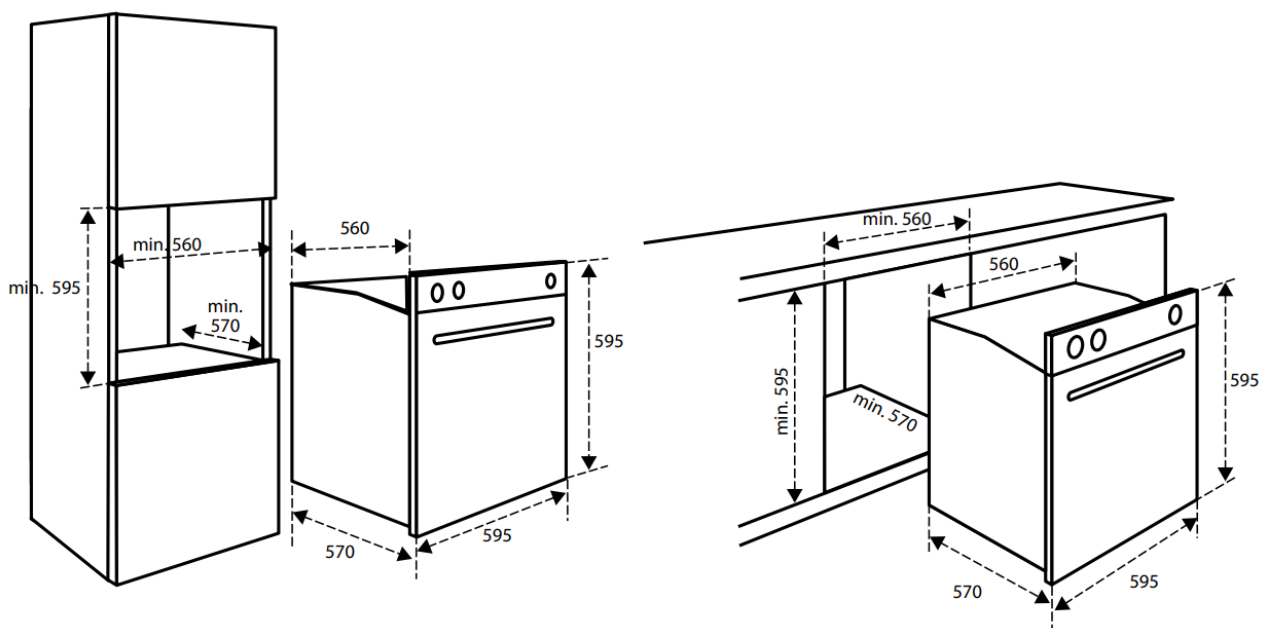

ELECTRICAL CONNECTION

Check that the voltage in your home corresponds with the voltage printed on the appliance.

These groups in the meter must be secured with at least 16 amps each. The connection cable must have a cross-section of at least 2.5mm^2 and must have a length of at least 1.5 m. When the cable is too short, you have no room to already connect the oven and place it against the wall before plugging it in.

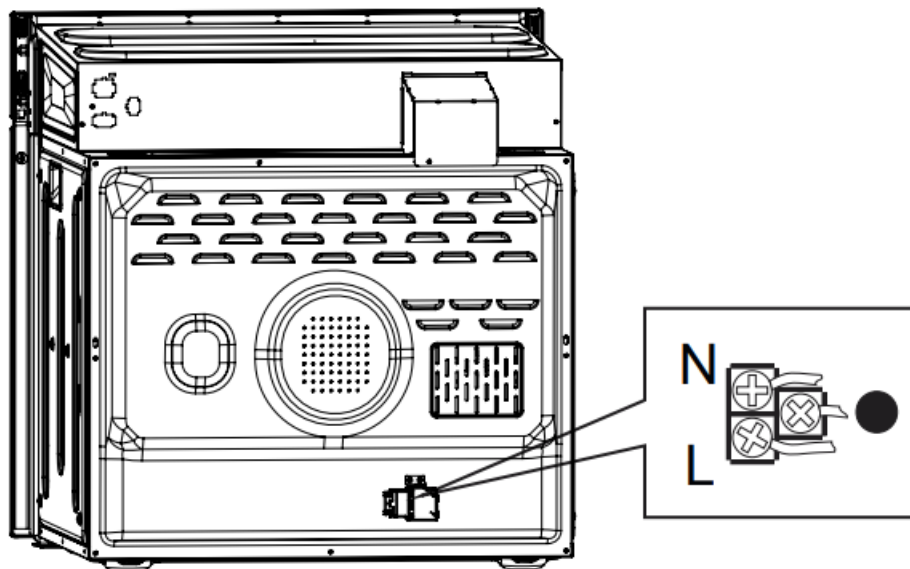


THE FITTING OF THE APPLIANCE

- Check that the cabinet and the space for the oven meet the dimension and ventilation requirements.
- Slide the oven into the cabinet. Make sure the housing of the oven does not come in contact with the walls of the kitchen cabinet.

Make sure there is at least 2 mm between the oven casing and the walls of the kitchen cabinet. Make sure the oven is centered between the walls of the kitchen cabinet. Note: Make sure the cable is not stuck and does not lie on top of the oven.

- Open the oven door.
- Use the provided screws to fasten the oven to the cabinet. Take care not to over tighten and break the spacer.
- Close the oven door and plug the appliance in.
- The oven is now ready for use.

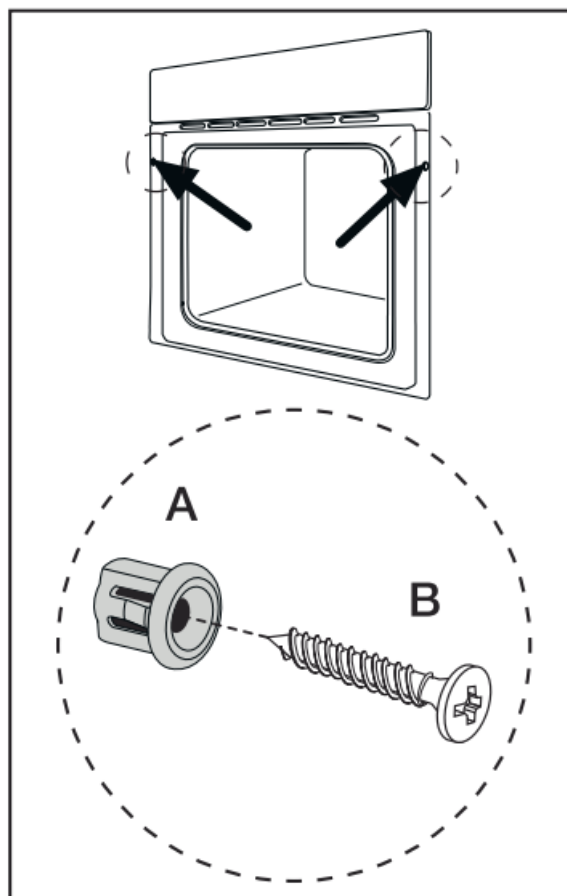

Product fiche

Manufacturer	INVENTUM
Model number	IOM6070GK
Type of appliance	built-in oven
Number of oven cavities	1
Heat source per oven cavity	electric
Volume per oven cavity	70
Energy consumption according to the EN50304	0,79 kWh
Energy efficiency index per oven cavity	94
Execution	
Material	glass and inox steel
Type of control	knobs and keys
Accessories	baking tray rack
Technical specifications	
Dimensions (wxdxh) in mm	595 x 595 x 575
Nett weight in kg	32,3
Power consumption [W]	3000
Rated voltage [V] / frequency [Hz]	220-240V~ 50-60Hz
Cord length [cm]	150

Remark: on the rating label – which can be found on the inside of the appliance – you will find the technical specifications of the appliance.

General terms and conditions of service and warranty

We do not need to remind you of the importance of service. After all, we develop our products to a standard so that you can enjoy them for many years, without any concerns. If, nevertheless, there is a problem, we believe you are entitled to a solution straight away. Hence our products come with an exchange service, on top of the rights and claims you are entitled to by law. By exchanging a product or part, we save you time, effort and costs.

2-year full manufacturer's warranty

1. Customers enjoy a 2-year full manufacturer's warranty on all Inventum products. Within this period, a faulty product or part will always be exchanged for a new model, free of charge. In order to claim under the 2-year full manufacturer's warranty, you can either return the product to the shop you bought it from or contact the Inventum customer service department via the form at www.inventum.eu/service-aanvraag.
2. The 2-year warranty period starts from the date the product is bought.
3. In order to claim under the warranty, you must produce a copy of the original receipt.
4. The warranty applies only to normal domestic use of Inventum products within the Netherlands.

5-year Inventum warranty

1. Inventum offers a 5-year warranty on most large domestic appliances and a selection of small domestic appliances. This 5-year Inventum warranty consists of a 2-year full manufacturer's warranty, extended by a further 3-year warranty. The only thing you need to do to qualify for the 3-year extended warranty is to register the product within 45 days of purchase. You can read more about registering the product in the following paragraph.
2. In accordance with the 5-year Inventum warranty provisions, a faulty product or part will always be exchanged for a new model during the first 2 years under the warranty. During the 3rd to 5th year under the warranty, you will only pay the costs of exchange.
The current costs of exchange are listed at www.inventum.eu/omruilkosten.
3. In order to claim under the 5-year Inventum warranty, you can either return the product to the shop you bought it from or contact the Inventum customer service department via the form at www.inventum.eu/service-aanvraag.
4. The 5-year warranty period starts from the date the product is bought.
5. In order to claim under the warranty, you must produce a copy of the original receipt.
6. The warranty applies only to normal domestic use of Inventum products within the Netherlands.

Product registration

1. The 3-year extended warranty is easy to obtain, free of charge, by registering the product within 45 days of purchase, via the website www.inventum.eu/garantie-registratie. If you did not register the product within 45 days of purchase, you can still do so up to 2 years after the purchase date. However, there will be a charge. The one-off registration charge is € 89 for each separate product. Registration is possible only for products that are subject to the 5-year Inventum warranty. Whether the product qualifies for the 5-year Inventum warranty is stated in the product user manual and in the product information sheet, on Inventum's website.
2. The warranty period always starts from the date the product is bought. If the product is registered for the extended warranty at a later date, the warranty period still starts from the original date of purchase.
3. The 3-year extended warranty can only be applied for if you are in the possession of a copy of the original receipt and the Inventum 5-year warranty certificate.

Large domestic appliances

1. Breakdowns or faults in large domestic appliances (separate and built-in white goods) can be registered via the form at www.inventum.eu/service-aanvraag, by calling the Inventum customer service department or in the store where you bought the device. The telephone number of the customer service department can be found at www.inventum.eu.
2. In the event of breakdowns or faults in large domestic appliances, Inventum will have the option to have a service engineer inspect the faulty device onsite at the customer in the Netherlands and to carry out repairs, there and then. The Inventum customer service department can also decide to have the device exchanged.
3. If you suffer a breakdown or fault in a large domestic appliance during the first 2 years from the date of purchase, Inventum will not charge any costs for the exchange, call-out or for parts and labour.
4. If you registered the product as described before at www.inventum.eu/garantie-registratie and you subsequently report a breakdown of a large domestic appliance in the 3rd to 5th year of the date of purchase, the 5-year Inventum warranty applies and the device will be repaired or exchanged, free of charge. In the event of a repair or exchange of the device, you only pay the costs of exchange. The current costs of exchange are

listed at www.inventum.eu/omruilkosten. If you did not register the product, the 3-year extended warranty does not apply.

5. When reporting a breakdown or fault, a service engineer will contact the customer within 1 working day in order to make an appointment. When the report is made in a weekend or during a public holiday, this will be the next working day.
6. If you report a breakdown or fault via the form at www.inventum.eu/service-aanvraag, you will be kept informed of the progress via mobile messages and e-mail.
7. The warranty period starts from the date the product is bought.
8. In order to claim under the warranty, you must produce a copy of the original receipt and the Inventum 5-year warranty certificate.
9. The warranty applies only to normal domestic use of Inventum products within the Netherlands.

Breakdowns or faults outside the warranty period

1. Breakdowns or faults in small or large domestic appliances outside the warranty period, can be reported to the costumer services department via the form at www.inventum.eu/service-aanvraag or by calling the costumer services department.
2. The costumer services department may ask you to send the product for inspection or repair. The costs of dispatch will be at your expense.
3. The inspection to establish whether repair is possible involves a charge. You need to grant your permission for this, in advance.
4. In the event of a large domestic appliance, Inventum, at your request, can send out a service engineer. In that case, you will be charged the call-out costs, as well as parts and labour.
5. In the event of an instruction to repair, the repair costs must be paid in advance. In the event of a repair by a service engineer, the costs of the repair must be settled with the engineer onsite, preferably by means of PIN payment.

Warranty exclusions

1. The following is excluded from the aforesaid warranties:
 - normal wear and tear;
 - improper use or misuse;
 - insufficient maintenance;
 - failure to comply with the operating and maintenance instructions;
 - unprofessional installation or repairs by third parties or the customer himself;
 - non-original parts used by the customer;
 - use for commercial or business purposes;
 - removal of the serial number and/or rating label.
2. In addition, the warranty does not apply to normal consumer goods, such as:
 - dough hooks, baking tins, (carbon) filters, etc.;
 - batteries, bulbs, carbon filters, fat filters etc.;
 - external connection cables;
 - glass accessories and glass parts such as oven doors;

- and similar items.
- Transport damage not caused by Inventum is also excluded. Therefore, inspect your new device before starting to use it. If you detect any damage, you must report this to the store where you purchased the product within 5 working days, or to the Inventum customer service department via the form at www.inventum.eu/service-aanvraag. If transport damage is not reported within this period, Inventum does not accept any liability in this respect.
 - The following are excluded from warranty and/or replacement: faults, loss of and damage to the device as a result of an event that is normally insured under the home contents insurance.

Important to know

- The replacement or repair of a faulty product, or a part thereof, does not lead to an extension of the original warranty period.
- Parts that have been replaced, packaging material and exchanged devices are taken back by the service engineer and become the property of Inventum.
- If a complaint is unfounded, all costs arising from it will be at the customer's expense.
- Following expiry of the warranty period, all costs of repair or replacement, including administration costs, dispatch and call-out charges, will be charged to the customer.
- Inventum cannot be held liable for damage as a result of devices built in incorrectly.
- Inventum cannot be held liable for damage caused by external events, unless this liability arises from mandatory statutory provisions.
- These warranty and service provisions are governed by Dutch law. Disputes will be settled exclusively by the competent Dutch court.

		
small household	white goods detached	built-in white goods

Inventum Huishoudelijke
Apparaten B.V.
Postbus 5023
6802 EA Arnhem
www.inventum.eu

 [instagram.com/inventum1908](https://www.instagram.com/inventum1908)







 [facebook.com/inventum1908](https://www.facebook.com/inventum1908)

 [youtube.com/inventum1908](https://www.youtube.com/inventum1908)

IOM6170RK/03.0821V

Modifications and printing errors reserved

Documents / Resources

<div data-bbox="135 181 285 201">  <div data-bbox="210 181 285 201"> INVENTUM <small>avanti innovati</small> IOM6170RK </div> </div> <div data-bbox="148 232 266 347">  </div> <div data-bbox="135 362 189 400"> <ul style="list-style-type: none"> • getränkewärmung • instructions manual <div data-bbox="135 385 189 400">  </div> </div>	<div data-bbox="314 262 1096 324"> <h2>INVENTUM IOM6170RK Build-In Oven [pdf] Instruction Manual</h2> <h3>IOM6170RK, Build-In Oven, IOM6170RK Build-In Oven</h3> </div>
<div data-bbox="135 459 285 479">  <div data-bbox="210 459 285 479"> INVENTUM <small>avanti innovati</small> IOM6170RK </div> </div> <div data-bbox="148 510 266 613">  </div> <div data-bbox="135 620 189 667"> <ul style="list-style-type: none"> • getränkewärmung • instructions manual • Getränkewärmung • touch display <div data-bbox="135 651 189 667">  </div> </div>	<div data-bbox="314 535 1096 595"> <h2>INVENTUM IOM6170RK Build-in Oven [pdf] Instruction Manual</h2> <h3>IOM6170RK Build-in Oven, IOM6170RK, Build-in Oven, Oven</h3> </div>

References

- [!\[\]\(0551a83d441798e532995956b603f604_img.jpg\) Inventum Huishoudelijke Apparaten - Altijd 5 jaar garantie!](#)
- [!\[\]\(54ee180c0037b66a36ce2219a481afde_img.jpg\) Inventum Huishoudelijke Apparaten - Altijd 5 jaar garantie!](#)
- [!\[\]\(73ae654e8897db9b21f1bf9d9efc07ef_img.jpg\) Algemene voorwaarden](#)
- [!\[\]\(278ecf8622de254ce2917d264729f4b0_img.jpg\) Klantenservice](#)