




Invixium Access SE3200 iCLASS SE Reader Module User Manual

[Home](#) » [Invixium Access](#) » Invixium Access SE3200 iCLASS SE Reader Module User Manual 

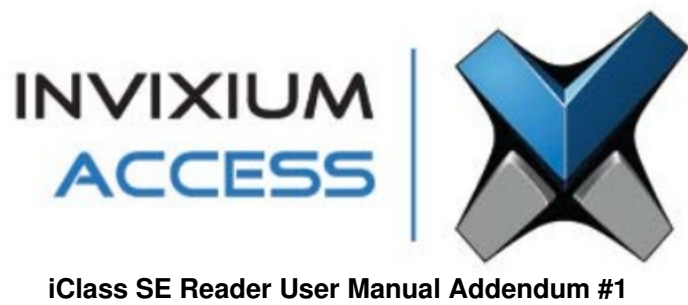

Contents

- [1 SE3200 iCLASS SE Reader Module](#)
- [2 Labelling Guidance:](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

SE3200 iCLASS SE Reader Module

Addendum #1

When Invixium iClass SE reader (FCC ID: S38-SE3200, IC: 10891A-SE3200) is collocated with the following two transceivers:

WiFiBT	FCC ID:PPD-QCNFA324	IC: 4104A-QCNFA324
3G Module	FCC ID: QIPEHS6	IC: 7830A-EHS6

Installation and user training must ensure that the distance between a composite device like this and the user body must be at least 30 cm.

Installation manual for the composite device must emphasize that the distance between the device and the

user body must be at least 30 cm.

Labelling Guidance:

Any host device having the three RF devices listed above (iClass SE Reader, WiFiBT, and the 3G Module: MUST have the following text on its label.

Contains:

FCC ID: S38-SE3200

IC: 10891A-SE3200

FCC ID: PPD-QCNFA324

IC: 4104A-QCNFA324

FCC ID: QIPEHS6

IC: 7830A-EHS6

The font size must be at least 6 pts.

Corporate Office

255 Consumers Road, Suite 110

Toronto, ON M2J 1R4

Canada

Tel: +1 844 INVIXIUM (468 4948)

experience@invixium.com

Branch Office

203-204 Elanza Vertex

Sindhu Bhavan Road, Bodakdev, Ahmedabad

Gujarat 380059, India

INVIXIUM.COM

Documents / Resources

	Invixium Access SE3200 iCLASS SE Reader Module [pdf] User Manual SE3200, S38-SE3200, S38SE3200, SE3200 iCLASS SE Reader Module, iCLASS SE Reader Module
---	--