

Inwa MZ-621 Wireless Networking Speaker User Manual

Home » inwa » Inwa MZ-621 Wireless Networking Speaker User Manual 🖺

Contents

- 1 Inwa MZ-621 Wireless Networking
- **Speaker**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 SAFETY INSTRUCTIONS**
- **5 PACKAGE CONTENTS**
- **6 DIMENSIONS**
- **7 PARAMETER**
- **8 SPEAKER CONTROL PANEL AND PORTS**
- **9 OPERATION INSTRUCTION**
- 10 INSTALLATION DIAGRAM
- 11 FCC
- 12 FAQs
- 13 Documents / Resources
 - 13.1 References

Inwa

Inwa MZ-621 Wireless Networking Speaker



Product Information

Specifications

• Model: MZ-621 Wireless Networking Speaker

Product Usage Instructions

Package Contents

This product includes the following items:

- · 2 Speakers
- Remote control
- User manual
- 20V DC Power adapter
- · Plastic expansion screw

Speaker Control Panel and Ports

The speaker control panel includes a mute key. Click to mute the speaker.

Operation Instruction

To set up the MZ-621 Wireless Networking Speaker:

- 1. The main speaker connects to a mobile phone.
- 2. When multiple speakers successfully enter networking mode, the blue indicator light of the Main speaker is always on, and the red indicator light of the Aux. speakers is always on as well.
- 3. To disconnect from network mode, use the remote control to press the Bluetooth pairing key until the blue light of the Aux. speaker blinks rapidly to exit networking mode.

Installation Instructions

- 1. Ensure all tools are available before installing.
- 2. Screw the bracket to the mounting holes on the wall using the provided screws.
- 3. Install the speaker on the bracket, adjust it to your desired angle, and tighten the screw.

Thank you for buying this product. Please read all safety information and operation instructions before using the bluetooth speaker.


SAFETY INSTRUCTIONS

- Please read and follow this instruction.
- Please keep or use at room temperature.
- Please do not use this product near heat sources such as radiators, enthalpy regulators, stoves, or other heat-


generating instruments

• All types of malfunction should be repaired by professional maintance staff disabling without permission will void the warranty.

PACKAGE CONTENTS

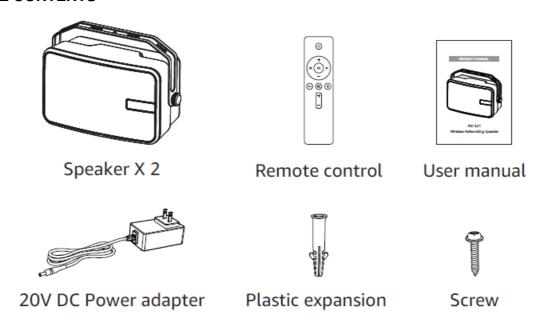

DIMENSIONS

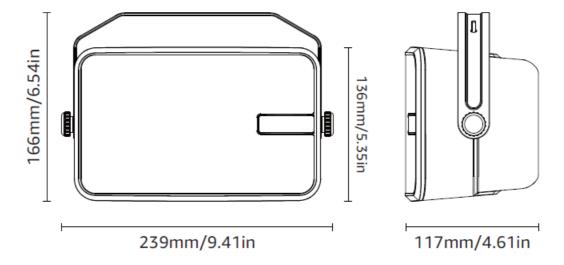

PARAMETER

Bluetooth version:	5.3
Wireless distance:	≤15M
Input voltage:	DC 20V
Output power:	40W
THD:	< 1%
Frequency range:	20Hz-20KHz
SNR:	>80dB
Waterproof level:	IPX5

SPEAKER CONTROL PANEL AND PORTS



• Uon /off key : short press to turn on/off

Short press: play/pause

Short press: previous song

Short press: next song

Short press: increase volume

Short press: decrease volume

Networking key: short press to enter network pairing status


Bluetooth pairing key: short press to enter Bluetooth pairing status

• Speaker mute key: click to mute

OPERATION INSTRUCTION


Step 1

- Bluetooth connection with one speaker:
- Power on the speaker via connection to the power supply, and the indicator flashes. Turn on the mobile phone Bluetooth to search 'MZ-621" and connect with it.
- **Note:** If the red indicator flashes after the speaker is opened press the Bluetooth pairing key on the remote control to switch to the blue indicator flashing. Bluetooth can only be connected when the blue indicator flashes)

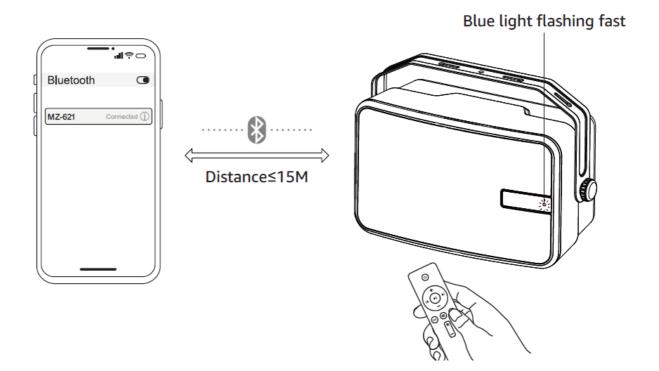


Step 2

- Network pairing with Multiple speakers:
- After finishing step 1, you have Bluetooth-connected one speaker (Main) with your mobile phone, power on the other speakers(Aux.), and they will auto pair with the Main speaker when their indicator lights are in red.
- (Note: If the indicator of Aux. the speaker does not show red after they powered on, short press the remote control networking key "on the remote control to switch to red)

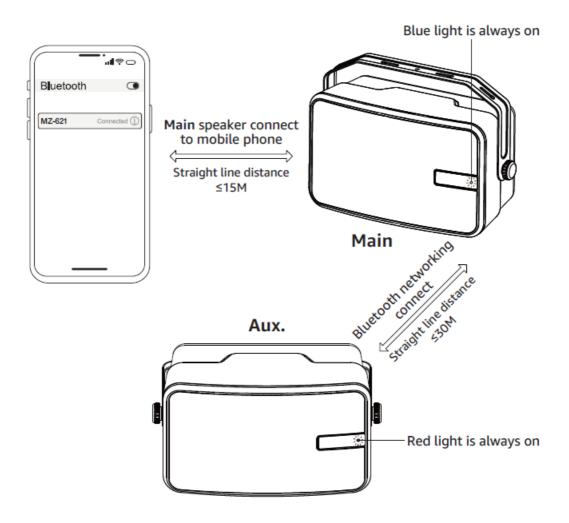


Step 3

- When multiple speakers successfully enter the networking mode, the blue indicator light of the Main speaker is always on, and the red indicator light of the Aux. speakers is always on also.
- Disconnect network mode method:
- After successfully connecting multiple speakers, point the remote control at the Aux. speaker and press the Bluetooth pairing key of the remote control until the blue light of the Aux. speaker blinks rapidly to exit the networking mode.
- (NOTE: Press the networking key " again, the Aux. the speaker will enter the networking mode again.)

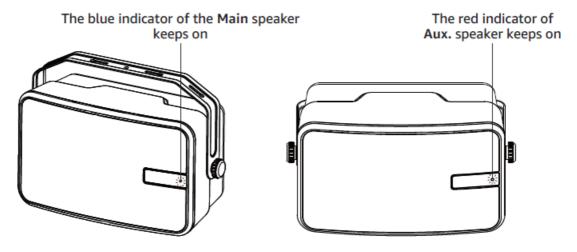

Note:

- Please confirm the speaker can work normally before installing it.
- Tools in Figure A are not included.

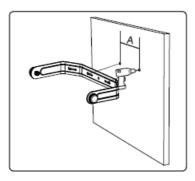

Step 1

• Remove the bracket from the product and drill two mounting holes in the wall spaced apart (see Figure A).

Step 2

• Screw the bracket to the mounting holes on the wall with the screws in the accessories.

Step 3

• Install the speaker on the bracket, adjust it to your desired angle and tighten the screw.



FCC

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.
- 2. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction

FAQs

Q: How do I pair multiple speakers?

A: To pair multiple speakers, ensure all speakers are in networking mode and follow the instructions in the manual to connect them using the remote control.

Q: What do I do if the speakers are not connecting?

A: If the speakers are not connecting, try resetting them by turning them off and on again, or refer to troubleshooting section in the user manual for further assistance.

Documents / Resources



Inwa MZ-621 Wireless Networking Speaker [pdf] User Manual

MZ621, 2AT7C-MZ621, MZ-621 Wireless Networking Speaker, MZ-621, Wireless Networking Speaker, Networking Speaker, Speaker

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.