



# InWin B1 Mini ITX Chassis Tower Case User Manual

[Home](#) » [InWin](#) » InWin B1 Mini ITX Chassis Tower Case User Manual 

## Contents

- [1 InWin B1 Mini ITX Chassis Tower Case](#)
- [2 Specifications](#)
- [3 Package Contents](#)
- [4 Accessories Bag](#)
- [5 Case Structure](#)
- [6 Installation Guide](#)
- [7 Completing Installation](#)
- [8 Notices and Warranty](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



## InWin B1 Mini ITX Chassis Tower Case



### Product Story

The B1's extremely small footprint is perfect for small form factor builds such as HTPCs, light gaming PCs or even a LAN rig. The integrated ventilation in the exquisite streamline design provides a better thermal solution, and you can set up your PC vertically or horizontally! The B1 comes with prebuilt InWin 200W, 80 PLUS Gold PSU, InWin 80mm fan and an anti-dust filter. Use the B1 to match your lifestyle!

### Specifications

Model	B1	B1 Pure	B1 Mesh
Model Number	IW-CS-B1BLK-PS200W	IW-CS-B1WHI-PS200W	IW-CS-B1MESH-PS200W
Colors	Black	White	Black
Case Materials	Tempered Glass, ABS	Plywood, ABS	SPCC, ABS
Case Type	Mini-ITX Tower		
M/B Compatibility	Mini-ITX		
Expansion Slots	N/A		
Maximum Compatibility	CPU Heatsink Height: 60 mm		
Front Ports	1 x USB 3.2 Gen 1 HD Audio (CTIA – SPK/Mic)		
Internal Drive Bays	2 x 2.5"		
Thermal Solution Compatibility	Side: 1 x 80 mm (1 InWin Fan Included)		
Power Supply Compatibility	InWin 200W PSU Included		
AC Input/Efficient	AC Input: 100 - 240V / 80 PLUS Gold		
Product Dimensions (L x W x H)	302 x 238 x 108 mm 11.9 x 9.4 x 4.3"		
Package Dimensions (L x W x H)	336 x 141 x 287 mm 13.2 x 5.6 x 11.3"		
Net Weight	1.9 kg / 4.2 lbs	1.65 kg / 3.6 lbs	1.74 kg / 3.83 lbs
Gross Weight	2.2 kg / 4.9 lbs	1.95 kg / 4.3 lbs	2.07 kg / 4.56 lbs

<b>Model</b>	IP-AD200C7-2	
<b>Total Power</b>	200W	
<b>Material</b>	SECC	
<b>Type</b>	ITX	
<b>PFC</b>	Active PFC (> 0.95)	
<b>Efficiency</b>	80 PLUS® Gold (Up to 90%)	
<b>MTBF (Hours)</b>	> 100,000 hrs.	
<b>AC Input</b>	100 – 240Vac. 50-60Hz	
<b>Operating Temperature Range(° C)</b>	0–40° C	
<b>Full Protection</b>	OVP / UVP / SCP / OPP	
<b>Safety Certifications</b>	TUV / cTUVus / BSMI / CB / CE / FCC / EAC / RCM / CCC	
<b>Dimensions (L x W x H)</b>	52 x 40 x 170 mm 2.05 x 1.6 x 6.7"	
<b>Warranty</b>	3 Years	
<b>Connectors</b>	20+4 Pin Motherboard	1
	8 (4+4) Pin CPU	1
	8 (6+2) Pin PCI-E	0
	4 Pin Peripheral	0
	SATA (90 Degree)	1
	Floppy	0

<b>Model</b>	DF0801512SELN	
<b>Fan Size</b>	80 x 80 x 15 mm	
<b>Materials</b>	PBT	
<b>Rated Voltage</b>	DC 12V	
<b>Rated Power</b>	2.16W	
<b>Rated Current</b>	0.18A	
<b>Speed Mode</b>	PWM 600 - 2000 +/-10% RPM	
<b>Air Flow</b>	20.05 CFM	
<b>Air Pressure</b>	1.08mm/ H2O	
<b>Connector</b>	4-Pin	
<b>Noise Level</b>	23.55 dB(A) (Normal)	
<b>Bearing Type</b>	Long Lifespan Sleeve Bearing	

InWin products comply with RoHS regulations.  
Specifications may vary based on different regions.

## Package Contents




1. B1 Mesh Chassis
2. InWin 200W 80 PLUS Gold PSU
3. InWin 80mm Side fan x 1
4. QR Code Card
5. Accessories Bag

### **Accessories Bag**




- a. Hexagon Head Screws X 8
- b. 2.5" HDD Screws X 10
- c. Cable Ties X 5
- d. Foot-Stand Stickers X 4

## Case Structure

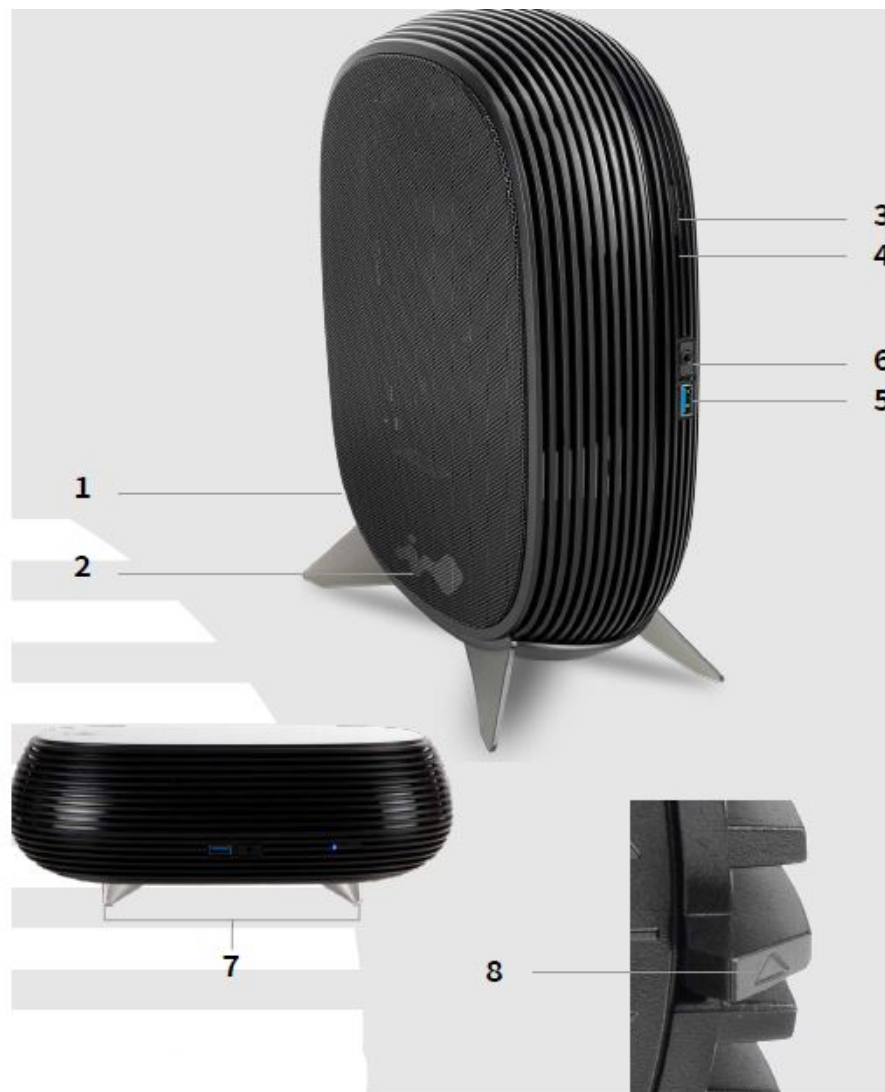

1. SPCC
2. Logo
3. Power Button
4. HDD/Power LED indicator
5. 1 x USB 3.2 Gen 1
6. HD Audio Port (CTIA – SPK/Mic)
7. Removable Foot-stand
8. Release Panel



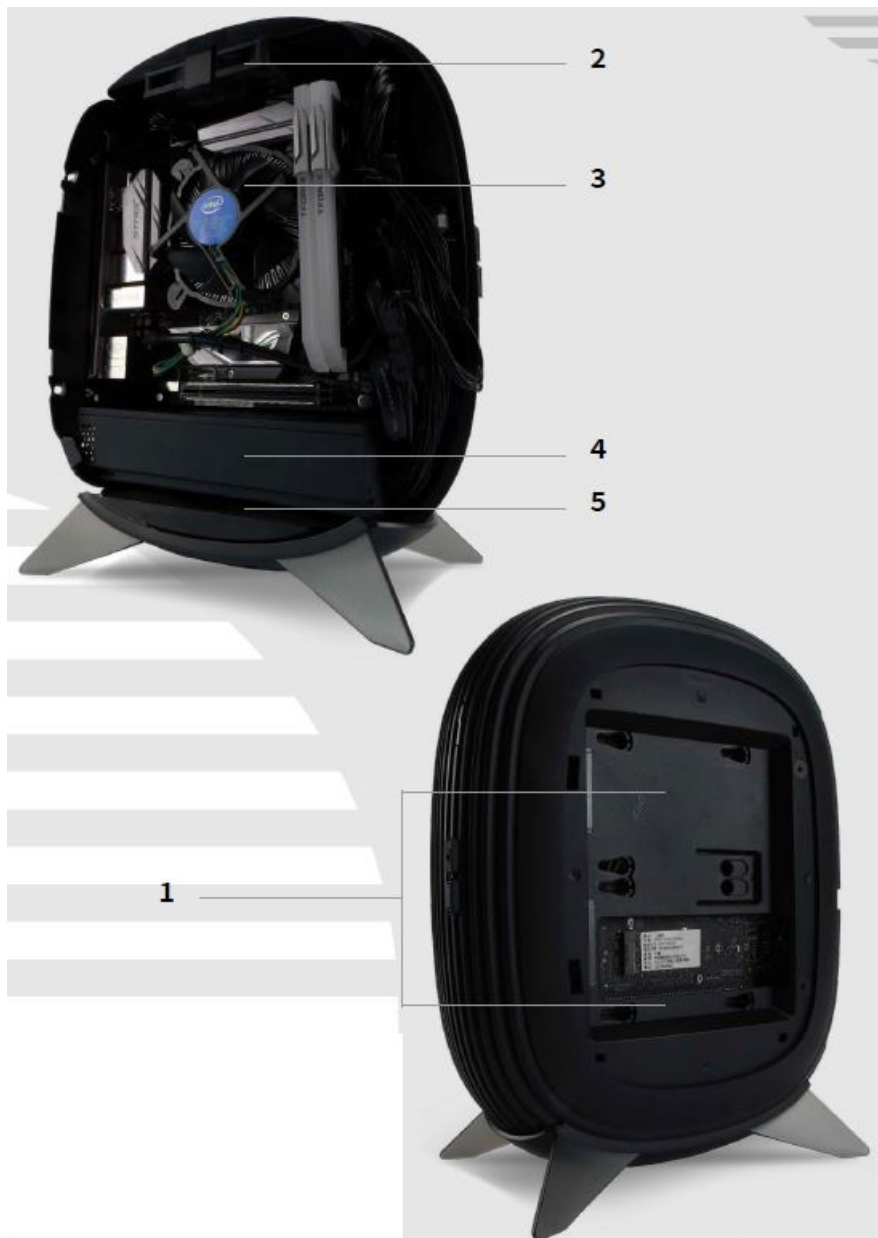

1. 2.5" Drive Bay
2. InWin 80mm Side Fan
3. Motherboard Mounting Area
4. InWin 200W 80 PLUS Gold PSU
5. Fan Dust Filter

## Installation Guide

(Please follow the related chapters to assemble)

### Opening the Chassis

Please release the three screws and lift up the top cover (yellow part). Lift it from the two sides (green part).






## Motherboard Installation


Parts Required: Hexagon Head Screws



## Connection Cables

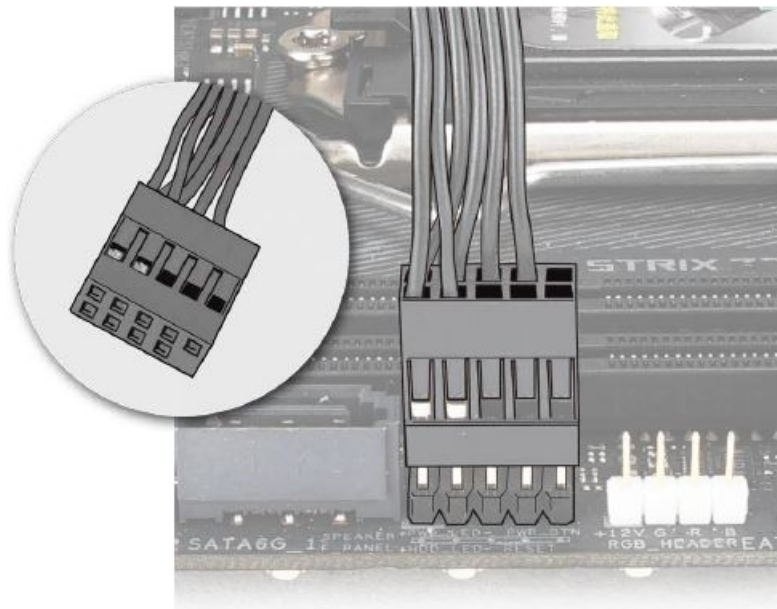

### Switch/LED Connector

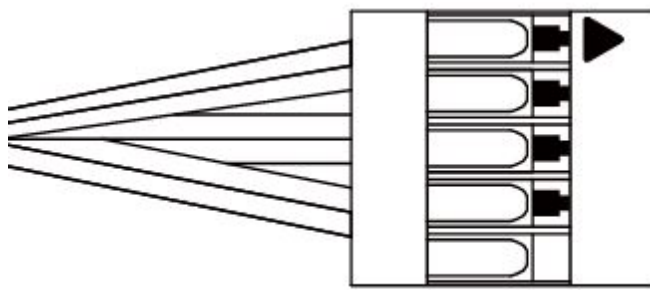


Black(P_LED) 1	2 Black (HDD)
Black(P_LED) 3	4 Black (HDD)
Black(P_SW) 5	6 NC
Black(P_SW) 7	8 NC
Key 9	10 NC

### HD Audio Header




PORT2_L	BLUE	10	9 BROWN	SENSE2_R
SENSE_SEND	PURPLE	8	7	KEY
PORT2_R	YELLOW	6	5 WHITE	SNSE1_R
PORT1_R	RED	4	3 ORANGE	PRESENCE#
PORT1_L	GREEN	2	1 BLACK	GND


### USB 3.2 Header

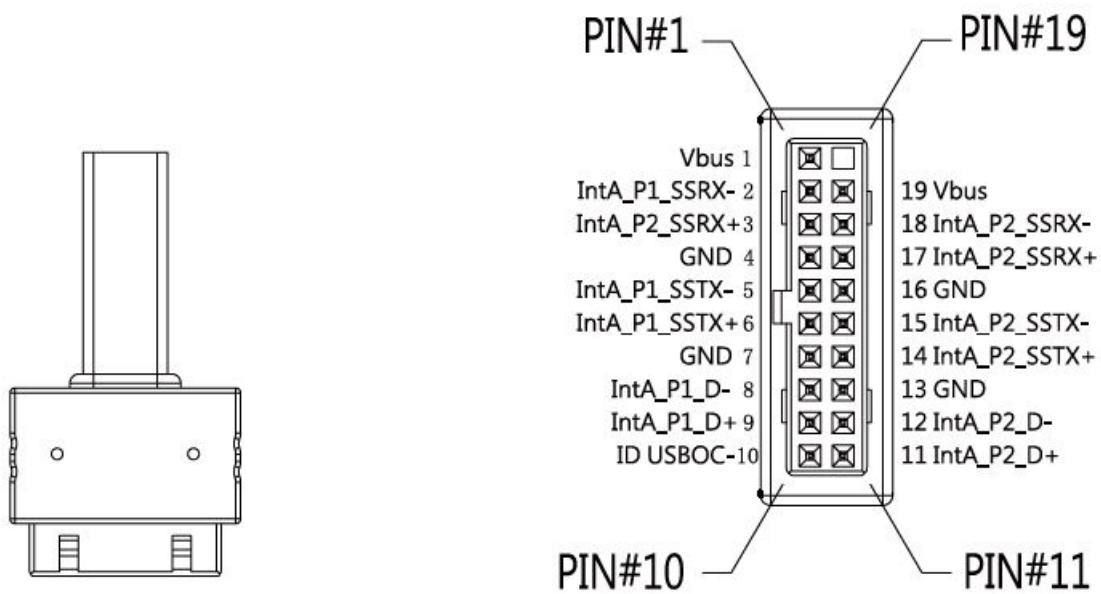


Fan

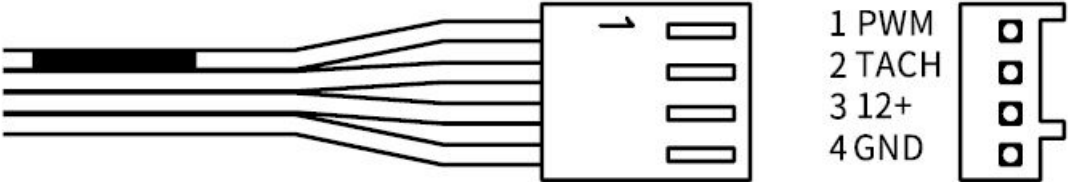

SSD

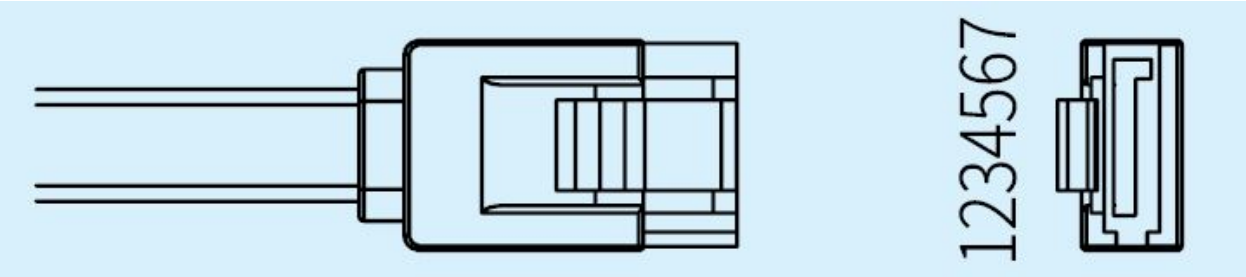

Power

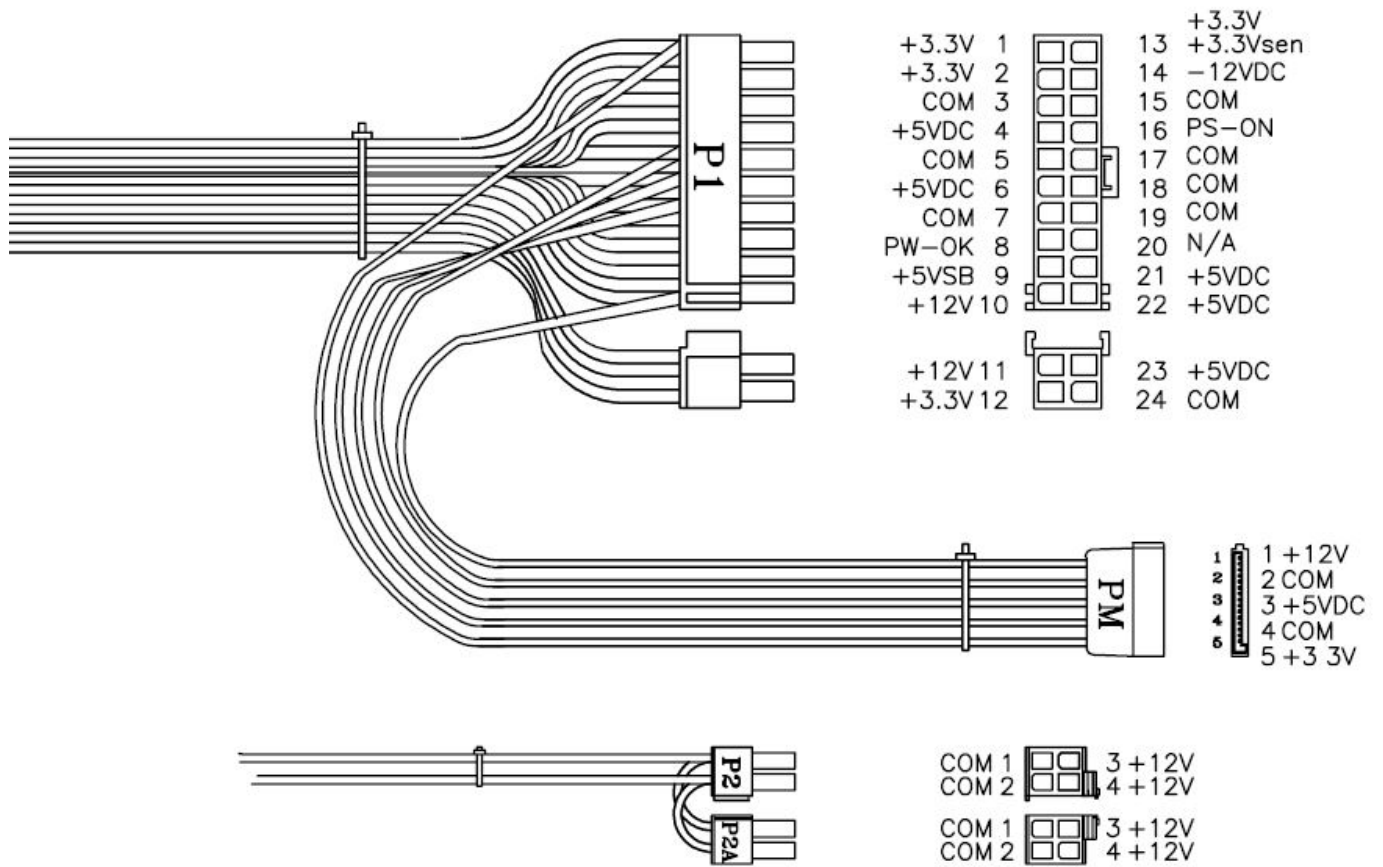

## Drive Bays Installation

**Parts Required:** 2.5" HDD Screws



- Release the two screws and remove the bottom cover.





- Install the 2.5" HDD screws on your SSD screw holes.



- Attach the SDD in the designated area and push towards the SATA direction.

### How to Uninstall the 2.5" Drive Bays



- Push the panel



- Pull towards the direction to release it.


### Foot-Stand Stickers Installation (Optional)

**Note:** After installed, the stickers will be hard to remove. Please use wisely, we suggest using the chassis on vertical position for a better look.


**Parts Required:** Foot-stand Stickers



- Release the two screws and remove the bottom cover.

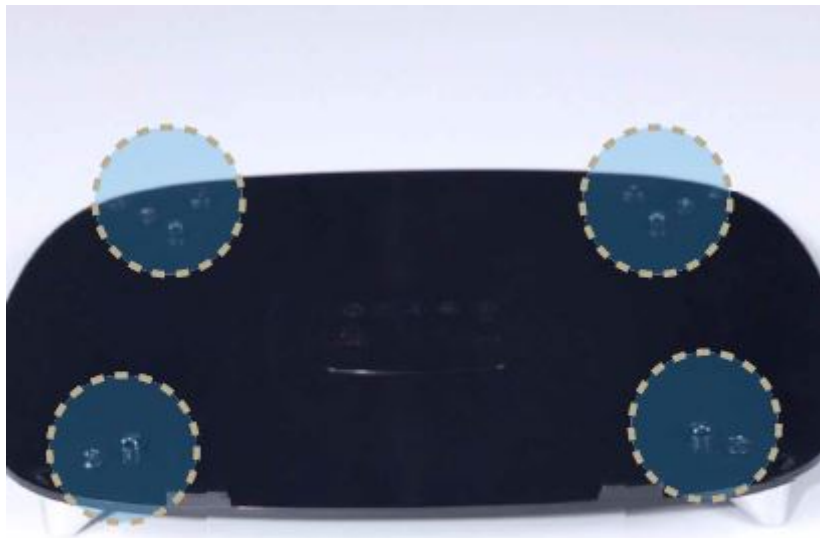

- Release the screws of the foot-stand and detach the foot-stand.

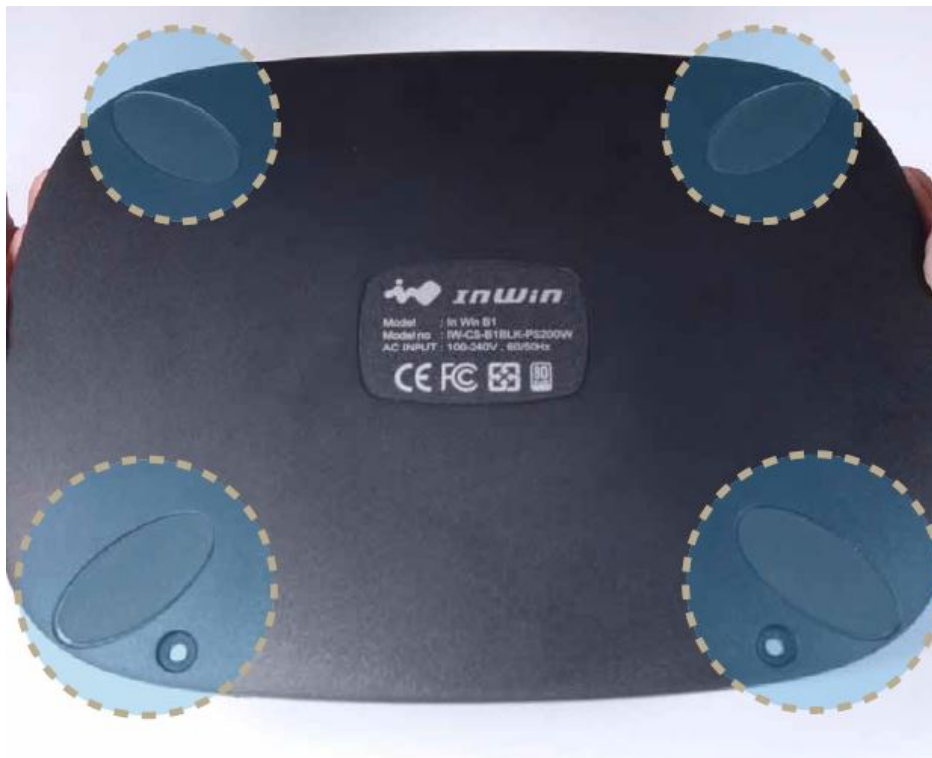

- Place the stickers on each designated area.

## Completing Installation

For more installation instructions, please scan the QR Code or watch the video in the website link:

<https://youtu.be/cHm2nA2liQY>





## Notices and Warranty


### Notices

1. Please follow the user manual for installation guidelines.
2. When installing the computer components, please use antistatic precautions to prevent ESD (electrostatic discharge) damage. Failure to take the necessary precautions may result in injury to the installer and/or damage to the machine. Incorrect installation may burnout the motherboard and other system components.
3. To avoid any damages, please do not use this product for any other purpose than its intended use.
4. Any modifications may damage the product.
5. Please handle with care when moving the case.
6. When storing the case, please keep this product away from high temperatures. Keep away from machines such as heaters that might cause high temperatures.
7. Please do not put anything in the impeller.
8. Please do not touch the fan blades when the fan is in operation. Please only use your fan in the computer case.

### Warranty

- For more detailed warranty information, please visit the InWin retail website at [www.in-win.com](http://www.in-win.com).
- The actual product is subject to change without prior notice. In Win Development Inc. reserves the right to make final modifications.

## Documents / Resources

	<p><a href="#">InWin B1 Mini ITX Chassis Tower Case</a> [pdf] User Manual B1, Mini ITX Chassis Tower Case</p>
---	---