

**iO-MZR™**  
iO-MZRTM Motorized  
Zone Register



# iO-MZRTM Motorized Zone Register Installation Guide

[Home](#) » [iO-MZR](#) » iO-MZRTM Motorized Zone Register Installation Guide 

## Contents

- [1 iO-MZRTM Motorized Zone Register](#)
- [2 Product Usage Instructions](#)
- [3 When used as a stand-alone register Installation Instructions](#)
- [4 APPLICATION NOTES](#)
- [5 SPECIFICATIONS](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

# iO-MZR™

## iO-MZRTM Motorized Zone Register



## Specifications

- **Operating Voltage:** 24VAC
- **Amperage:** 0.26A
- **VA Rating:** 6.5VA

- **Configuration:** Spring Open/Power Close

## Product Usage Instructions

### Stand-Alone Register Installation

The iO-MZRTM Motorized Zone Register can be used as a stand-alone register. Follow these steps:

1. Ensure that no more than 30% of existing registers are replaced with iO-MZRTM registers.
2. Avoid installing iO-MZRTM registers in the same room as the HVAC unit thermostat.

Wiring Instructions for Battery Powered Thermostat Operation

Wiring Instructions for Hardwired Thermostat Operation

### Follow the wiring diagram below

JUMPER `W' AND `Y' WYGR

### Zone Control Panel Installation

#### When using the iO-MZRTM with a zone control system

Wire the register actuator to the proper damper terminals on the zone control panel.

- Wire the iO-MZRTM the same as a standard powered closed/spring return open zone damper.

### Wiring Suggestions

For wiring inside duct work

1. Drill a hole in the register boot and run the wire conventionally.
2. Use a fish tape to pull the wire through the duct.
3. Use a duct cleaning vacuum machine to draw a plastic bag with an attached line to pull wire through the duct.

### Frequently Asked Questions (FAQ)

#### Can I install more than 30% of iO-MZRTM registers in my existing setup?


No, it is recommended not to replace more than 30% of existing registers with iO-MZRTM registers.

### When used as a stand-alone register Installation Instructions


The iO-MZR™ Motorized Zone Register can be used as a stand-alone register. It is recommended that no more than 30% of the existing registers be replaced with iO-MZR™ registers. iO-MZR™ registers should not be installed in the same room as the HVAC unit thermostat.

When the iO-MZR™ is used as a stand-alone register, it can be wired to a hardwired or battery powered thermostat using standard 18-gauge wire. However, if the thermostat wire is run through the supply duct work, use plenum rated wire to comply with local code. The thermostat should be configured for manual heating or cooling mode of operation since it does not control the HVAC equipment. Time delays should also be disabled to provide an immediate reaction on a call for heating or cooling. When the thermostat calls for heating or cooling, the MZR™ register is powered open. When the space temperature reaches setpoint, the MZR™ register spring returns close.


### WIRING DIAGRAM FOR BATTERY POWERED THERMOSTAT OPERATION

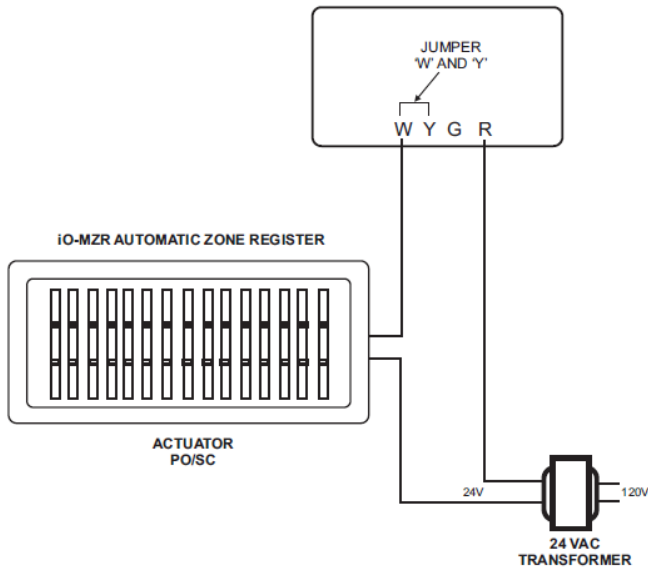

### WIRING DIAGRAM FOR HARDWIRED THERMOSTAT OPERATION

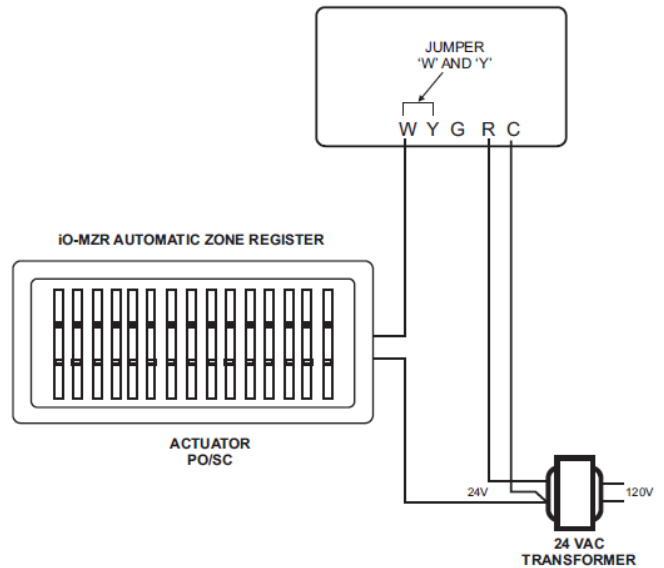

When the iO-MZR™ is used with a zone control system, the register actuator is wired to the proper damper terminals on the zone control panel. The iO-MZR™ wires the same as a standard powered closed / spring return open zone damper.

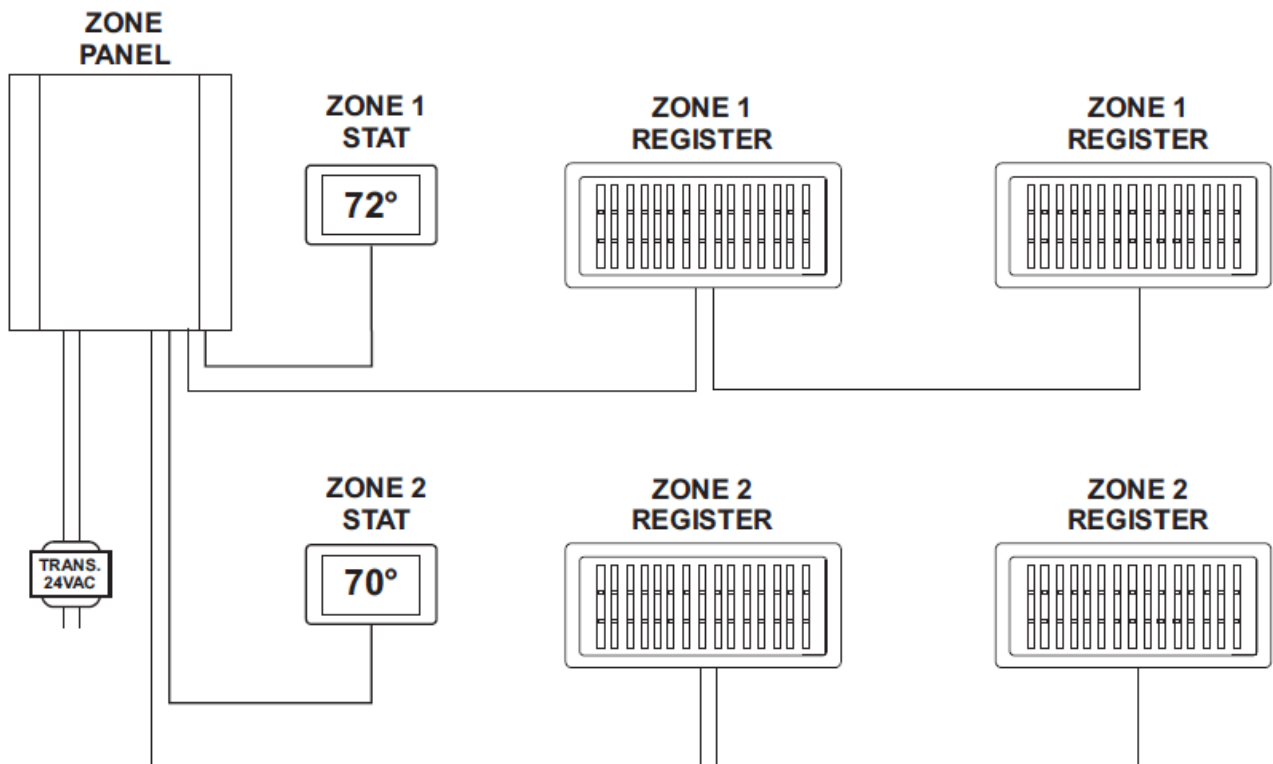

Up to six registers may be connected to a single zone

### WIRING SUGGESTIONS

The most common methods used to run wire inside the duct work is as follows:

1. Drill a hole in the register boot and run the wire in a conventional manner.
2. Use a fish tape to pull the wire through the duct.
3. Use a duct cleaning vacuum machine to draw a plastic bag with an attached line to pull wire through the duct.

If wiring from actuator is run inside the duct work, plenum rated wire must be used. AVAILABLE SIZES

- 4" X 10"
- 4" X 12"
- 4" X 14"
- 6" X 12"

## COLORS

- Tan and White

## APPLICATION NOTES

- MZR zone registers are not designed to work in a
- 3-1/2" stud wall.


## SPECIFICATIONS

- Operating Voltage: 24VAC
- Amperage: 0.26A
- VA Rating: 6.5VA
- Configuration: Spring Open/Power Close

[www.iohvaccontrols.com](http://www.iohvaccontrols.com)

For Technical Support Call Toll Free: [866-225-5032](tel:866-225-5032)

## Documents / Resources

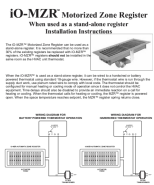	<p><a href="#">iO-MZR iO-MZRTM Motorized Zone Register</a> [pdf] Installation Guide iO-MZR, iO-MZRTM, iO-MZRTM Motorized Zone Register, iO-MZRTM, Motorized Zone Register, Zone Register, Register</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.