



ION GO Retro Style Portable CD Player User Guide

[Home](#) » [ION](#) » ION GO Retro Style Portable CD Player User Guide 



CD Go
Quickstart Guide

Contents

- [1 GO Retro Style Portable CD Player](#)
- [2 Package Contents:](#)
- [3 Safety Information:](#)
- [4 Controls:](#)
- [5 Playing a CD:](#)
- [6 Pairing CD Go to a Bluetooth Speaker:](#)
- [7 Troubleshooting:](#)
- [8 Technical Specifications:](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

GO Retro Style Portable CD Player


ionaudio.com/support

For technical support

ionaudio.com/warranty

For complete warranty information

Controls

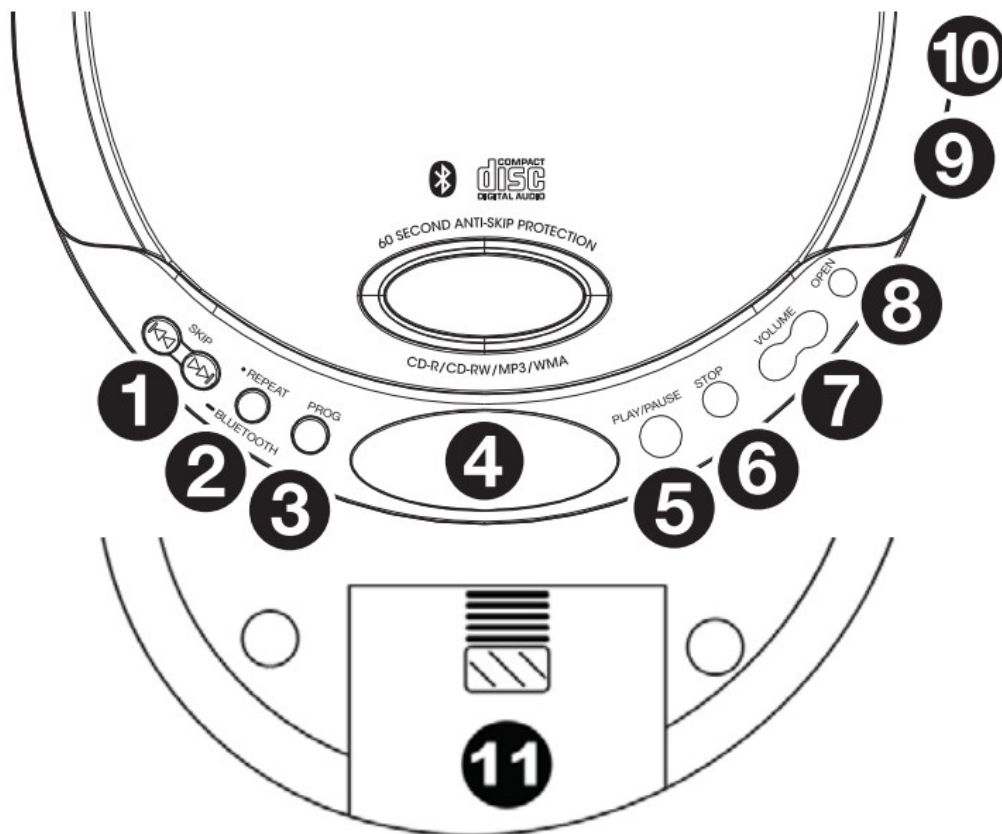

Package Contents:

CD Go, 2 AA Batteries, USB-to-Barrel Plug Cable, Earbuds, Quickstart Guide, Safety & Warranty Manual.

Safety Information:

• Not for use in rain or wet locations. Use only in dry locations. • Play CD Go on a level surface. • Close CD Go's cover when not playing CDs.

Controls:

Top Panel: (1) Skip/Search, (2) Repeat/Bluetooth, (3) Program, (4) Display, (5) Play/Pause, (6) Stop, (7) Volume -/+, (8) Open, (9) Phones, (10) Power Input.

Bottom Panel: (11) Battery Compartment.

To power on CD Go, press the Play/Pause button.

To power off CD Go, press the Stop button after playback is stopped. If CD Go is powered off, any paired Bluetooth speaker will be disconnected.

Note: When playback is stopped, CD Go will automatically power off after 30 seconds of inactivity.

Playing a CD:

1. Open the CD compartment lid by pressing the Open button, insert a CD, and close the compartment lid.
2. Select a CD track using the |<< or >>| buttons.
3. Press Play/Pause to start CD playback.
4. Adjust the playback Volume +/- buttons as needed.
5. To search backward or forward through a track, press and hold the |<< or >>| buttons.

Pairing CD Go to a Bluetooth Speaker:

1. Power on your Bluetooth speaker and ensure it is in pairing mode.
2. Press and hold the Bluetooth button on CD Go to start pairing to your Bluetooth device. "BT" will be seen flashing on the CD Go display when it is in pairing mode. The pairing process could take up to 30 seconds. For best results, move the CD Go and Bluetooth speaker close together.
3. When the Bluetooth connection is made, the BT icon on the CD Go's display should stop flashing, and be solid. Your Bluetooth speaker should indicate when the connection has been made as well.
Note: CD Go will connect to the nearest Bluetooth speaker.
4. Play music on CD Go. If you are connected to a Bluetooth speaker with a play/pause button and do not hear audio, try pressing the play/pause button.
5. Adjust the volume on your Bluetooth speaker (if applicable) or use the Volume +/- buttons on CD Go to control the output level.
To disconnect pairing, press and release the Bluetooth button on CD Go or turn off Bluetooth pairing on your Bluetooth speaker.

Troubleshooting:

The unit will not turn on.

- Check that the batteries are inserted correctly.
- Replace with fresh batteries.

The CD will not playback properly.

- Ensure the CD compartment is closed and press the Stop button before playing the CD.
- Reinsert the disc, make sure the disc is clean, or try another disc.

The Bluetooth speaker that I want is not pairing to CD Go.

- Turn off or move other nearby Bluetooth speakers more than 50' (15.2 m) away so only the closest Bluetooth speaker you want will pair.

I am connected to a Bluetooth speaker but do not hear any audio.

- If you are connected to a Bluetooth speaker with a play/pause button, and do not hear audio, try pressing it's play/pause button.
- Press and release CD Go's Bluetooth button to disconnect it from the Bluetooth speaker; then press and release the Bluetooth button once more to try pairing again.
- Turn CD Go off and then on again, then press and hold its Bluetooth button to try pairing it again.
- Use the Volume +/- buttons on CD Go to turn up the output level.

Technical Specifications:

Supported Disc Formats: CD, CD-R, CD-RW

Supported File Types: MP3, WMA

Bluetooth:

Version: 5.0

Profile: A2DP

Range: Up to 50 feet (15.2 m)


Power: via 2 AA batteries or USB power adapter

Dimensions (WxDxH): 5.5" x 6.1" x 0.88" / 13.9 x 15.5 x 2.2 cm




Weight: 0.55 lbs. / 0.25 kg



Documents / Resources

	<p>ION GO Retro Style Portable CD Player [pdf] User Guide GO Retro Style Portable CD Player, GO, Retro Style Portable CD Player, Style Portable CD Player, Portable CD Player, CD Player</p>
---	--

References

-  [Declaration of Conformity](#)
-  [Support : ION Audio](#)
-  ionaudio.com/warranty
- [User Manual](#)