



IPER CHIAVI RT2 Touch Wheel RF Remote Controller Instruction Manual

[Home](#) » [IPER CHIAVI](#) » IPER CHIAVI RT2 Touch Wheel RF Remote Controller Instruction Manual 

Touch Wheel RF Remote Controller
Model No.: RT2/RT7

1 and 4 zone CCT/Touch color wheel/Wireless remote 30m distance/AAx2 battery/Magnet stuck fix



RT2
1 Zone CCT



RT7
4 Zone CCT

CE RoHS  LVD RED

Contents

[1 Features](#)

[2 Technical Parameters](#)

[3 Mechanical Structures and Installations](#)

[4 Operation](#)

[5 Match Remote Control \(two-match ways\)](#)

[6 Key function](#)

[7 Safety information](#)

[8 Documents / Resources](#)

[9 Related Posts](#)

Features


- Apply to dual color(warm white + cool white) LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receivers.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on the back holder.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAAx2)
Working current	<5mA
Standby current	< 1 OpA
Standby time	1 year
Remote distance	30m(Barrier-free space)
Environment	
Operation temperature	Ta: -30t – +55 C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	[-MIEN 301 489-1 V2.2.3 [-MIEN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED
Warranty	
Warranty	5 years
Weight	
Net weight	48g
Gross weight	88g

Mechanical Structures and Installations

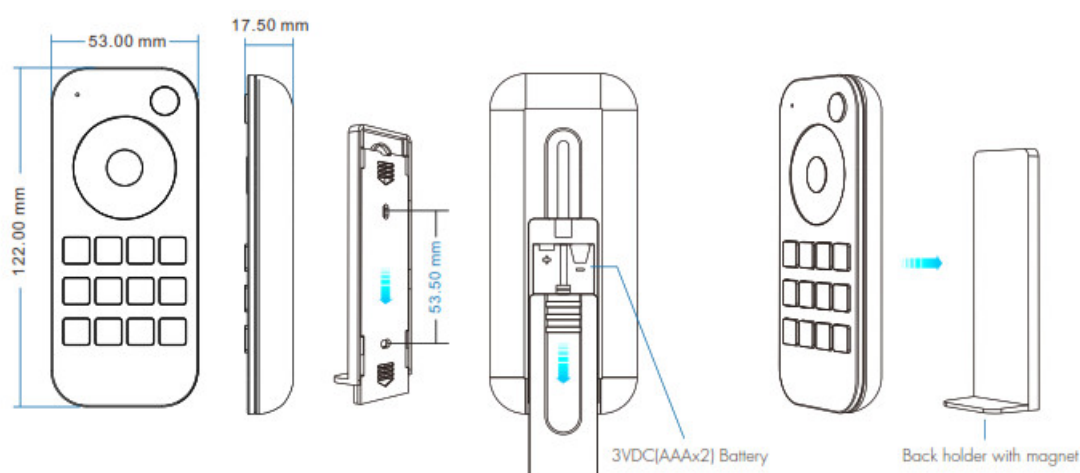

To

- Option 1: Stick the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with paster.

Operation

- When turning on the light, the indicator displays blue. when turn off light, the indicator display red.
- When touching the color wheel, the indicator will display the same color.
- When the press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter the sleep state, you need press any key to make touch wheel quit sleep state.

Match Remote Control (two-match ways)

End-user can choose the suitable match/delete ways. Two options are offered for selection

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single-zone remote) or zone key (multiple zones remote) of the remote.

The LED indicator fast flashes a few times means the match is successful.

Delete:

Press and hold match key for 5s to delete all matches,

The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on the power, repeat again.

An immediately short press on/off key (single-zone remote) or zone key (multiple zone remote) 3 times on the remote.

The light blinks 3 times means the match is successful.

Delete:


Switch off the power, then switch on power, repeat again.


An immediately short press on/off key (single-zone remote) or zone key (multiple zones remote) 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.


Key function


- RT2 1 zone CCT remote

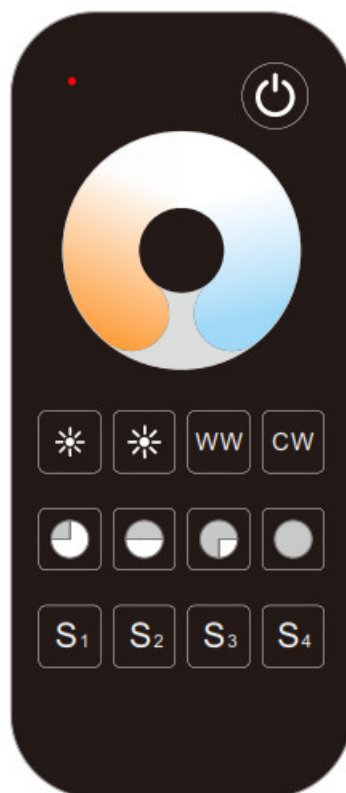

 <p>The diagram shows the layout of the RT7 4 zones CCT remote control. It features a power button at the top, followed by a color temperature adjustment wheel. Below the wheel are two brightness buttons (sun icons), two white light buttons (WW and CW), and four scene buttons (S1, S2, S3, S4) arranged in a 2x2 grid. Each scene button has a small circular icon above it representing the scene's light state.</p>	<p>: Turn on/off light. : Touch to change color temperature. : Adjust brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment. : Get warm white or cold white directly. 25%, 50%, 75%, 100% brightness. Short press recalls the scene, long press 2s save current state into S1/2/3/4. the LED indicator display green when save OK.</p>
--	--

- RT7 4 zones CCT remote

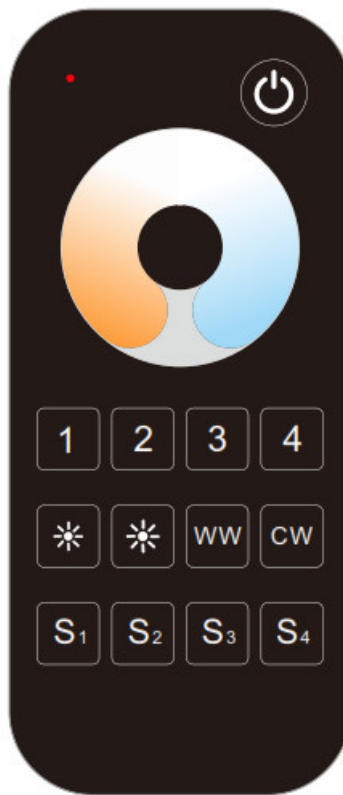

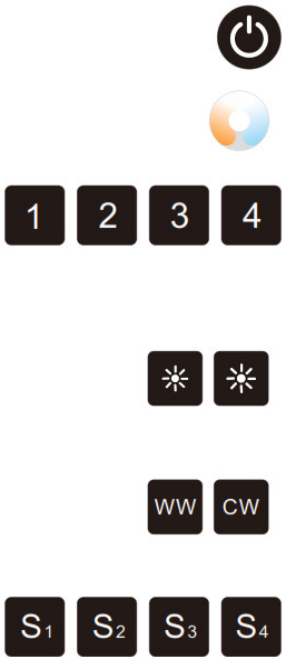
	<p>: Short press turn on/off all zone light.</p> <p>: Touch to change current zone color temperature</p> <p>Short press select and turn on zone light, long e light.</p> <p>Short press the multiple zone key fastly, will se ynchronously.</p> <p>: Adjust the brightness for the currently selecte 10 levels, long press 1-6s for continuous 256 le</p> <p>: Get warm white or cold white directly for the c ne.</p> <p>: Short press recall the scene, long press 2s save current state into S1/2/3/4. the LED indicator display green when save OK 4 zone recall or save synchronously.</p>
---	---

Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing the battery, pay attention to the battery’s positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

Documents / Resources

	<p>IPER CHIAVI RT2 Touch Wheel RF Remote Controller [pdf] Instruction Manual RT2, RT7, RT2 Touch Wheel RF Remote Controller, Touch Wheel RF Remote Controller, RF R emote Controller, Remote Controller, Controller</p>
---	---