




iPOWER SUA2000iP Generator User Guide

[Home](#) » [iPOWER](#) » iPOWER SUA2000iP Generator User Guide 

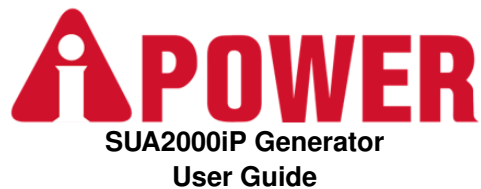





Contents

- [1 SUA2000iP Generator](#)
- [2 Add Lubricant and Fuel](#)
- [3 Start Generator](#)
- [4 Shutdown and Storage](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

SUA2000iP Generator

Unpack Generator: Remove generator, accessories, inserts and Literature from carton. If any item is missing or damaged, contact our product service department at **1-855-888-3598**.

Included Items

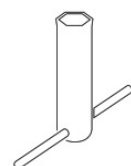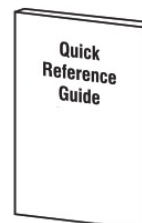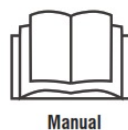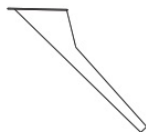


This Quick Reference Guide is not substitute for reading the operator's manual. To reduce the risk of injury or

death, user must read and understand the operator’s manual before using this product. All pages references to the operator’s manual.

Add Lubricant and Fuel

Use a funnel to pour 10W-30 engine oil into engine. Fill to the upper mark of the oil dipstick H.

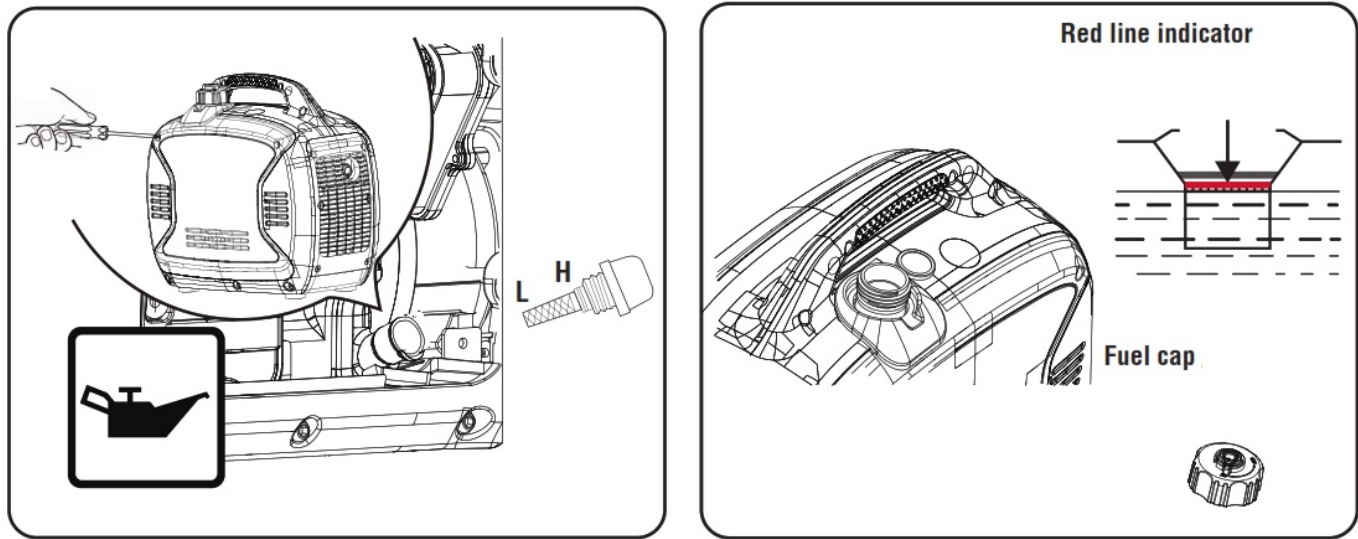

Start Generator

Move generator outside to a flat, level surface, away from doors, windows and vents.

DANGER


Using a generator indoors CAN KILL YOU IN MINUTES. Generator exhaust contains carbon monoxide. This is a po


NEVER use inside a home or garage, EVEN IF doors and windows are open.		Only from


Avoid other generator hazards. READ MANUAL BEFORE USI

WARNING: Do not overload generator or electrical cords. Consult operation manual.


- 1. Turn the fuel cap vent lever to the “ON” position.

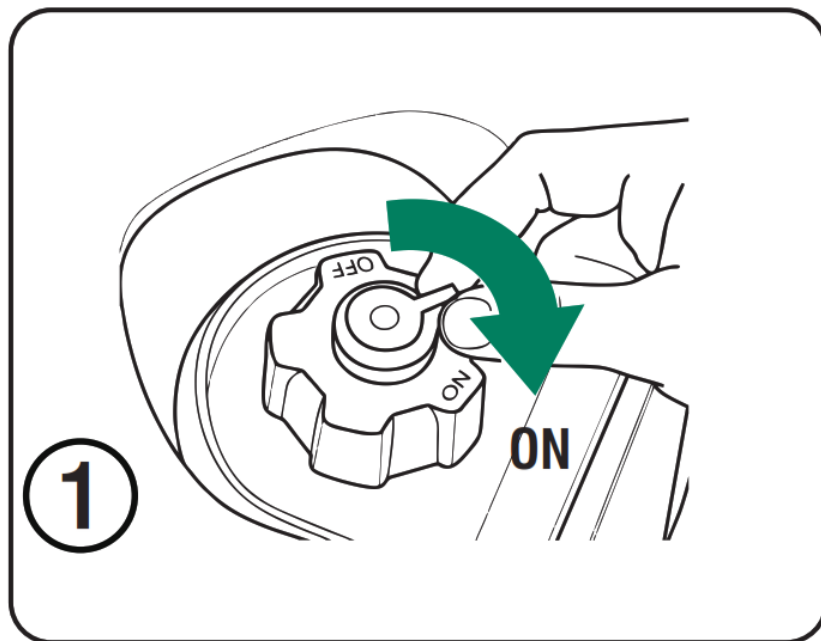


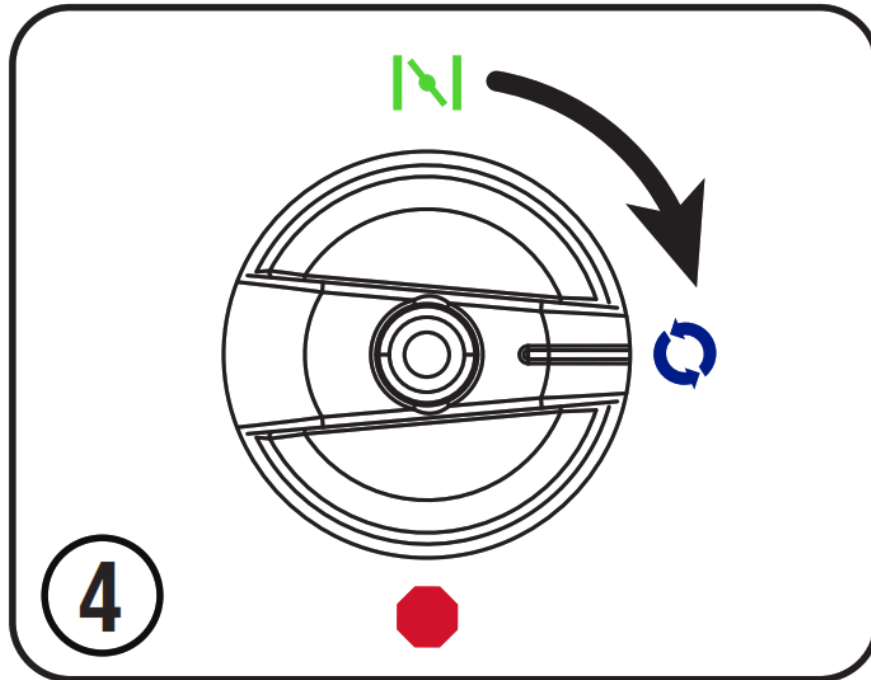
2. Turn the Starting Dial Switch to the "START"  position.

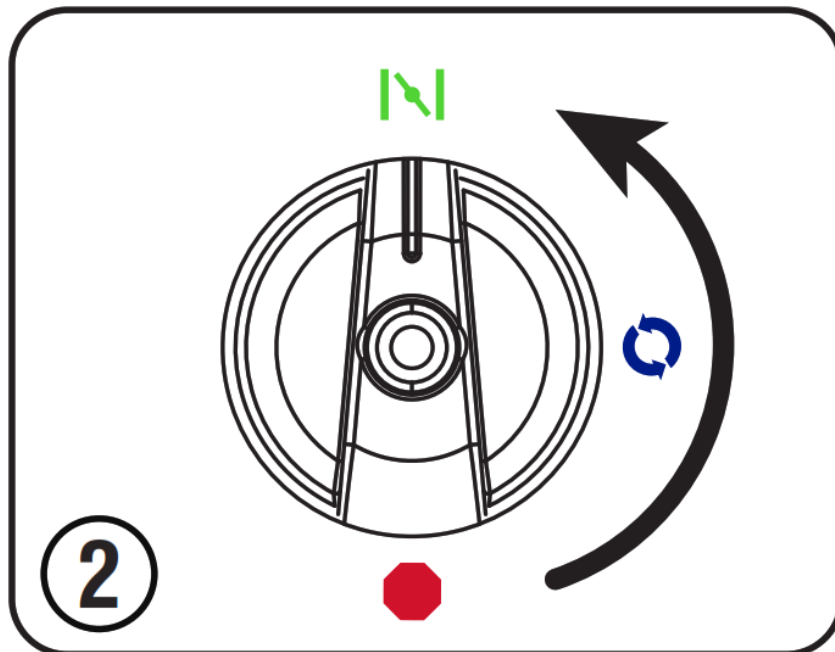


3. Pull recoil starter slowly until resistance is felt, then pull rapidly.

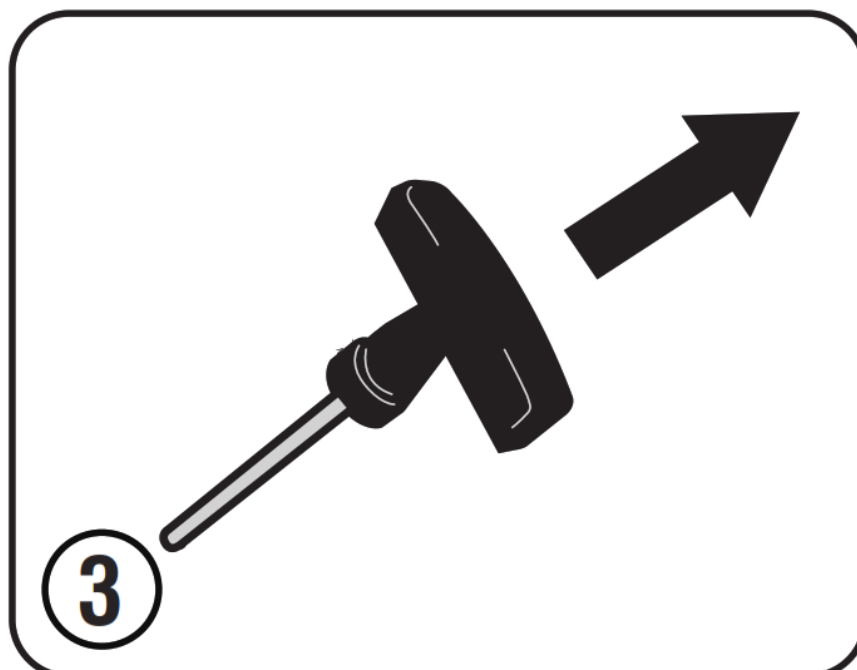

4. As soon as engine starts and warm up, turn the Starting Dial Switch to the “RUN”  position.





5. Plug in items to be powered, using only grounded extension cords.

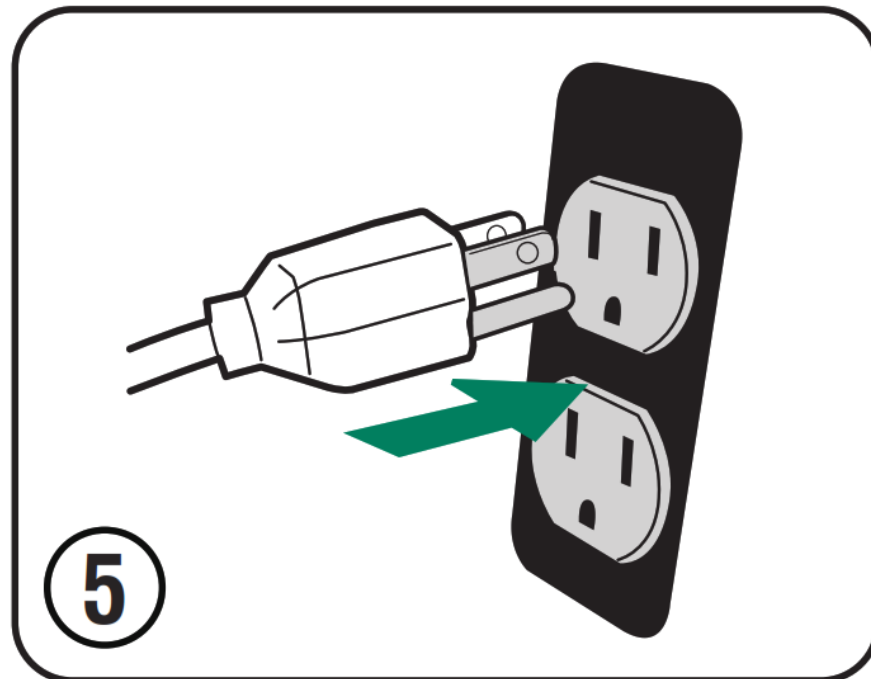


Shutdown and Storage


1. Remove any load from the generator.

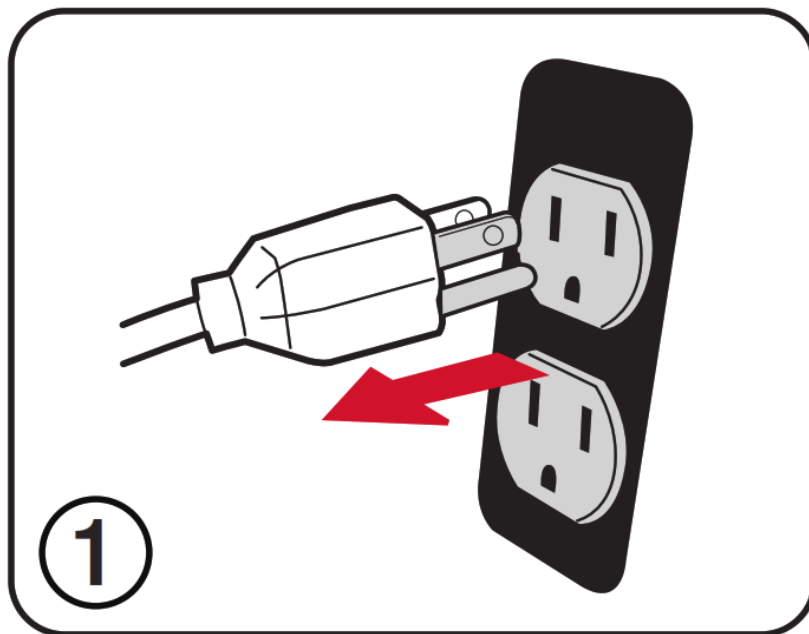

2. Turn the Starting Dial Switch to the “STOP”  position.

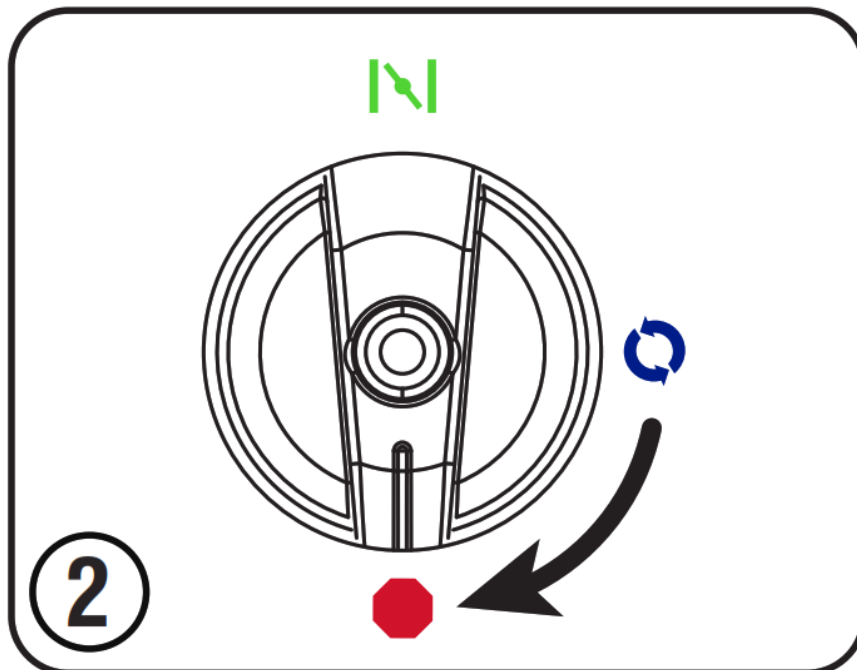

3. Turn the fuel cap vent lever to the “OFF” position.

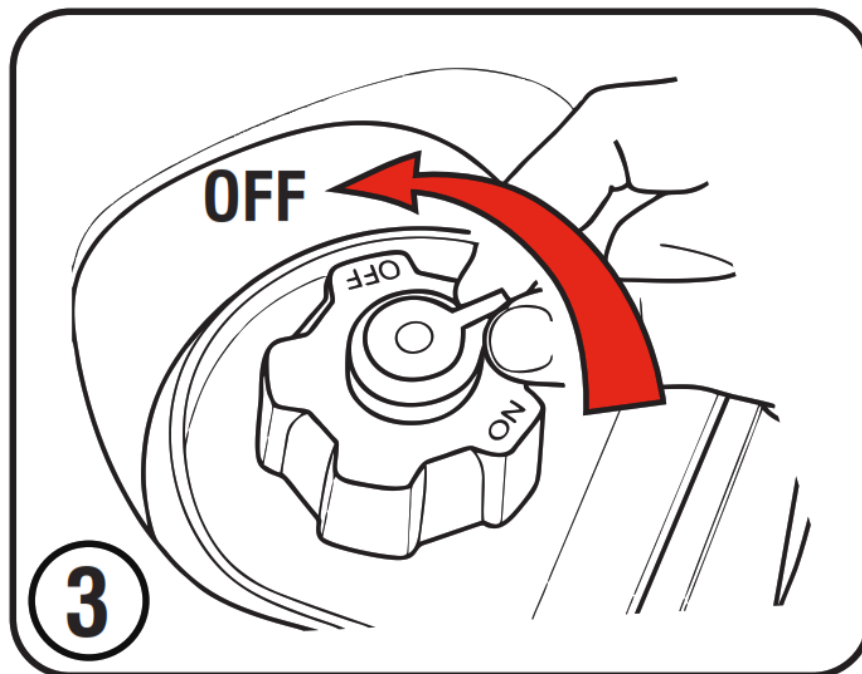


If generator is to be stored for longer than 30 days, refer to the operator's manual for further instruction.



Questions?

Call 1-855-888-3598 or
email support@a-ipower.com
32009-00918-00

Documents / Resources

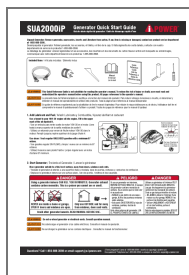

[iPOWER SUA2000iP Generator](#) [pdf] User Guide
SUA2000iP Generator, SUA2000iP, Generator