

**IRIS SL006-CC Easy Flip Keypad
Phone**



IRIS SL006-CC Easy Flip Keypad Phone User Guide

[Home](#) » [IRIS](#) » IRIS SL006-CC Easy Flip Keypad Phone User Guide 

Contents

- [1 IRIS SL006-CC Easy Flip Keypad Phone](#)
- [2 At a glance](#)
- [3 Set up your SIM card](#)
- [4 Battery](#)
- [5 Charging the device](#)
- [6 Security & convenience](#)
- [7 Approved firmware versions](#)
- [8 Information about safeguarding handsets](#)
- [9 Emergency call](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

 
IRIS

IRIS SL006-CC Easy Flip Keypad Phone



At a glance


Your IRIS Easy Flip features a unique large external screen, allowing you to take selfies with the cover closed. Explore the phone with more features.

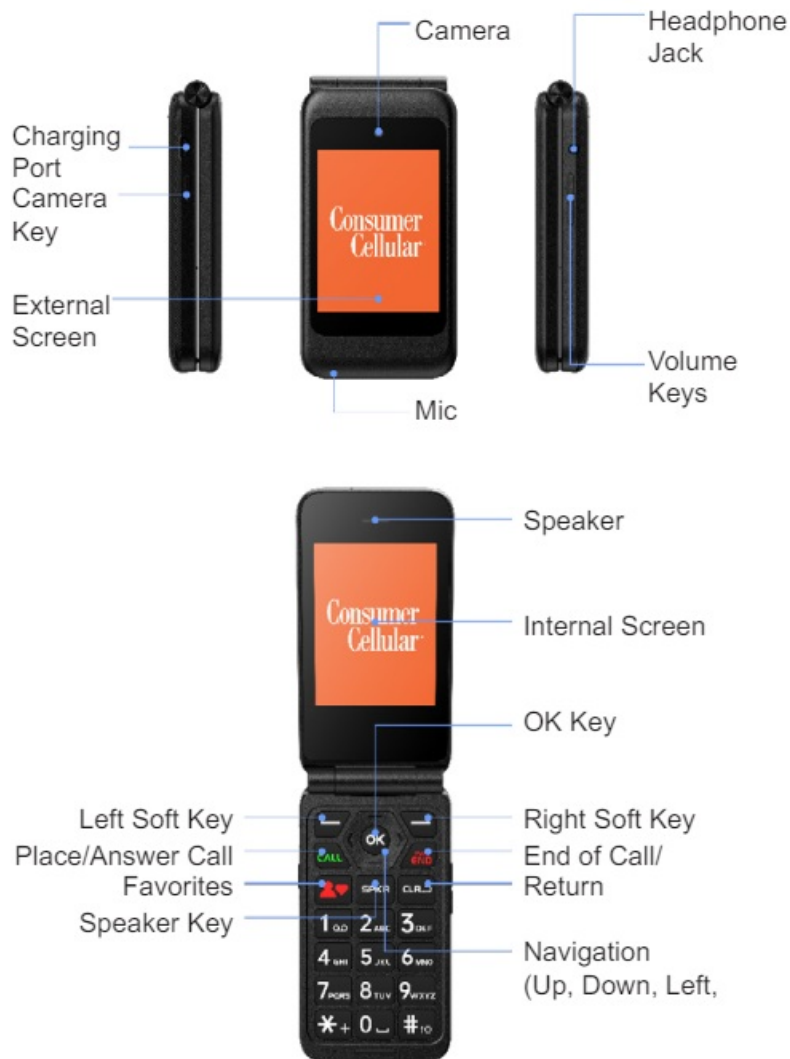

Set up your SIM card

To install a SIM or SD card, follow these steps:

 1. Power the phone off.
2. Remove the back cover. With the phone facing down, locate the notch on the bottom left edge of your phone.
3. Remove the battery.
4. Insert the SIM card into the SIM card slot with the gold contacts facing down. If you have an SD card (sold separately), insert it into the SD card slot.
5. Install the back cover. Align the back cover to the frame of the phone and apply it until it locks into place.

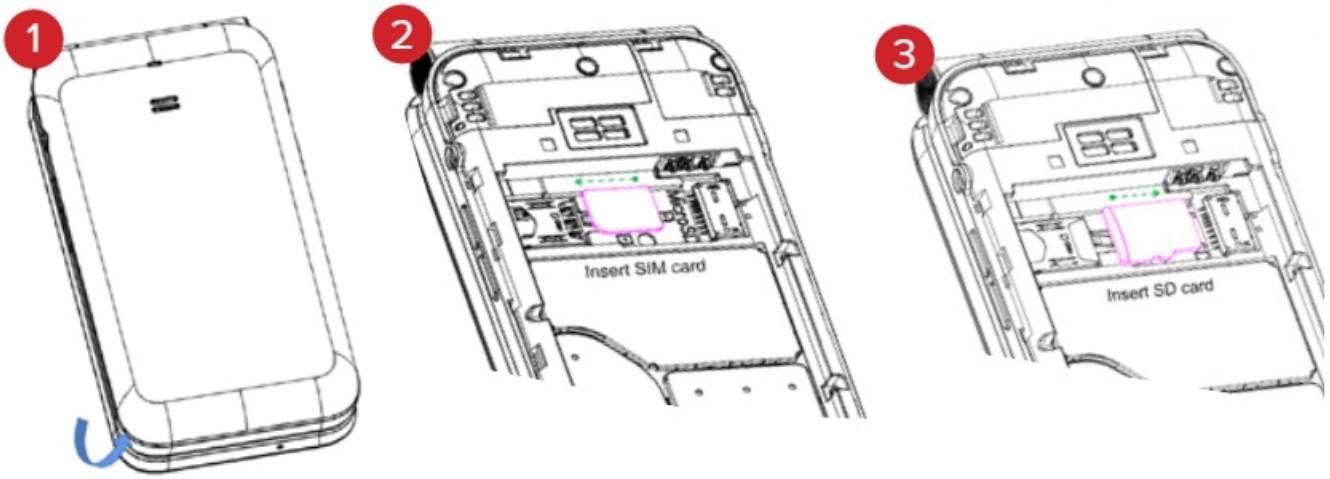


Battery

1. Connect the USB-C end of the USB cable to the charging port on the phone and connect another end to the charger.
2. Plug the charger into an electric socket to start charging your phone.
3. After charging is finished, disconnect the phone from the charger and unplug the charger from the socket.

Charging the device

Avoid storing or leaving the battery with no charge remaining. Saved information and settings may become lost or changed, or battery may become unusable. Charge once every six months before storing or leaving unused for a long period.

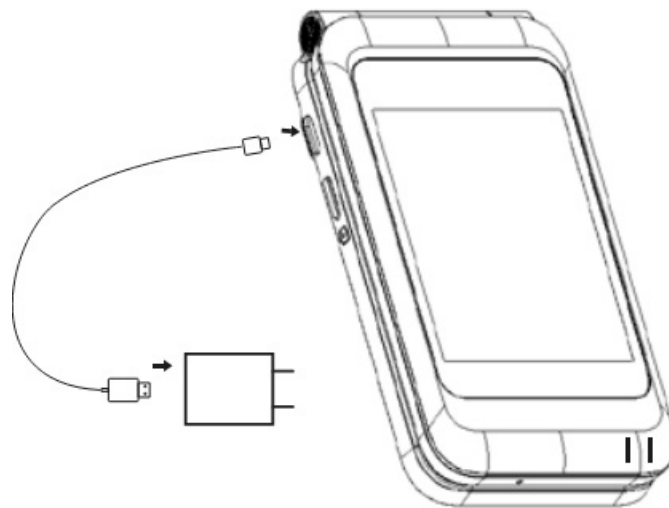

Attention: Use of unauthorized accessories could damage your phone and void your warranty.

Security & convenience

To secure your phone from being used by others without your permission, activate the following security options:

Screen Lock: Press **OK** from the home screen, then select Settings > Phone settings > Security > Screen lock.



Selfie Mode

To take photos or record a video with the phone closed, long press the Camera Key at the side to start the Camera App.

Approved firmware versions

This device will only operate with firmware versions that have been approved for use by your wireless carrier and the device manufacturer. If unauthorized firmware is placed on the device, it will not function.

Information about safeguarding handsets

We encourage customers to take appropriate measures to secure their devices and invite them to take advantage of the features available on this device to help secure it from theft and/or other unauthorized access and use. This device has a locking function (Screen lock) that can serve as the first line of defense against unauthorized use or access to stored information. Lost or stolen devices should be immediately reported to your wireless carrier so that proper measures can be taken to protect accounts. For additional information, visit your wireless carrier's Privacy Policy.

Emergency call

If your phone has network coverage, you can make an emergency call. This works even without a SIM card and without typing the PIN code. To call the 9-1-1 emergency number when the phone's screen is locked: From the lock screen, press the Left Soft Key to select Emergency and dial 911 and press Place Call Key. Although all devices are equipped with 9-1-1 emergency calling, this device may or may not permit its location to be approximated during a 9-1-1 call.*

Note:


Availability of this feature depends on upgrades to the (a) wireless network and (b) 9-1-1 calling system that are required to be installed by the local 9-1-1 response agency or public safety answering point (PSAP); these upgrades may not be available everywhere within our wireless coverage area or your roaming area. This approximation of the device's location and the transmittal of location information are subject to emergency situations, transmission limits, network problems/limitations, interconnecting carrier problems, your device, buildings/ tunnels, signal strength and atmospheric/topographical conditions, and may be curtailed, interrupted,

dropped or refused. The device’s approximate location is transmitted to the local 9-1-1 response agency or PSAP while the call is in progress; this approximation is intended solely to aid the PSAP in dispatching emergency assistance or to limit the search area for emergency services personnel. You should not rely solely on a device for essential communications (such as a medical or other emergency). Please see your wireless carrier’s Terms and Conditions and Privacy Policy for additional service restrictions and details.

Additional information

Use of some content or features may require qualifying service or access to a Wi-Fi connection. Coverage is not available in some areas. See Terms and Conditions (including arbitration provision) at consumer.cellular.com, for rate plan information, charges for features and services, and restrictions and details.

Documents / Resources

	IRIS SL006-CC Easy Flip Keypad Phone [pdf] User Guide SL006-CC Easy Flip Keypad Phone, SL006-CC, Easy Flip Keypad Phone, Flip Keypad Phone, Keypad Phone, Phone
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.