



iROCKER B08MVC1V5B NAUTICAL Paddle Boards Instruction Manual

[Home](#) » [iROCKER](#) » iROCKER B08MVC1V5B NAUTICAL Paddle Boards Instruction Manual 



NAUTICAL
Instruction Manual

Contents

- [1 CARE & MAINTENANCE](#)
- [2 TRANSPORT GUIDELINES](#)
- [3 WATER SAFETY GUIDELINES](#)
- [4 INFLATING & DEFLATING](#)
- [5 FIN INSTALLATION](#)
- [6 ADJUSTABLE TRAVEL PADDLE](#)
- [7 REPAIR KIT CONTENTS & APPLICATION](#)
- [8 DIRECTIONS FOR REPAIR KIT USE](#)
- [9 WARRANTY INFORMATION](#)
- [10 WARRANTY SUBMISSION](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

CARE & MAINTENANCE



IMPORTANT

DO NOT LEAVE IN DIRECT SUNLIGHT!

Damage resulting from heat is not covered by manufacturer's warranty!

Never leave paddle board exposed to direct sunlight when out of the water. Always keep in the shade when not in the water. If you must expose your board to direct sunlight during transport or temporary storage, it is safest to keep the (bottom) facing up. Prolonged exposure to sun, even while paddle boarding, may impact the integrity of the board materials.



RECOMMENDED PRESSURE 15 PSI

NAUTICAL boards can hold up to 25 PSI; however the recommended PSI is 15 PSI. The board will remain rigid at 15 PSI and no further benefit is gained when inflating over 15 PSI.

Over inflation to 25 PSI while in a cold environment, may result in damage when placed in direct sunlight. An increase in solar energy within the board, may cause over inflation and damage the seams, voiding warranty.



PUMP MAINTENANCE

Over time, the pump may naturally lose lubrication and you may need to reapply. Recommended agent: white lithium grease

To lubricate:

- Open the top and pull out plunger.
- Spread a thin layer of lubricant on the black gasket on the bottom of the plunger and then reassemble.

Regularly clean the air filter located under the pressure gauge. The gauge unscrews from the top by hand.



BOARD MAINTENANCE

Sun, sand, and saltwater will degrade any man-made material over time. Rinse off sand and saltwater deposits from your paddle board with fresh water and store in a cool, dry environment after each use.


Wash with soap and water with each use. Allow carry handles to dry completely prior to storing for prolonged storage period.



TRANSPORT GUIDELINES

Do not transport an inflated paddle board on top of a vehicle.

This inflatable board is designed to be compact for convenient storage & travel. Due to a lack of weight when inflated, they will travel poorly when strapped to a vehicle rooftop.

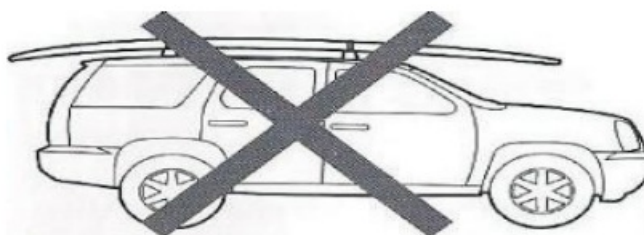

Damages or warping incurred by improper transport are not covered by the manufacturer's warranty!



When transporting the board, be sure to clear any sharp objects. Punctures are not covered by the manufacturer's warranty!

Keep the board clear of any heat producing items such as camp stoves, propane lamps, etc. Damages resulting from heat are not covered by the manufacturer's warranty!



Allow the board to completely dry before tightly rolling for packing. Excess moisture may cause mildew or mold damage.



When rolling the board, make sure the valve is open and to start at the nose. Roll in a tight straight roll. Then close the valve and wrap the strap around your roll.

AVOID standing the rolled board up on its side on rough surfaces such as concrete or rocks. This can cause damage to the first layer of your rail.

WATER SAFETY GUIDELINES



IMPORTANT



ALWAYS WEAR A COAST GUARDAPPROVED PERSONAL FLOTATION DEVICE (PFD).



NEVER GO PADDLE-BOARDING IN SEVERE WEATHER OR WATER CONDITIONS THAT MIGHT AFFECT YOUR ABILITY TO STEER THE BOARD OR RETURN TO SHORE.



NEVER ALLOW MINORS TO USE THIS BOARD WITHOUT ADULT SUPERVISION.



NEVER CONSUME ALCOHOL OR ANY OTHER SUBSTANCE THAT MAY IMPAIR YOUR COORDINATION, JUDGEMENT, OR ABILITY TO SAFELY PADDLE THE BOARD.



NEVER USE THIS BOARD BEYOND YOUR SKILLS OR ABILITY.



NEVER USE THIS PRODUCT AFTER SUNSET, BEFORE DAWN, OR AT ANY TIME IN POOR LIGHTING.



CHECK LOCAL LAWS AND REGULATIONS REGARDING PROPER AND SAFE USE OF THIS PRODUCT.

INFLATING & DEFLATING



BOARD INFLATION

- Fasten air hose to pump.
- Locate the air valve on tail section of the board deck.
- Open valve cover.
- Make sure the inner valve is disengaged in the “UP” position
- Connect air hose to air valve.
- Begin pumping.
- Pressure gauge will not read until 7 PSI in board.
- Midway through inflation, when pumping becomes more difficult, unscrew plug from top cap of pump body.
- Inflate board to 15 PSI.
- Disconnect air hose from valve. Inner valve will prevent air from escaping when disengaged in the “UP” position.

Generally, the pressure gauge will start to register a pressure reading after about 150 pumps. The board should take about 250 pumps to achieve 15 PSI. To start pumping make sure the action control setting is set to the 1 position on the pump. At approximately 100 pumps the handle will become more difficult to lift up, at this point switch the action control setting to the 2 position. Continue pumping until 15 psi is achieved.

INNER VALVE POSITIONING

The inner valve will prevent air from escaping when disengaged (“UP” position).

INNER VALVE DISENGAGED (UP POSITION) AIR PREVENTED FROM LEAVING SUP



BOARD DEFLATION

1. Open valve cover.
2. Depress inner valve and twist to lock in the open or “down” position.
3. Allow air to freely escape board Beginning at the nose, tightly roll up board to force remaining air through the air valve.


INNER VALVE ENGAGED(DOWN POSITION) AIR ESCAPES FREELY FROM SUP.



FIN INSTALLATION



Your board will come with two smaller side fins and one larger middle fin.
Insert fin into notched section of fin box first then rock fin towards rear of the board until fin is seated completely in the fin box.
Lock fin into place by flipping the lever lock down into the locking position.
Repeat steps for 2 outer fins.
Test to make sure all fins are secured before paddling.

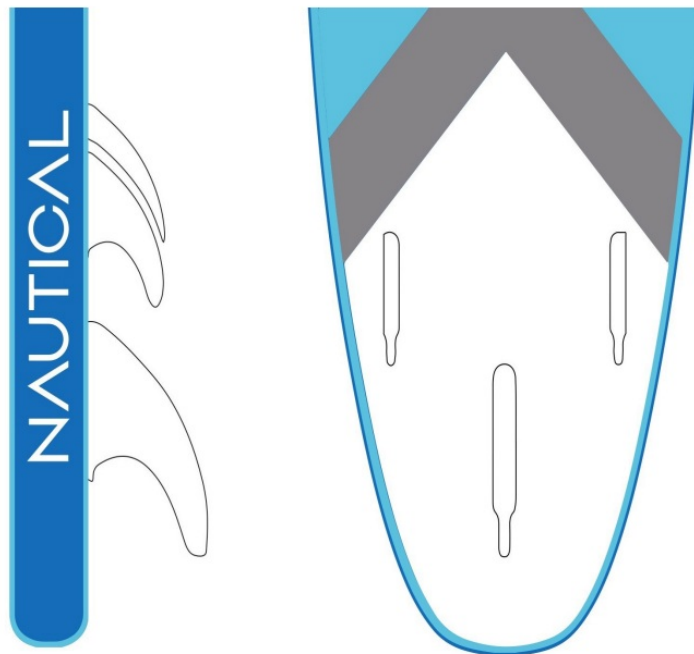

ADJUSTABLE TRAVEL PADDLE



We recommend rinsing the paddle with fresh water after every use and removing upper shaft to dry.

PADDLE CLAMP ASSEMBLY

Pull open C clamp mechanism by grabbing notched sides and pulling firmly towards you. Apply gentle pressure, pressing the C clamp shut.

PADDLE ASSEMBLY

For carrying convenience, the paddle can be separated into 3 smaller sections.

Adjustable locking mechanism for extendable handle.

Be careful to not pinch finger tips when connecting the two paddle shafts.

REPAIR KIT CONTENTS & APPLICATION



REPAIRING LEAKS & TEARS

The board comes with equipped with an emergency repair kit for small leaks or tears including a valve wrench and repair patches.

Repair glue is not included for shipping reasons but can be located on our website.

The wrench included in the repair kit should **ONLY** be used for leaking valves. It should **NEVER** be used to deflate your board. Improper use of this tool will void the 1 year warranty.

DIRECTIONS FOR REPAIR KIT USE

1. Completely deflate the paddle board.
2. Thoroughly clean the surface around the leak and the matte side of the patch with rubbing alcohol. Both surfaces must be free of moisture, oil, and debris.
3. Apply glue (not included) carefully and evenly to both paddle board surface and matte side of the patch.
4. Apply thin layer of glue across the entire patch. Best practice is to seal the patch to the board by using a clamp, leaving the clamp in place for 12-24 hours.
5. Allow glue to dry for 24 hours before using paddle board.

WARRANTY INFORMATION

UPON RECEIPT OF BOARD, PLEASE INSPECT BOARD AND REPORT ANY MANUFACTURER DEFECTS.

- All NAUTICAL boards come with a 1 year limited warranty, when purchased new. In order to receive warranty service, you must be able to supply proof of purchase.

- The 1 year warranty period begins at the date of shipment.
- All warranty claims must be submitted via email to info@IROCKERSUP.com with your order number.
- Buyer is responsible for return shipping for any warranty claim.
- After inspection of any product found to be defective, iROCKER shall either repair or replace the defective part or item as deemed necessary by iROCKER.
- Never use this product in a way that modifies the structure of the product or in a way that contradicts your instruction manual..
- For a copy of our full warranty policy, and for important warranty and liability information, please refer to our website: www.iROCKERSUP.com.

WARRANTY SUBMISSION

All NAUTICAL boards come with a 1 year limited warranty.

Board must be new upon purchase.

Proof of purchase will be required for warranty claim.

In order to file a warranty claim, please do the following:

1. Review the warranty policy to ensure you have qualifying claim.
2. Take a picture or/and a video showing the issue.
3. Take a picture of the serial number located next to the middle fin box.
4. Include your order number in the body of the e-mail and copy of proof of purchase.
5. Add " FOR WARRANTY EVALUATION" to the subject line.
6. E-mail to info@IROCKERSUP.com
7. Allow 5-7 days for the customer service team to respond. Keep your TICKET NUMBER for your reference. . In the event of a warranty issue, please stop using your NAUTICAL board until our customer service team has resolved your warranty issue."

Contact us:

PHONE: 866-985-8367

EMAIL:info@IROCKERSUP.com


GET ON THE WATER

TODAY!



<http://www.irockersup.com>

Documents / Resources

	<p>iROCKER B08MVC1V5B NAUTICAL Paddle Boards [pdf] Instruction Manual B08MVC1V5B NAUTICAL Paddle Boards, B08MVC1V5B, NAUTICAL Paddle Boards</p>
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [!\[\]\(6302aad5aed157b291fddf37b4870784_img.jpg\) Inflatable Paddle Boards | Solid SUPs | iROCKER](#)

Manuals+.