




ISOLED 114664 Sys-Pro Push Input Radio Output for Switch or Dimmer Receiver User Manual

[Home](#) » [ISOLED](#) » ISOLED 114664 Sys-Pro Push Input Radio Output for Switch or Dimmer Receiver User Manual 

ISOLED 114664 Sys-Pro Push Input Radio Output for Switch or Dimmer Receiver User Manual

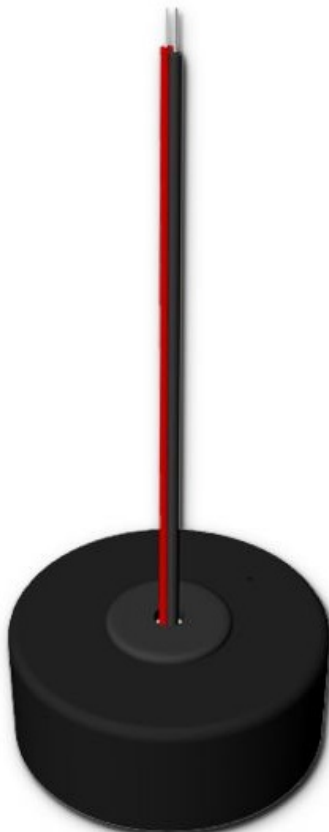


Contents

- [1 Features](#)
- [2 Technical Parameters](#)
- [3 Dimension](#)
- [4 Battery Installation](#)
- [5 Wiring diagram](#)
- [6 Match Remote Control \(two match ways\)](#)
- [7 Safety information](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Features

- Apply to single color LED RF controller or RF dimming driver.
- Connect with push switch to achieve on/off and 0-100% dimming function.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- CR2032 button battery powered.

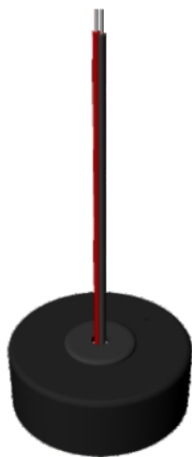

CE RoHS  LVD RED

Technical Parameters

Input and Output

- **Output signal:** RF 2() .4GHz
- **Working voltage:** 3VDC CR2032 ()
- **Working current:** 5mA
- **Standby current:** 2μA
- **Standby time:** 2 years
- **Remote distance:** 30m(Barrier-free space)

Safety and EMC

- **EMC standard (EMC):** EN301 489,EN 62479

- **Safety standard(LVD):** EN60950
- **Radio Equipment(RED):** EN300 328
- **Certification:** CE,EMC,LVD,RED


Warranty

- **Warranty:** 5 years


Environment

- **Operation temperature:** Ta: -30 °C ~ +55 °C
- **IP rating:** IP20


Dimension

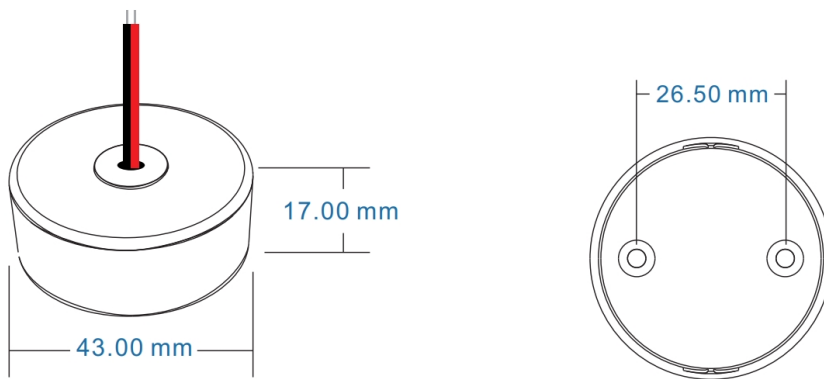

Battery Installation

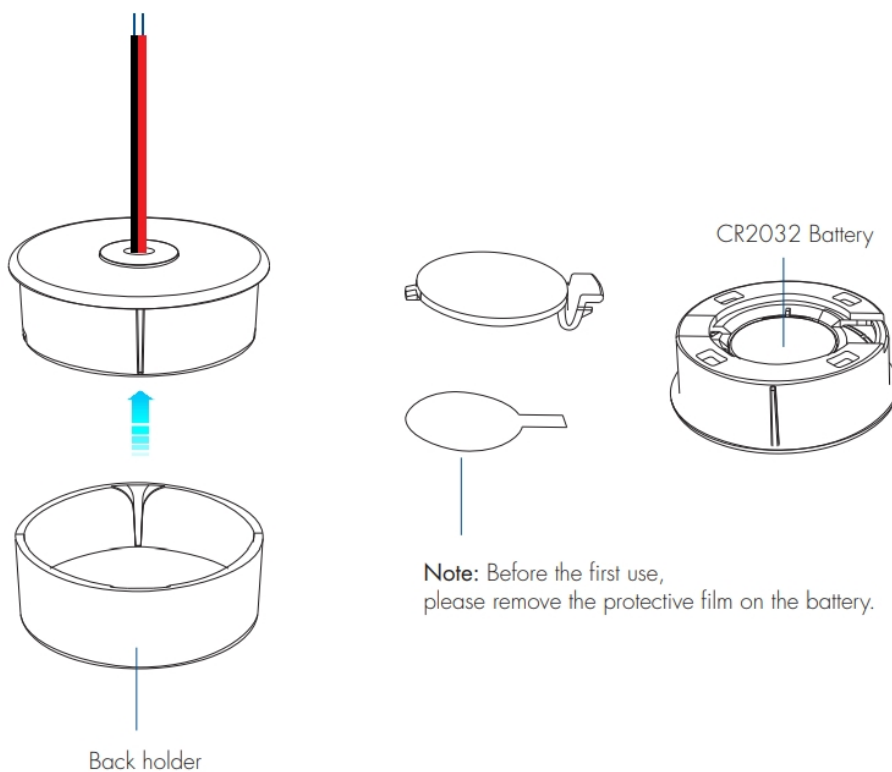

Wiring diagram

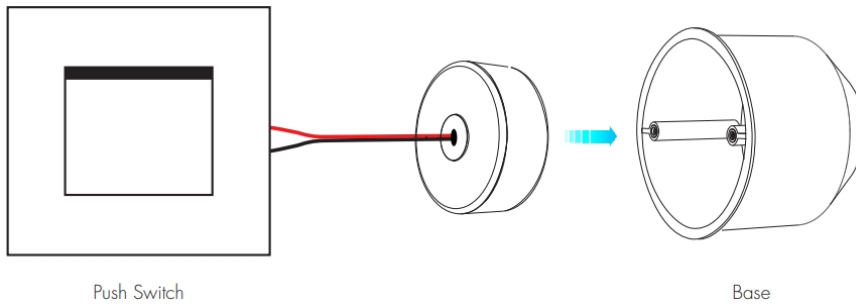

Push switch function:

1. Short press: Turn on/off light.
2. Long press(1-6s): When light is on, increase or decrease brightness continuously.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press the push switch.
The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power again, then repeat the procedure again. After the second ON/OFF procedure immediately short press on/off key (single zone remote) zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

 
Delete:.

Switch off the power, then switch on power again, immediately short press the push switch 5 times. The light blinks 5 times means all matched remotes were deleted.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. For indoor and dry location use only.

Documents / Resources

	<p>ISOLED 114664 Sys-Pro Push Input Radio Output for Switch or Dimmer Receiver [pdf] User Manual</p> <p>114664, Sys-Pro, Push Input Radio Output for Switch or Dimmer Receiver, Sys-Pro Push Input Radio Output for Switch or Dimmer Receiver, 114664 Sys-Pro Push Input Radio Output for Switch or Dimmer Receiver, 114664 Sys-Pro Push Input Radio Output, Sys-Pro Push Input Radio Output</p>
---	--

[Manuals+](#)