



ISTAR Colourflow Bluetooth Pro Controller for Nintendo Switch User Manual

[Home](#) » [ISTAR](#) » ISTAR Colourflow Bluetooth Pro Controller for Nintendo Switch User Manual

Contents [[hide](#)]


- [1 ISTAR Colourflow Bluetooth Pro Controller for Nintendo Switch](#)
- [2 Overview](#)
- [3 Included in Box:](#)
- [4 PRODUCT SPECIFICATIONS AND CHARACTERISTICS](#)
- [5 AUTOMATIC SLEEP:](#)
- [6 LOW VOLTAGE ALARM](#)
- [7 TURBO FUNCTION](#)
- [8 MOTOR VIBRATION ADJUSTMENT METHOD](#)
- [9 FCC STATEMENTS:](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

ISTAR

ISTAR Colourflow Bluetooth Pro Controller for Nintendo Switch



Overview

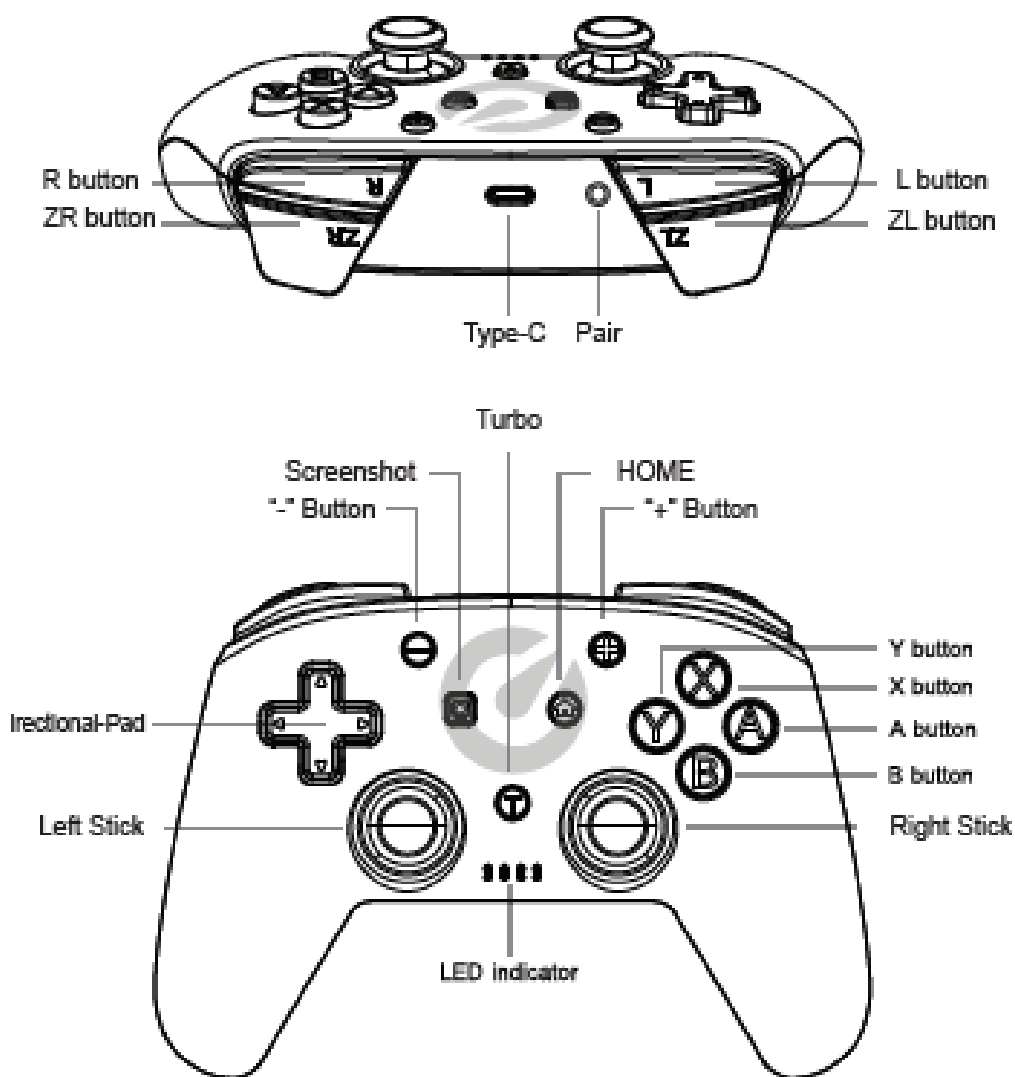

Product Model: BGK548 / BGK549 / BGK550 / BGK551

Included in Box:

- Wireless Controller
- x USB Charge Cable (1m)
- x User Manual
- x Warranty Card

PRODUCT SPECIFICATIONS AND CHARACTERISTICS

1. Size: 154 * 111 * 59mm.
2. Weight: 185g + 10g.
3. Material: ABS
4. Connection method: Bluetooth.
5. Vibration: dual motor, powerful vibration mode.
6. Built-in six-axis gyroscope and acceleration function for better in-game experience.
7. Supports rapid fire function.

PRECAUTION & MAINTENANCE

Before use, please read the following important safety information. Following these simple guidelines will ensure trouble-free operation and optimal performance of the product and compatible electronic devices. Improper use may cause the product to stop working and may even cause serious injury to the user.

- This product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- For indoor use only.
- Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture.
- Do not drop the product or subject it to undue shock.
- This product contains small parts. Keep out of reach of children.
- Keep children away from the packaging material as there is a risk of suffocation. Dispose of packaging material according to applicable local regulations.
- Do not attempt to service or disassemble. The unit is not user-serviceable. Attempting to disassemble or service the unit could result in an electrical hazard, including injury. If you experience problems with the unit, discontinue use and contact Customer Support for assistance. Attempting to open or service the unit will void all warranties, expressed or implied.
- Failure to follow these directions may void the warranty.

CONNECTION METHOD:

[first use]

Please ensure that the console is powered on and has been upgraded to the latest

1. . Press the Switch power button to start the console.
2. . After booting up, do the following: first enter the “Handle Settings – Change Grip / Order” page, then press and hold the “pair” button for at least two seconds
3. . The **4 LED** lights will continue to flash. After the connection is successful, the LED lights indicate the corresponding player.

[Repeated Use]

1. Press the Home button for more than 1 second to wake up the controller.
2. The switch console enters connection mode automatically when powered on, after the connection is successful, the corresponding LED light on the controller will remain lit
3. The controller will enter sleep mode automatically if a connection is unsuccessful for more than 10 seconds; other keys have no wake-up function.

AUTOMATIC SLEEP:

1. The controller will automatically enter sleep mode when the console screen is off
2. The controller will enter sleep mode if no button is pressed for 5 minutes. (sensor does not move)|
3. When in Bluetooth mode, press the HOME button for 5 seconds, to disconnect from the console.

CONSOLE WAKE UP:

If the controller is paired with the console but in sleep mode, simply press the “Home” button on the controller to

wake the console.

CHARGING INDICATION:

1. When the controller is turned off, **LED1-LED4** flashes slowly when the power is off, the **LED** will turn off when fully charged.
2. Battery low voltage alarm system: current indicator flashes (quick flash)
3. The current channel indicator flashes (slow flash) when charging, and the current indicator is always on when fully charged.
4. When the pairing connection indication conflicts with the charging low power indicator the pairing connection indicates a concern

LOW VOLTAGE ALARM

If the lithium battery voltage is lower than $3.55V + 0.1 V$, the current channel light flashes quickly to indicate low voltage. If the lithium battery voltage is lower than $3.45V + 0.1 V$, it will automatically sleep.

TURBO FUNCTION

1. Hold the Turbo button and any of A/B/X/Y/L/R/ZL/ZR to set the Auto Turbo.
2. Hold the Turbo button and press any of A/B/X/Y/L/R/ZL/ZR twice to set the manual Turbo.
3. Press A/B/X/Y/L/R/ZL/ZR and Turbo button to clear Turbo function; Long press Turbo button for 5 seconds to clear all the Turbo functions. Turbo function without LED indication.

MOTOR VIBRATION ADJUSTMENT METHOD

1. To increase motor dynamics
2. To reduce motor dynamics

Precaution Before Use

Note : if you haven't used the official "Switch Pro" controller before, please choose the "Switch JoyCon" and follow the connection.

1. System Settings
2. Controllers and Sensors
3. Pro Controller Wired Communication "OFF→ON"

Instructions of Switch Controller

- Press the "Pair" button for more than two seconds
- Set up Successful!

TROUBLESHOOTING TIPS:

If the wireless controller fails to operate or operates incorrectly, please follow the steps below before seeking assistance:

- Verify the controller and console are both powered on.
- Verify the controller is within operating distance of the console.
- Verify the battery of the controller is fully charged.
- Verify the controller has been properly synchronized with the console.

If, after verifying the steps above, the wireless controller still does not work correctly, please try the following:

- Turn the Nintendo Switch console power off.
- Wait for 30 seconds and then turn the console power on.
- Press the RESET button on the back of the wireless controller to reset the controller.
- Wait for 10 seconds and then resynchronize the controller with the console.


FCC STATEMENTS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	<p>ISTAR Colourflow Bluetooth Pro Controller for Nintendo Switch [pdf] User Manual YS07, 2AV5Y-YS07, 2AV5YYS07, BGK548, BGK549, BGK550, BGK551, Colourflow Bluetooth Pro Controller for Nintendo Switch</p>
---	---