


**iStorage**  
diskAshur 3 Full  
Disk Data Security



# iStorage diskAshur 3 Full Disk Data Security User Guide

[Home](#) » [iStorage](#) » iStorage diskAshur 3 Full Disk Data Security User Guide 

## Contents

- [1 iStorage diskAshur 3 Full Disk Data Security](#)
- [2 Specifications](#)
- [3 diskAshur3 / diskAshur PRO3 Layout](#)
- [4 First Time Use](#)
- [5 Locking the diskAshur3 / diskAshur PRO3](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

# iStorage

**iStorage diskAshur 3 Full Disk Data Security**



## Specifications

- Product: diskAshur3 / diskAshur PRO3
- Type: Hardware-encrypted portable HDD/SSD drive
- Admin PIN: 8-64 digit customizable
- Security Features: PIN protection, hardware encryption

## Quick Start Guide

Thank you for purchasing the new iStorage diskAshur3/diskAshur PRO3, an ultra-secure and easy-to-use, hardware-encrypted, PIN-protected portable HDD/SSD drive. Your drive is supplied in the 'Initial Shipment State' with no pre-set Admin PIN. An 8-64 digit Admin PIN must be configured as described under 'First Time Use' before the drive can be used.

## diskAshur3 / diskAshur PRO3 Layout



 

LAYOUT HERE

## First Time Use

### PIN Requirement

- PINs must be a minimum length of 8 and a maximum of 64 digits.
- Cannot contain all sequential numbers (12345678 or 87654321).
- Cannot contain all repeating numbers (11111111).
- The SHIFT key can be used for additional combinations (e.g. SHIFT+1 is a separate value to just 1).

To configure an 8-64 digit Admin PIN and unlock the diskAshur3 / diskAshur PRO3 for the first time, please follow the simple steps in the table below.


 



Instructions - First Time Use	LED	LED State
1. Connect the drive to a powered USB port on your computer		Solid RED and GREEN LEDs turn on indicating the drive is in the Initial Shipment State
2. Press and hold down both UNLOCK (🔓) + 1 buttons		LEDs turn to blinking GREEN and solid BLUE
3. Enter a New Admin PIN (8-64 digits) and press the UNLOCK (🔓) button once		Blinking GREEN and solid BLUE LEDs switch to a GREEN blink then back to Blinking GREEN and solid BLUE LEDs
4. Re-enter your New Admin PIN and press the UNLOCK (🔓) button once		BLUE LED rapidly blinks then switches to a solid BLUE LED and finally to a solid GREEN LED indicating the Admin PIN has been successfully configured and the drive is unlocked and ready to be used

## Locking the diskAshur3 / diskAshur PRO3

To lock the drive, safely eject it from your computer and then unplug it from the USB port. If data is being written to the drive, ejecting the drive will result in incomplete data transfer and possible data corruption.

## Unlocking diskAshur3 / diskAshur PRO3 with the Admin PIN

To unlock the drive with the Admin PIN, please follow the simple steps in the table below.

How to unlock with the Admin PIN	LED	LED State
1. Connect the drive to a powered USB port on your computer		A solid <b>RED</b> LED turns on indicating the drive is in Standby State
2. In Standby State (solid <b>RED</b> LED) press the <b>UNLOCK</b> (  ) button once		<b>GREEN</b> and <b>BLUE</b> LEDs blink together
3. With the <b>GREEN</b> and <b>BLUE</b> LEDs blinking together, enter your <b>Admin PIN</b> and press the <b>UNLOCK</b> (  ) button once		The <b>GREEN</b> LED blinks several times and then switches to a solid <b>GREEN</b> LED indicating the drive has been successfully unlocked as Admin and is ready to be used

Your diskAshur3 / diskAshur PRO3 can be easily configured with a host of security features. For detailed instructions please refer to the user manual. The user manual can be found pre-loaded on your drive and published on our website <https://istorage-uk.com/product-documentation/>.

1. Connect the drive to a powered USB port on your computer.
2. In Standby State (solid RED LED), press the UNLOCK button once.
3. Enter your Admin PIN when the GREEN and BLUE LEDs blink together and press the UNLOCK button once.

iStorage Limited, iStorage House, 13 Alperton Lane, Perivale, Middlesex, UB6 8DH, England

**Telephone:** +44 (0) 20 8991 6260

**Website:** [www.istorage-uk.com](http://www.istorage-uk.com)

**Email:** [info@istorage-uk.com](mailto:info@istorage-uk.com)

iStorage provides the following helpful resources:

**website:** [www.istorage-uk.com](http://www.istorage-uk.com)

**email:** [support@istorage-uk.com](mailto:support@istorage-uk.com)

**Telephone:** +44 (0) 20 8991 6260

iStorage Technical Support Specialists are available from 9:00 a.m. to 5:30 p.m. GMT, Mon – Fri.

## FAQs

### Q: Where can I find detailed instructions for configuring security features?

A: The user manual, pre-loaded on your drive and available on our website at iStorage User The manual, provides detailed instructions for configuring security features.

## Documents / Resources



[iStorage diskAshur 3 Full Disk Data Security](#) [pdf] User Guide  
diskAshur 3 Full Disk Data Security, diskAshur 3, Full Disk Data Security, Disk Data Security, Data Security, Security

References

- [🇬🇧 UK.COM | A Powerful Domain for the United Kingdom](#)
- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.