


CHANGING THE INVERTER PROTOCOL

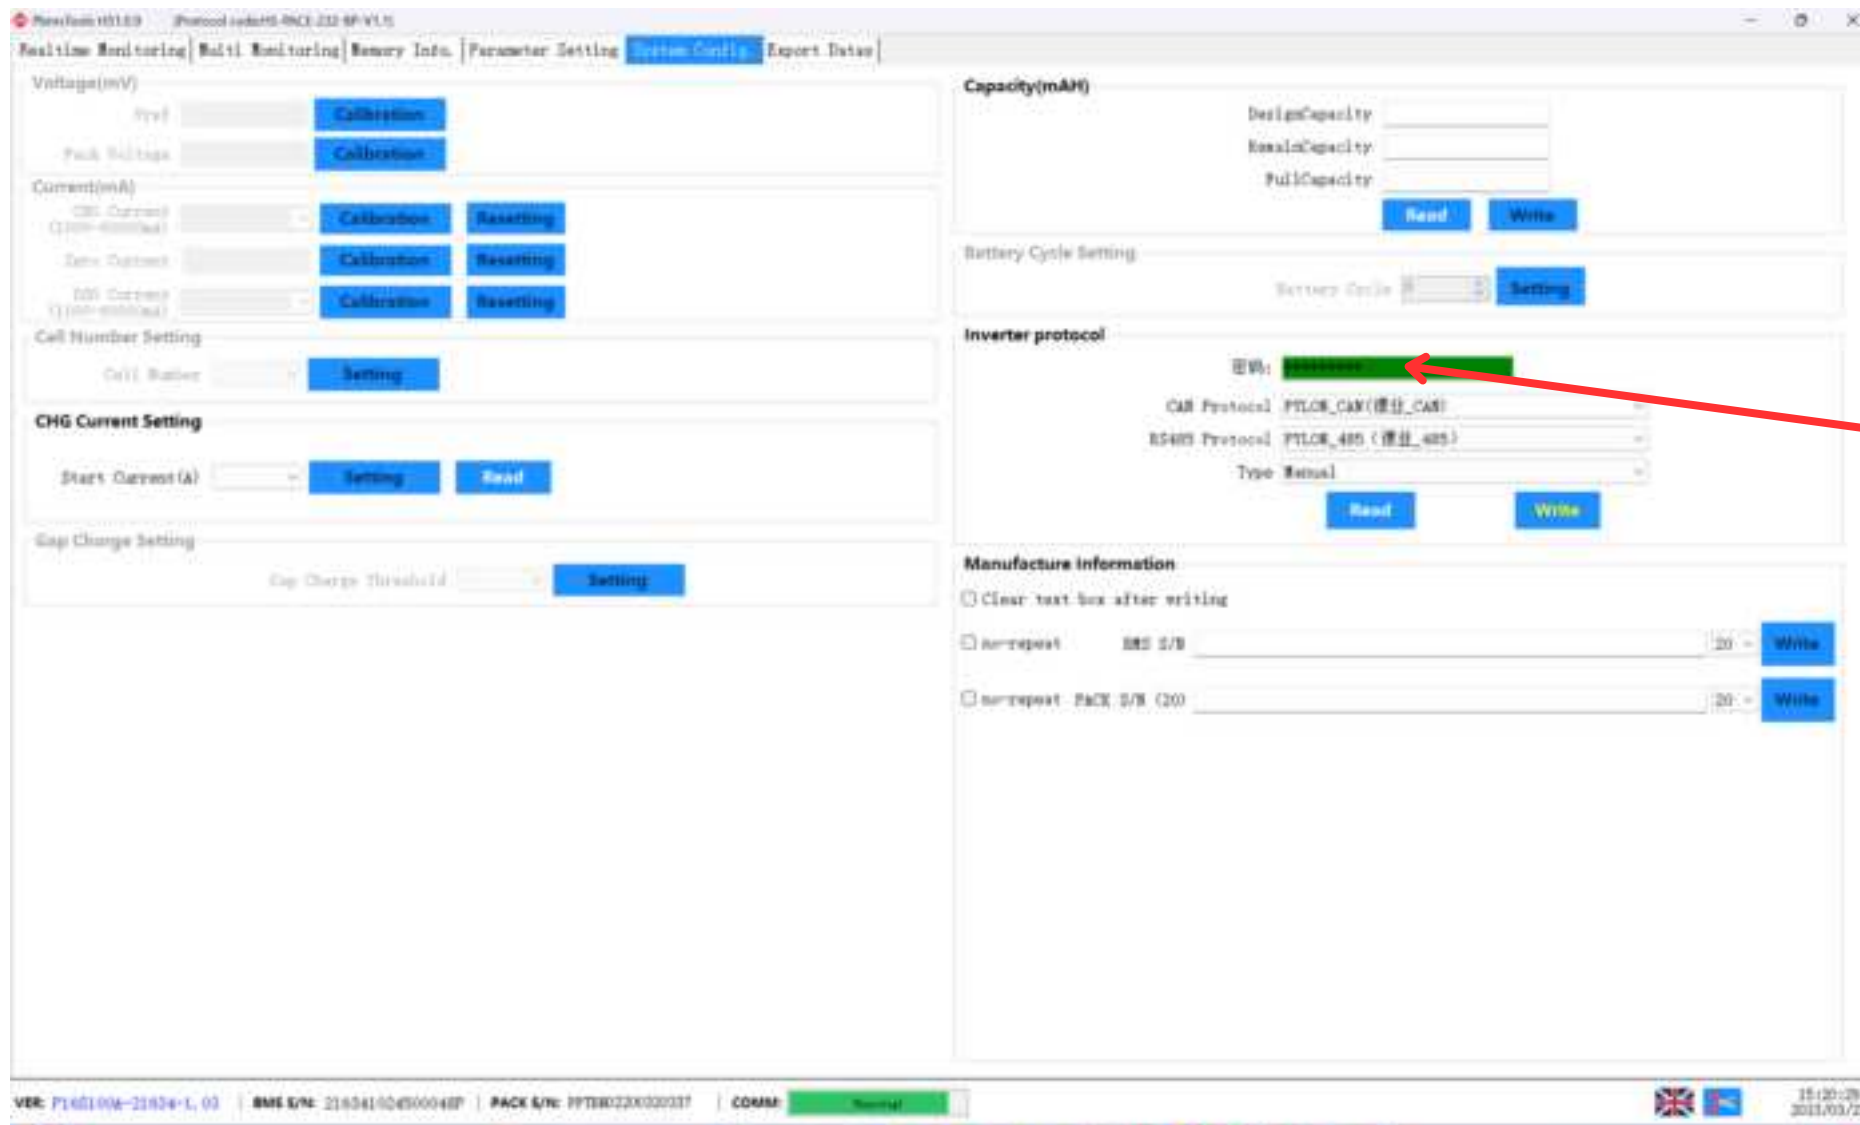

Input Password **Pz#168178** here

Open Pbms Tools

Connect to battery

Navigate to **System Config**

Click **Read**

Input Password **Pz#168178**

Amend CAN Protocol

Click **Write**

Restart Battery

