 


iTalkBB Aljia SH6W Base Station User Guide

[Home](#) » [iTalkBB](#) » iTalkBB Aljia SH6W Base Station User Guide 

iTalkBB Aljia SH6W Base Station

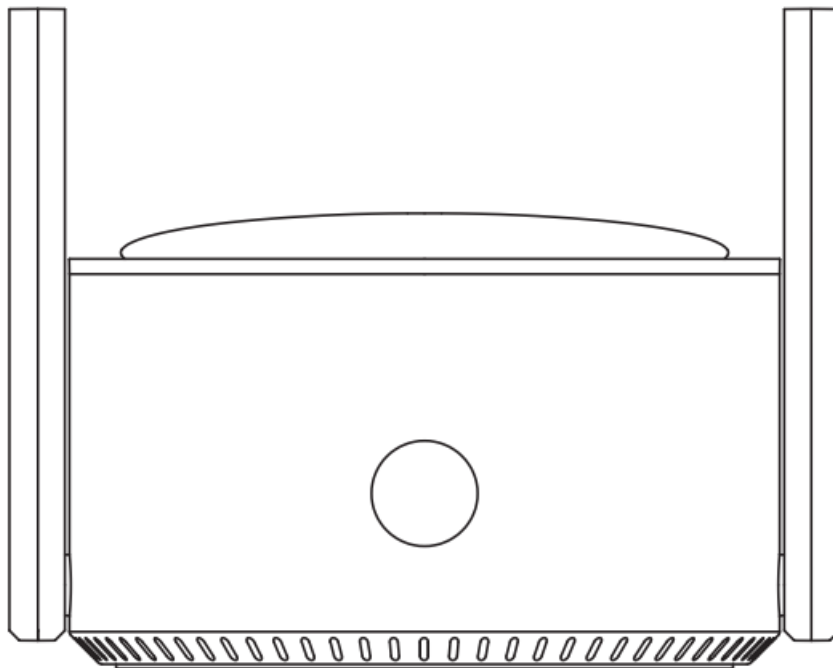

Contents

- [1 24/7 Customer Service](#)
- [2 In The Box](#)
- [3 Basics of base station](#)
- [4 Setup your base station](#)
- [5 Light Indications](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

24/7 Customer Service

We provide customer support in English, Chinese (Mandarin and Cantonese), and Korean. Our customer service professionals will assist you with your service request.



We are available 24/7.

For United States and Canada, 1-877-482-5503 For Korean Customer Service, 1-800-875-8318 *Korean CustomerService 06:00-22:30 PST



 
We are also available on WeChat.

Our customer service is also available on WeChat!
Search iTalkBB on WeChat, and chat with us!


For more information, please visit www.iTalkBB.com.

In The Box


Base Station x1
Base Station Power Adaptor x1
Base Station Ethernet Cable x1
Pre-install SD Card x1
Quick Start Guide x1

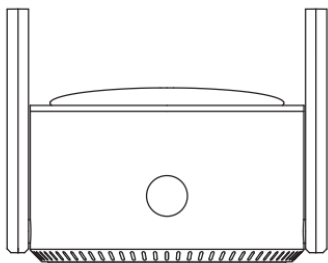

Base Station

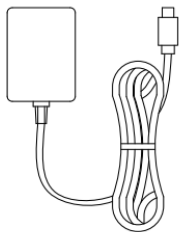 


Power Adaptor

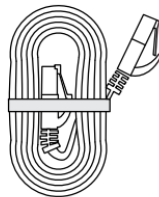 

Ethernet Cable




 Quick Start Guide



Pre-install
SD Card

 
Basics of base station

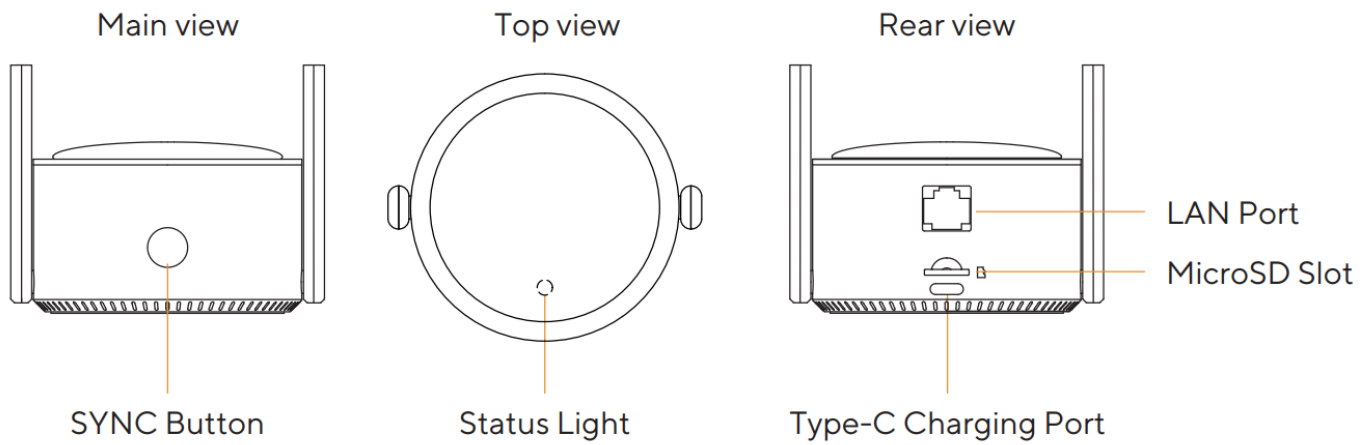

Setup your base station

1. Download the Aljia app and create an account.

 Note: If you already use the iTalkBB Aijia app, please make sure that you are using the latest version. To find out if an update is available, go to the app store and search for iTalkBB Aljia.

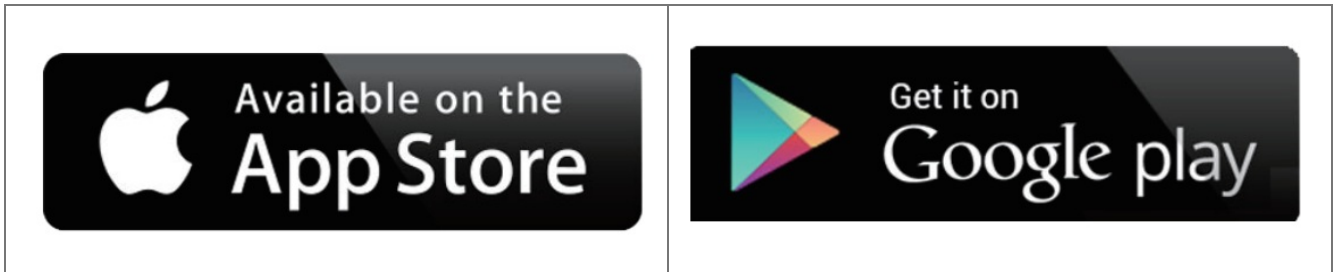

2. Follow the Aljia app to set up the base station.



Light Indications



Solid yellow light

The device is powered on and initializing



Flashing yellow & blue lights

The device is pairing with the camera



Flashing blue light

The device is connecting to the network



Solid blue light

The device is working properly



Flashing purple light

The device is upgrading

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference , and **(2)** This device must accept any interference received, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules . These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

This radio transmitter [IC: 25329-SH6W] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

A	B	C	D
	ANT Model	JilaxGain (dBi)	Impedance (ohm)
Antenna 0	ANTP1-CC0900B5	0	50
Antenna 1	ANTP1-CC1350B5	0	50



Documents / Resources

	iTalkBB Aijia SH6W Base Station [pdf] User Guide SH6W, 2ASRO-SH6W, 2ASROSH6W, Aijia SH6W Base Station, Aijia SH6W, Base Station, SH 6W Base Station
---	--

References

- [iTalkBB](#)

[Manuals+](#).