



## ITAWAY Wireless Mouse and Pad Set Instructions

[Home](#) » [ITAWAY](#) » ITAWAY Wireless Mouse and Pad Set Instructions 

ITAWAY Wireless Mouse and Pad Set



## Contents

[1 Instructions for use](#)

[2 Documents /  
Resources](#)

[2.1 References](#)

[3 Related Posts](#)

## Instructions for use


- Start by opening the lid located on the back of the mouse. Please refer to the accompanying image for guidance. Inside the lid, you will find the USS receiver. Remove it from its storage compartment.
- Next, you need to insert two AAA batteries into the mouse. Please note that the batteries are not included and should be obtained separately.
- Once the batteries are properly inserted, plug the USS receiver into an available USB port on your computer. In most cases, your computer's system will automatically set up the mouse.
- When the mouse's battery is low, you may experience a shaky or lagging pointer, or it may not move at all.

This indicates it's time to replace the batteries!

- For more demanding activities like gaming or photo editing, you can adjust the sensitivity from: 800, 1200, or 1600 DPI, allowing you to customize the mouse's responsiveness to suit your needs.



## Documents / Resources

<p><b>INSTRUCTIONS</b></p> 	<p><a href="#">ITAWAY Wireless Mouse and Pad Set [pdf] Instructions</a> Wireless Mouse and Pad Set, Mouse and Pad Set, Pad Set, Set</p>
--	---

## References

- [User Manual](#)

Manuals+.