



ITC 69389 Surface Mount Docking Backup Light Installation Guide

[Home](#) » [ITC](#) » ITC 69389 Surface Mount Docking Backup Light Installation Guide 

Contents

- [1 ITC 69389 Surface Mount Docking Backup Light](#)
- [2 FAQ](#)
- [3 PARTS NEEDED](#)
- [4 Safety Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



ITC 69389 Surface Mount Docking Backup Light



Specifications

- Part Number: 69389
- Power Source: 12V DC
- Color: Black and Red
- Installation Location: Any suitable surface

Parts Needed

- Docking/Backup Light
- Mounting Screws
- Power Drill
- Safety Instructions
- Wire Nuts (not provided)

Installation Instructions

1. Remove the bezel if it is not already disassembled.
2. Determine the installation location for your light.
 - Select a suitable surface to mount the light.
3. Once the location is determined, drill a 0.5" hole.
4. Connect the wires to a power source.
 - Use wire nuts to securely connect the wires.
 - Black (-) wire should be connected to the negative terminal.
 - Red (+) wire should be connected to the positive terminal.
5. Feed the wires back through the hole.
6. Screw the light in place using the provided screws.

7. Reattach the bezel.

Contact Information

3030 Corporate Grove Dr. Hudsonville, MI 49426

Phone: 616.396.1355

Website: itc-us.com

FAQ

Q: Can this light be used underwater?

A: No, this light is not designed for underwater use. It is recommended to keep it dry and away from water.

Q: Can the light be connected to a different power source?





A: The light is designed to be connected to a 12V DC power source. Connecting it to a different power source may cause damage and void the warranty.

Q: What is the lifespan of this light?

A: The lifespan of the light depends on various factors such as usage, operating conditions, and maintenance. Generally, it can last for several thousand hours of continuous use.

Part#: 69389



PARTS NEEDED

			
Docking/Backup Light	Mounting Screws	Power Drill	Wire Nuts (not provided)

Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Operating Voltage: 10 – 14V DC

1. Remove bezel if not already disassembled
2. Determine the installation location for your light. Once determined drill a 0.5" hole
3. Connect wires to power source
4. Feed wires back through the hole and screw the light in place using the screws provided
5. Reattach bezel

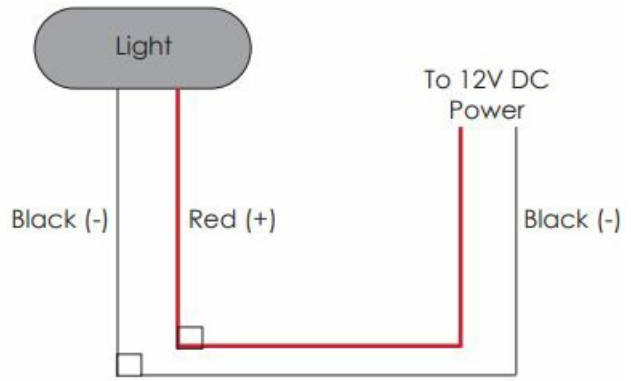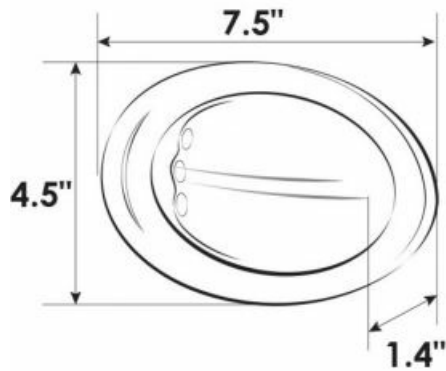


3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355

itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy

Rev A • 10/09/23

Documents / Resources

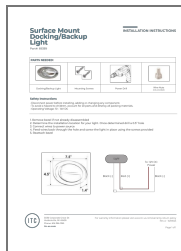

[ITC 69389 Surface Mount Docking Backup Light](#) [pdf] Installation Guide

69389, 69389 Surface Mount Docking Backup Light, Surface Mount Docking Backup Light, Mo
unt Docking Backup Light, Docking Backup Light, Backup Light, Light

References

- [ITC Warranty & Return Policy](#)
- [User Manual](#)