



ITC 69921X-YY View or Bella Reading Light Installation Guide

[Home](#) » [ITC](#) » ITC 69921X-YY View or Bella Reading Light Installation Guide 





 


**69921X-YY View
or Bella Reading Light
Part#: 69921X-YY or 69925X-YY
Installation Guide**

Contents

- [1 69921X-YY View or Bella Reading Light](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

69921X-YY View or Bella Reading Light

PARTS/TOOLS NEEDED:

				
View or Bella Reading Light	Mounting Screws (Qty: 2)	Butt Splice Connectors (Not Provided)	Power Drill	Philips Screwdriver

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.


- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.

- It is recommended that fuse protection be added to the positive (+) input.

1. Determine the installation location and use the mounting bracket to mark the location of the screw holes and wiring hole. Drill a hole and pull the units wiring through. Screw down the mounting bracket using the provided screws.



2. Using the wiring diagrams below, wire the light to the units power.

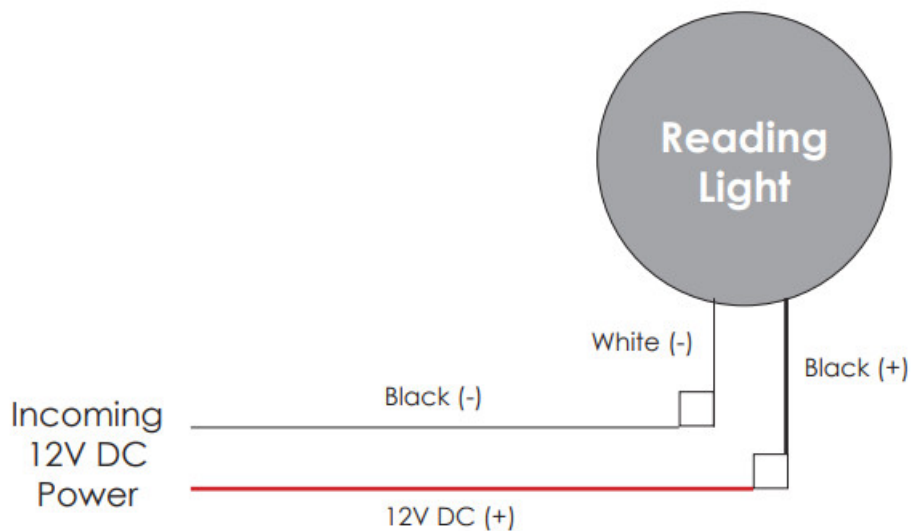

3. Feed the wires back through the hole and tighten the set screws on either side of the light. Test the light.



3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355

itc-us.com

For warranty information please visit
www.itc-us.com/warranty-return-policy

Rev D •11/22/22

Documents / Resources



[ITC 69921X-YY View or Bella Reading Light](#) [pdf] Installation Guide
69921X-YY, 69925X-YY, 69921X-YY View or Bella Reading Light, View or Bella Reading Light, Bella Reading Light, Reading Light

References

- [ITC ITC Warranty & Return Policy](#)

Manuals+,