



ITC 86472-XX Stow and Go Assist Handle Instruction Manual

[Home](#) » [ITC](#) » ITC 86472-XX Stow and Go Assist Handle Instruction Manual 

Contents





- [1 ITC 86472-XX Stow and Go Assist Handle](#)
- [2 PARTS/TOOLS NEEDED](#)
- [3 IMPORTANT SAFETY INSTRUCTIONS](#)
- [4 INSTALLATION](#)
- [5 warranty](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



ITC 86472-XX Stow and Go Assist Handle



PARTS/TOOLS NEEDED

PARTS/TOOLS NEEDED:				
				
Stow & Go Handle Standard or Mini	#10 Pan Head Screws, Coated for Exterior Install (Not Provided)	Silicone Sealant (optional – Not Provided)	Power Drill & 2.25" Hole Saw	

IMPORTANT SAFETY INSTRUCTIONS


READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

INSTALLATION

1. Determine the installation location for your handle*, making sure there is a solid support or backer material behind the location to support the handle. Note, a through bolt may be necessary. If the backing material allows, use all four bolt locations. If not, the two innermost holes on each end cap must be used at a minimum.

Remove the end cap covers, which are supplied not fully clipped into place.

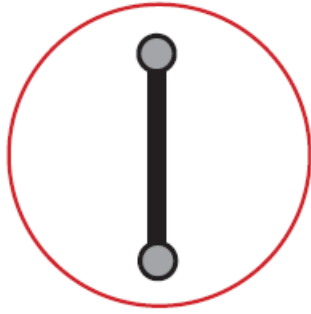


2. Mark the screw holes through the end caps. Note that the standard handle measures 27.25" and the mini handle measures 23" from the top of one cap to the bottom of the other. It is recommended that a 1/16" drill bit be used when using #10 screws, to drill the pilot holes.




3. To create a seal around the screw holes, ITC recommends using silicone sealant in pre-drill holes before installing screws.



4. Using #10 screws (Not Provided), install the end caps in the pre-drilled holes. Note: The innermost holes toward the door must be used at all times, it is recommended that all four holes be used on each end cap. If there is no backer then you may need to use a bolt, large washer, nut, and plate (Not Provided).

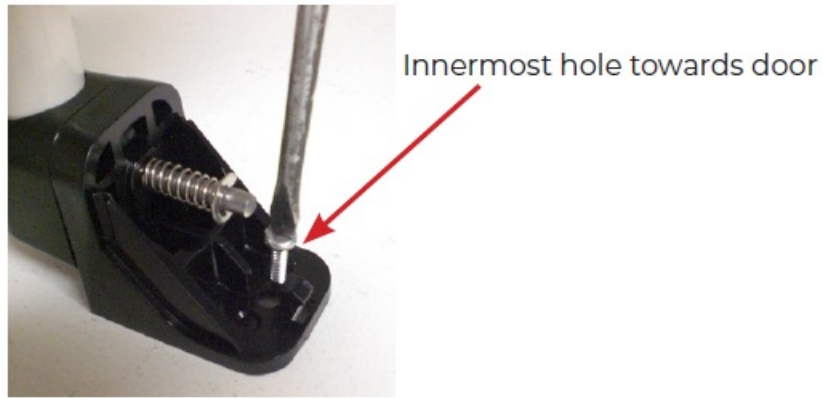

5. Align the end cap cover into the channel and slide it on until it snaps into place. To operate the handle, swing the handle to the right 90°. To replace to the stowed position, gently pull up on the handle and rotate the handle to the left until secure. To remove the end cap cover in the field, press the tab with a flat head screwdriver while pulling the cap off at the same time.

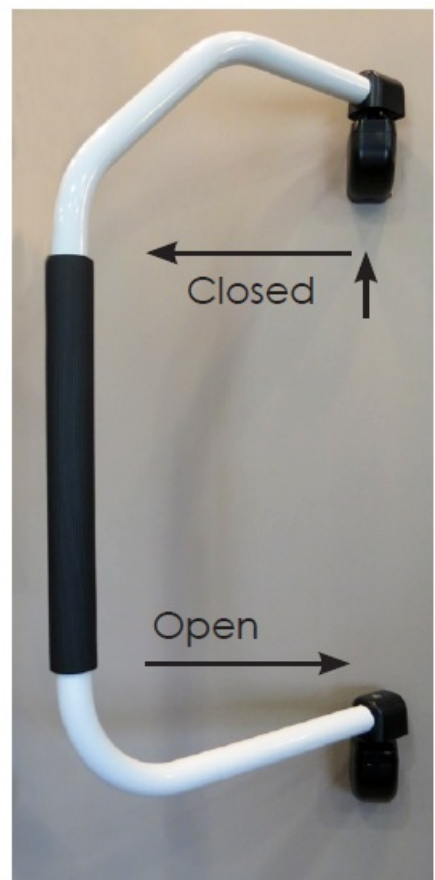

warranty

For warranty information please visit www.itc-us.com/warranty-return-policy.

Rev 3 • 11/30/22

3030 Corporate Grove Dr. Hudsonville, MI 49426 Phone: 616.396.1355
itc-us.com.

Documents / Resources



[ITC 86472-XX Stow and Go Assist Handle](#) [pdf] Instruction Manual
86472-XX, Stow and Go Assist Handle, 86472-XX Stow and Go Assist Handle, Go Assist Hand
le, Assist Handle, Handle, 86473-XX

References

- [ITC Warranty & Return Policy](#)