

 



ITC Ace Courtesy Light Instruction Manual

[Home](#) » [ITC](#) » ITC Ace Courtesy Light Instruction Manual 

ITC Ace Courtesy Light Instruction Manual

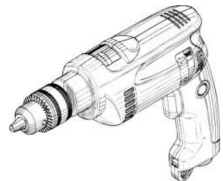

PARTS / TOOLS NEEDED:			
 or 	 or 		
Ace Courtesy Light	Bezel	Power Drill (not provided)	Screws (2)

Safety Instructions

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not install any luminaire assembly closer than 6" from any combustible materials.
- Positive (+) outputs require a fuse if the attached wire leads are not rated to handle the max current.

Contents

[1 Assembly Instruction](#)

[2 Documents /
Resources](#)


[2.1 References](#)

[3 Related Posts](#)

Assembly Instruction

1. Drill a hole in the customer provided mounting surface.

Feed the wires into the hole, and mark the location of the screw holes. (Pre-drill)

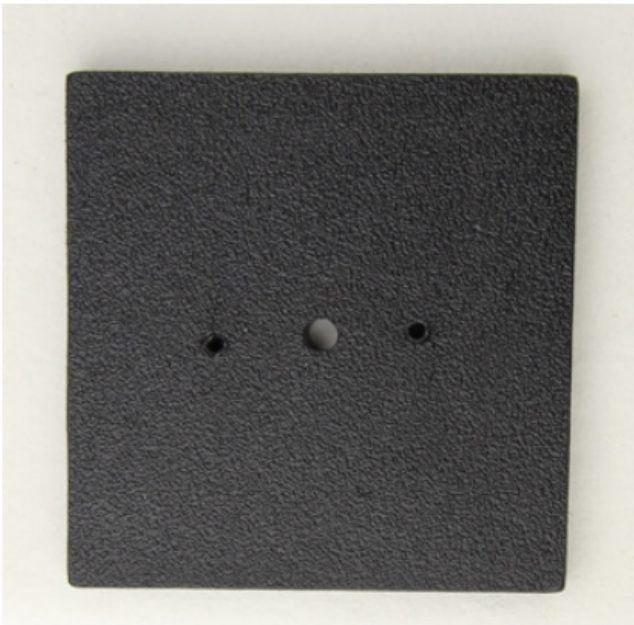

2. Attach the light using the provided screws.




3. Snap the bezel onto the light. Face the slit towards the surface you would like the light to focus on.




4. Follow the wiring diagram below to wire the light to your system.

Single Color Wiring

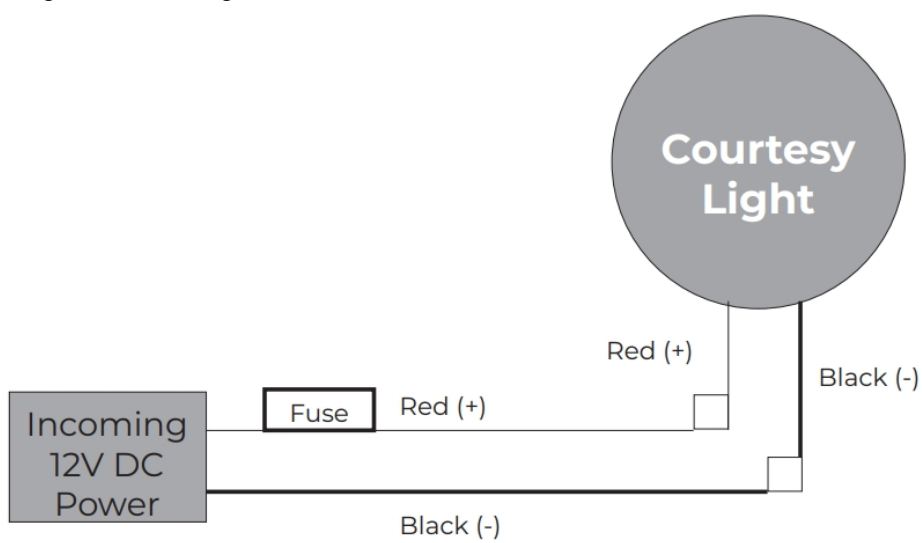


RGBW Wiring

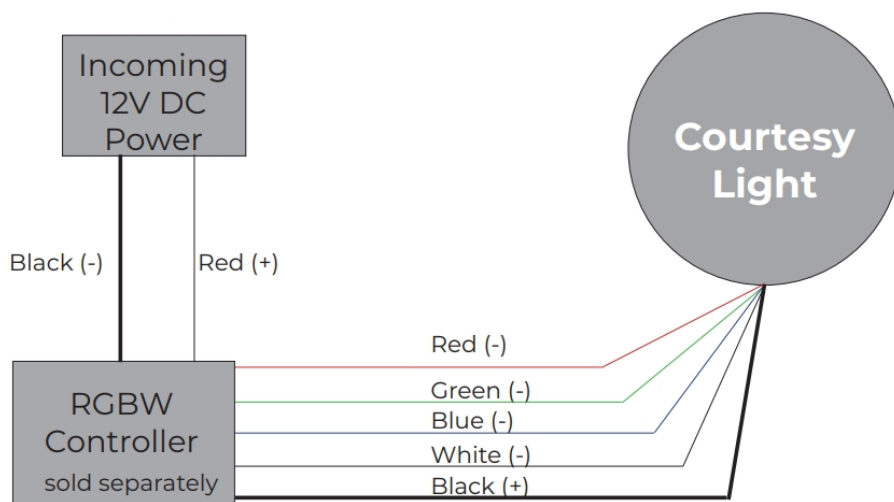

*If installing an RGB version the light will not have a white wire.

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

Documents / Resources

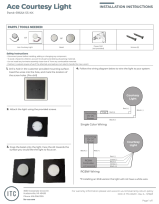	ITC Ace Courtesy Light [pdf] Instruction Manual Ace Courtesy Light, Ace Light, Courtesy Light, Light, 696AX-SS-KK
---	--

References

-  [ITC Warranty & Return Policy](#)

Manuals+.