



# ITC BAL-SS-1A-1622 MOD RV Table Leg System Instruction Manual

[Home](#) » [ITC](#) » ITC BAL-SS-1A-1622 MOD RV Table Leg System Instruction Manual 

## Contents

- [1 ITC BAL-SS-1A-1622 MOD RV Table Leg System](#)
- [2 PARTS/TOOLS NEEDED](#)
- [3 INSTALLATION CONSIDERATIONS](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

# ITC

**ITC BAL-SS-1A-1622 MOD RV Table Leg System**



## PARTS/TOOLS NEEDED

				
Wall Base & Shim	Vertical & Horizontal Legs	Table Base	Screws (Not Provided)	Power Drill (Not Provided)

## INSTALLATION CONSIDERATIONS

- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not sit on or lean on table, intended for use as a table only.
- The stiffness and rigidity of the wall mounting substrate has a direct effect on the sturdiness of the entire table system.

## INSTRUCTION

1. Find a solid, secure wall to mount your Mod Leg system. Place the wall base and mark the screw holes, pre-drill. Screw in the base and shim (if using), using screws (not provided) appropriate for mounting substrate.



2. Slide the vertical leg into wall base. Use the handle on the side to tighten and secure the vertical leg.



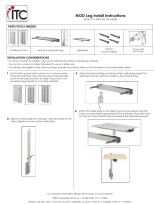
3. Place the horizontal leg on the top of the vertical leg repeat the tightening process with the handle on the horizontal leg,



4. Attach the table base to the table (customer provided) using the screws (not provided) appropriate for the substrate. Place the table on the top of the horizontal leg and repeat the tightening process



## Documents / Resources

	<p><a href="#">ITC BAL-SS-1A-1622 MOD RV Table Leg System</a> [pdf] Instruction Manual BAL-SS-1A-1622, MOD RV Table Leg System, Table Leg System, BAL-SS-1A-1622, MOD RV T able Leg, Table Leg</p>
---	--

## References

-  [Register a .US.COM domain today!](#)
-  [Designs that inspire, products that perform.](#)