



ITC RNLL12AR Extended Length Flex Light Instruction Manual

[Home](#) » [ITC](#) » ITC RNLL12AR Extended Length Flex Light Instruction Manual 






ITC RNLL12AR Extended Length Flex Light



Contents

- [1 PARTS/TOOLS NEEDED:](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 INSTALLATION CONSIDERATIONS:](#)
- [4 Customer Support](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

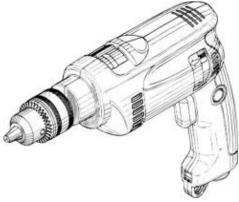PARTS/TOOLS NEEDED:

				
Flexible Light	Mounting Channel (purchased separately)	Power Drill (not provided)	Butt Splice Connectors (not provided)	#4 Flat Head Screws (not provided)

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.


INSTALLATION CONSIDERATIONS:

- Unroll the entire length before installing.
 - Work the light into the channel going 6" at a time. The light should go into the channel pretty easily by just thumbing it in.
 - Do not use any roller as that may cause damage to the LED circuit.
1. Determine the installation location and install the track by either taping or screwing in place. Install the light in the track by gently rocking it back and forth. Refer to installation tips above to ensure a successful installation.

Adhesive Mount Track



Screw Mount Track

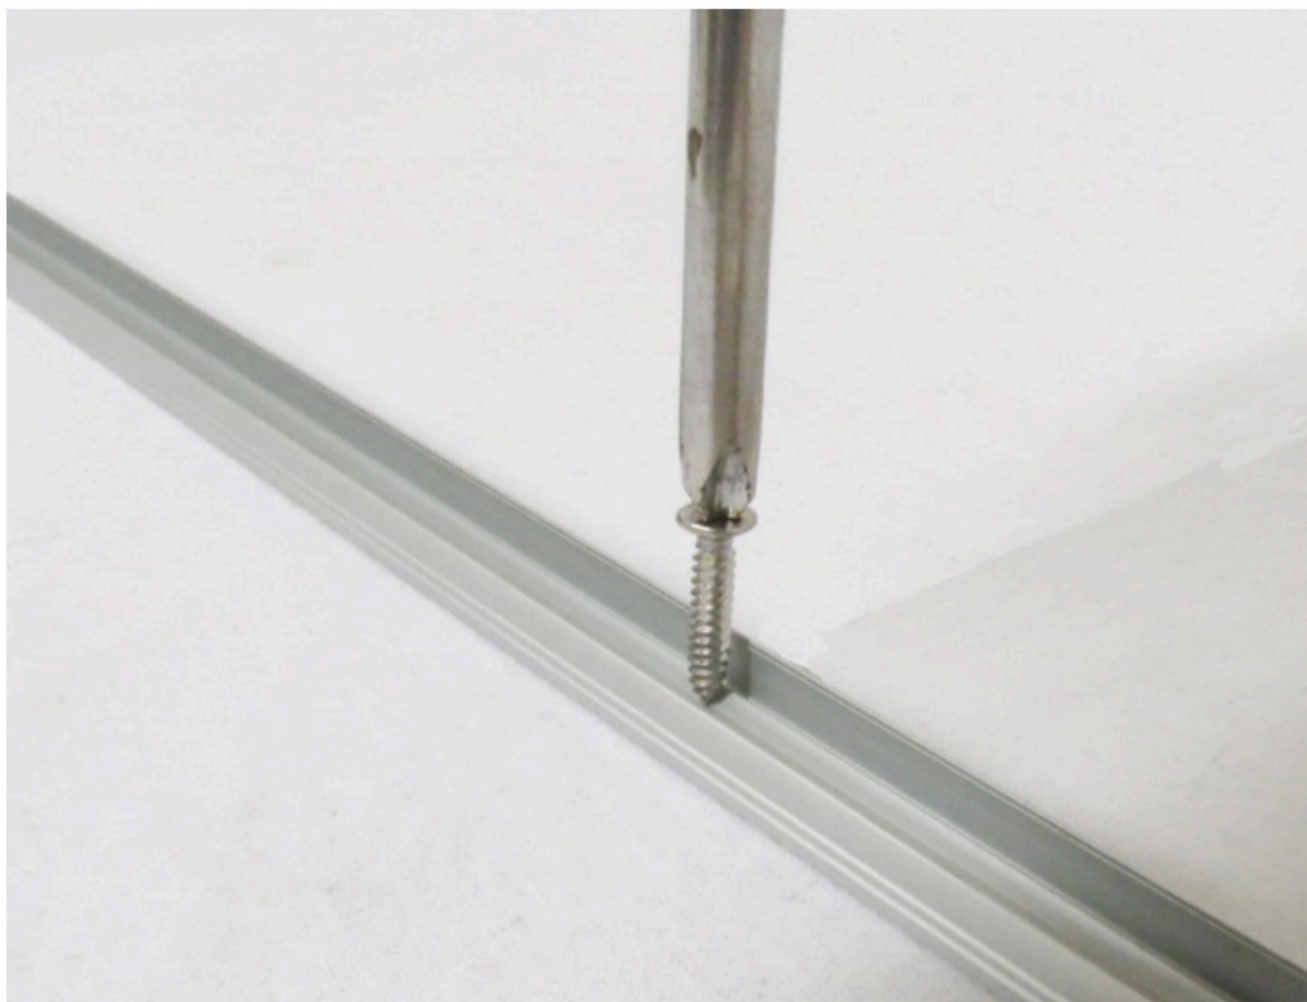


Installing Light




2. Wire the light based on the wiring diagram.

Note: Lengths over 250" must be powered from both ends.

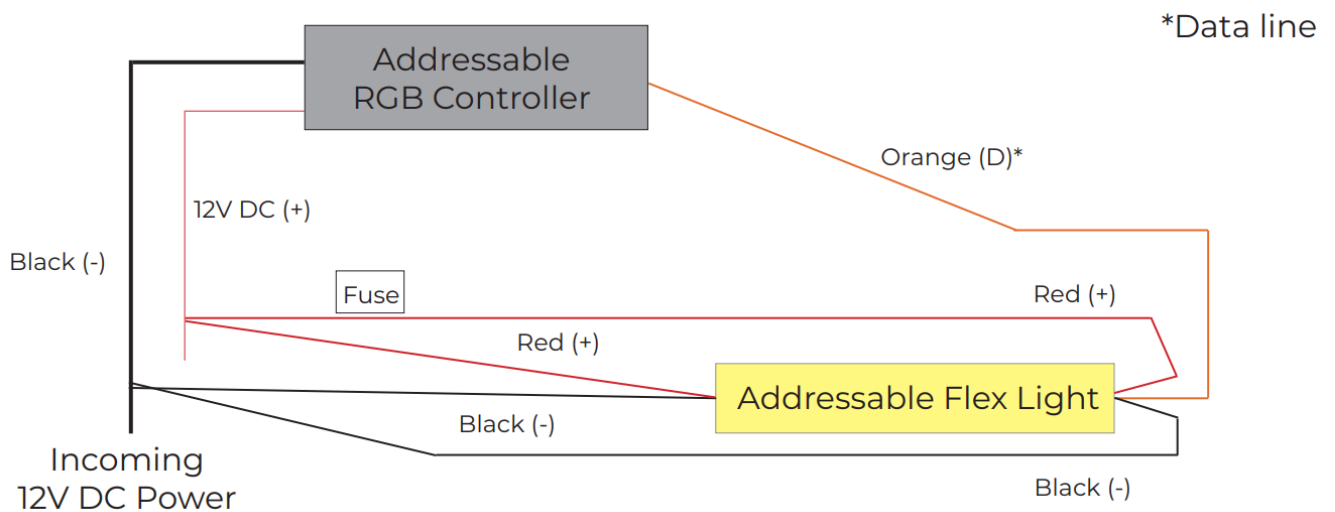


3. Please review the considerations below to ensure a successful installation.

***RNLL flexible lighting cannot be field cut. Field cutting the light will void the warranty.**

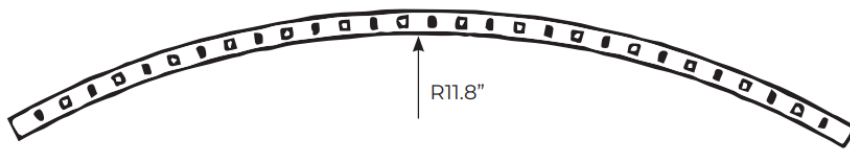

Do not horizontal bend to a radius of less than 11.8"

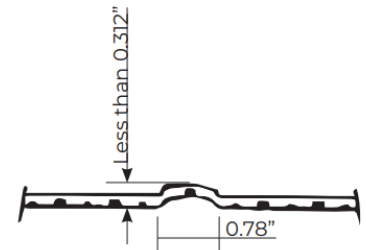

Do not axial bend to the height of more than 0.312" within 0.78" segment



Do not bend to a radius of less than 1/2"



Do not twist more than 90° over the length of one 24V segment / Two 12V segments (4" total length)



Do not bend flexible light at 90°

Do not bend right at solder joint



Only bend the wire



Customer Support

3030 Corporate Grove Dr.

Hudsonville, MI 49426

Phone: 616.396.1355


itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy

DOC #: 710-00217 • Rev B • 12/14/22



Documents / Resources

	<p>ITC RNLL12AR Extended Length Flex Light [pdf] Instruction Manual</p> <p>RNLL12AR, RBLL12AR, RNLL12AR Extended Length Flex Light, RNLL12AR, Extended Length Flex Light, Length Flex Light, Flex Light, Light</p>
--	--

References

-  [ITC Warranty & Return Policy](#)