 




itC T-2221 CD Plus Tuner Player Instruction Manual

[Home](#) » [ITC](#) » itC T-2221 CD Plus Tuner Player Instruction Manual 

itC T-2221 CD Plus Tuner Player Instruction Manual

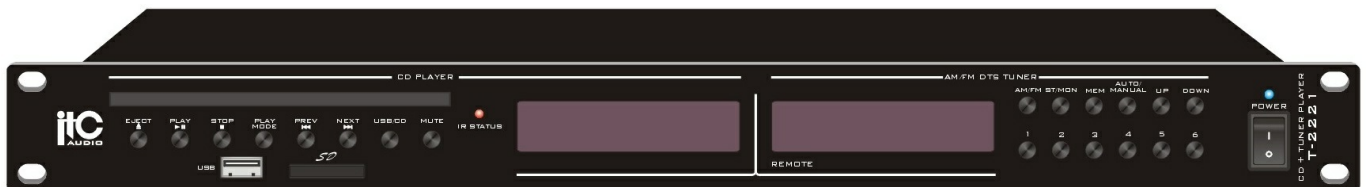

Contents

- [1 SAFETY PRECAUTIONS](#)
- [2 FEATURES](#)
- [3 NOMENCLATURE AND FUNCTIONS](#)
- [4 CONTROL INSTRUCTION](#)
- [5 BLOCK DIAGRAM](#)
- [6 SPECIFICATIONS](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

SAFETY PRECAUTIONS

- Be sure to read the instructions in this section carefully before use.
- Make sure to observe the instructions in this manual as the conventions of safety symbols and messages regarded as very important precautions are included.
- We also recommend you keep this instruction manual handy for future reference.

Safety Symbol and Message Conventions

Safety symbols and messages described below are used in this manual to prevent bodily injury and property damage which could result from mishandling. Before operating your product, read this manual first and understand the safety symbols and messages so you are thoroughly aware of the potential safety.



WARNING Indicates a potentially hazardous situation which, if mishandled, could result in death or serious personal injury



WARNING Indicates a potentially hazardous situation which, if mishandled, could result in moderate or minor personal injury, and/or property damage.



WARNING

When Installing the Unit

- Do not expose the unit to rain or an environment where it may be splashed by water or other liquids, as doing so may result in fire or electric shock.
- Use the unit only with the voltage specified on the unit. Using a voltage higher than that which is specified may result in fire or electric shock.
- Do not cut, kink, otherwise damage nor modify the power supply cord. In addition, avoid using the power cord in close proximity to heaters, and never place heavy objects — including the unit itself — on the power cord, as doing so may result in fire or electric shock.
- Be sure to replace the unit's terminal cover after connection completion. Because high voltage is applied to the speaker terminals, never touch these terminals to avoid electric shock.
- Be sure to ground to the safety ground (earth) terminal to avoid electric shock. Never ground to a gas pipe as a catastrophic disaster may result.
- Avoid installing or mounting the unit in unstable locations, such as on a rickety table or a slanted surface. Doing so may result in the unit falling down, causing personal injury and/or property damage.

When the Unit is in Use

- Should the following irregularity be found during use, immediately switch off the power, disconnect the power supply plug from the AC outlet and contact your nearest dealer. Make no further attempt to operate the unit in this condition as this may cause fire or electric shock.
 - If you detect smoke or a strange smell coming from the unit.
 - If water or any metallic object gets into the unit
 - If the unit falls, or the unit case breaks
 - If the power supply cord is damaged (exposure of the core, disconnection, etc.)
 - If it is malfunctioning (no tone sounds.)
- To prevent a fire or electric shock, never open nor remove the unit case as there are high voltage components inside the unit. Refer all servicing to your nearest dealer. ITC ITC
- Do not place cups, bowls, or other containers of liquid or metallic objects on top of the unit. If they accidentally spill into the unit, this may cause a fire or electric shock.
- Do not insert nor drop metallic objects or flammable materials in the ventilation slots of the unit's cover, as this may result in fire or electric shock.



CAUTION

When Installing the Unit

- Never plug in nor remove the power supply plug with wet hands, as doing so may cause electric shock.
- When unplugging the power supply cord, be sure to grasp the power supply plug; never pull on the cord itself. Operating the unit with a damaged power supply cord may cause a fire or electric shock.
- When moving the unit, be sure to remove its power supply cord from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the power cord, resulting in fire or electric shock. When removing the power cord, be sure to hold its plug to pull.
- Do not block the ventilation slots in the unit's cover. Doing so may cause heat to build up inside the unit and result in fire.
- Avoid installing the unit in humid or dusty locations, in locations exposed to the direct sunlight, near the heaters, or in locations generating sooty smoke or steam as doing otherwise may result in fire or electric shock.

When the Unit is in Use

- Do not place heavy objects on the unit as this may cause it to fall or break which may result in personal injury and/or property damage. In addition, the object itself may fall off and cause injury and/or damage.
- Make sure that the volume control is set to minimum position before power is switched on. Loud noise produced at high volume when power is switched on can impair hearing.
- Do not operate the unit for an extended period of time with the sound distorting. This is an indication of a malfunction, which in turn can cause heat to generate and result in a fire.
- Contact your dealer as to the cleaning. If dust is allowed to accumulate in the unit over a long period of time, a fire or damage to the unit may result. ITC
- Switch off the power, and unplug the power supply plug from the AC outlet for safety purposes when cleaning or leaving the unit unused for 10 days or more. Doing otherwise may cause a fire or electric shock.
- If dust accumulates on the power supply plug or in the wall AC outlet, a fire may result. Clean it periodically. In addition, insert the plug in the wall outlet securely.

An all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.

FEATURES

1. Dual music source player, built in AM/FM tuner
2. Built in CD, MP3 source
3. One road CD output
4. One road AM/FM tuner output
5. With IR remote control function
6. With independent volume control

NOMENCLATURE AND FUNCTIONS


FRONT PANEL



1. In/out bin
2. Play
3. Stop
4. Play mode (USB/SD card)
5. Last
6. Next
7. USB mode/CD mode switch
8. Mute
9. Tuner channel select
10. Power indicator
11. Power switch
12. Down
13. UP
14. AM/FM tuner mode (manual/ auto mode)
15. Menu
16. Next
17. Mute
18. SD card slot
19. USB interface
20. Bin gate

NOTE : The case has been connected with power cord, please insert power into the grounded power grid, avoid static electricity interrupting to damage equipment.


NOMENCLATURE AND FUNCTIONS

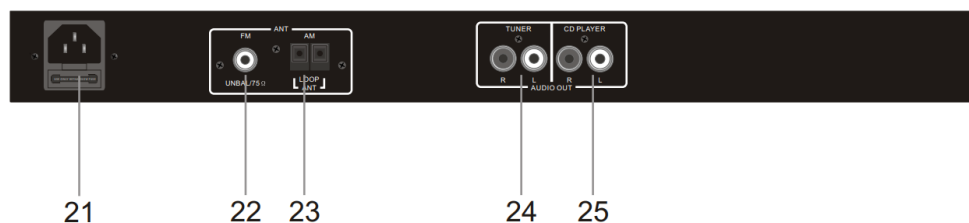

REAR PANEL

21. ~220-240V 50/60Hz power input
22. FM antenna
23. AM antenna. Stop
24. Tuner output
"R" right channel "L" left channel
25. CD output
"R" right channel "L" left channel

REMOTE CONTROL

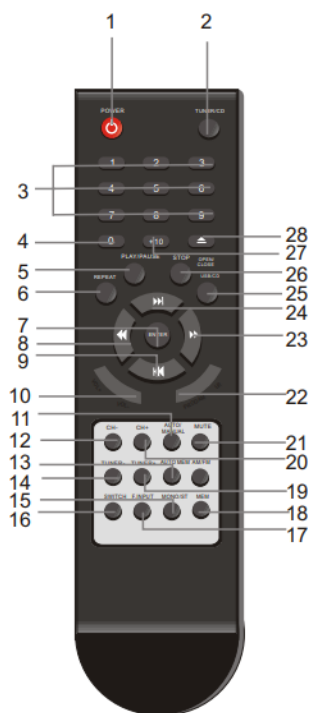


1. Power button
2. Programming key
3. Number keys
4. Number keys
5. Play / Pause
6. Duplicate keys
7. Menu key
8. Last
9. REW
10. Increase/decrease volume
11. Manual / automatic mode button
12. Previous button
13. Radio auto / manual switch button
14. Radio button
15. Channel shift keying
16. On / Off key
17. Enter
18. Manual key
19. Radio button
20. Next button
21. Mute button
22. Left and right adjustment key
23. Next
24. Fast forward key
25. USB / CD key conversion

26. Stop button
27. Channel +10 hex key
28. In / out doors button


CONTROL INSTRUCTION

1. Press “Power Switch” ,connect with power, power indicator is on,display shows CLOSE, equipment will be reading status in 2 seconds, display shows CORD ,if there is no disc, it will show NO DISC.
2. Press “IN/EJECT”, display shows OPEN, player will eject tray automatically.
3. Put disc onto tray.
4. Press “In/EJECT” again, display shows CLOSE, it begins reading Disc (CORD) in 2 seconds.
5. No matter what disc, after reading, it will automatically cycle play all.
6. Press STOP, stop, it shows total songs and total time.
7. Press PLAY, it begins cycle play all.
8. Insert USB/SD card, press USB/SD button on remote control,it can read the content, and can control by remote control or the function keys on the front panel.(NOTE: The max for the USB is 8GB)
9. If there is no disc in the player, it will automatically convert to read USB or SD card.
10. The valid distance for the remote control is within 6 meters, the valid angle is 45 degree.
11. Press remote control can control specified CD/MP3 function.

Connection:

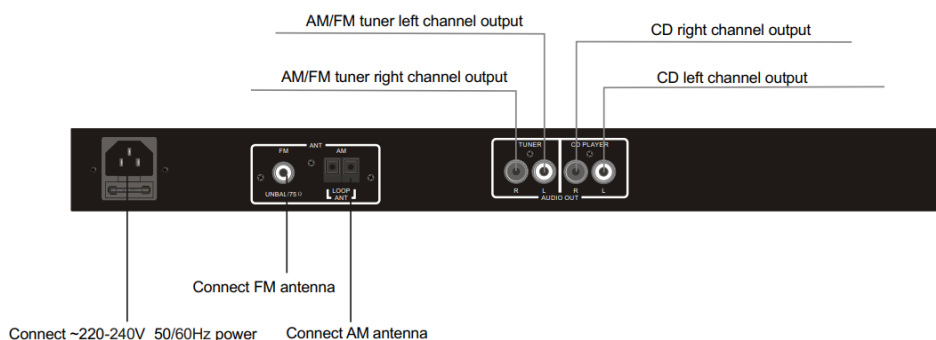


BLOCK DIAGRAM

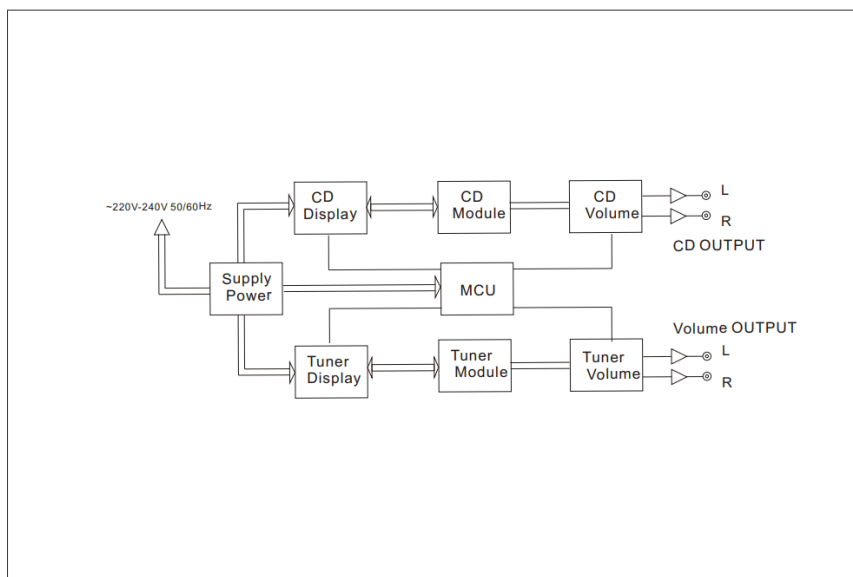 

SPECIFICATIONS

| | |
|------------------------|---|
| Model | T-2221 |
| output noise | in pause status: 0.15 ± 0.1 my |
| Monitor output | enter 300mv sine wave signal, max volume, non-lossy: $1.85 \pm 0.1V$ 8ohms overload. output |
| Signal output range | enter 990hz sine wave signal -128kbps-44.1KHZ -2.00Vpp Signal:1.5 10.1V |
| Output level | 500mV |
| Output impedance | 1K 0 |
| Power consumption | 10VA |
| Frequency | FM: 87-108HMZ: AM: 522-1611KHZ |
| Sensitivity | FM: $\leq 20\mu V$: AM: $\leq 6.0mV/m$ |
| SNR | FM: $\geq 40dB$: AM: $\geq 36dB$ |
| Communication protocol | 20Hz-20KHz(+1dB) |
| Communication speed | RS422 |
| Power input | 4800BPS |
| Power input | -220-240V 50/60Hz |
| Dimension | 484X215X48 |
| Net weight | 3.7Kg |

 Documents / Resources
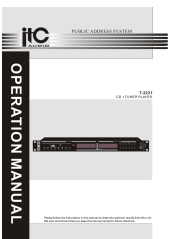
| | |
|---|---|
|  | <p>itC T-2221 CD Plus Tuner Player [pdf] Instruction Manual T-2221, T-2221 CD Plus Tuner Player, CD Plus Tuner Player, Tuner Player</p> |
|---|---|