



ITC T-671 Volume Control Speaker Instructions

[Home](#) » [ITC](#) » ITC T-671 Volume Control Speaker Instructions 

Contents

 
 
 
- [1 ITC T-671 Volume Control Speaker](#)
- [2 Volume Control](#)
- [3 Specifications](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



ITC T-671 Volume Control Speaker



Volume Control

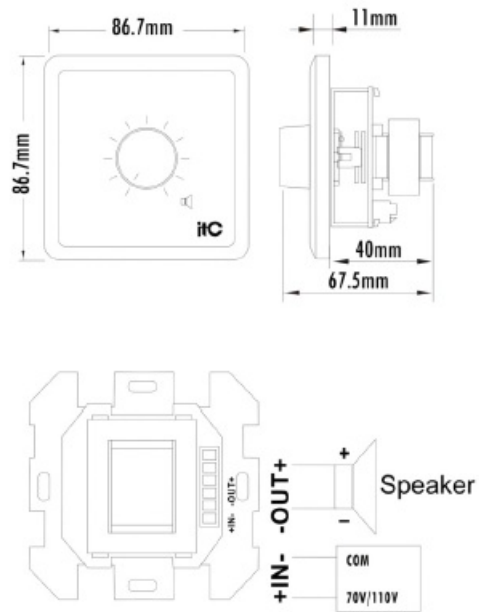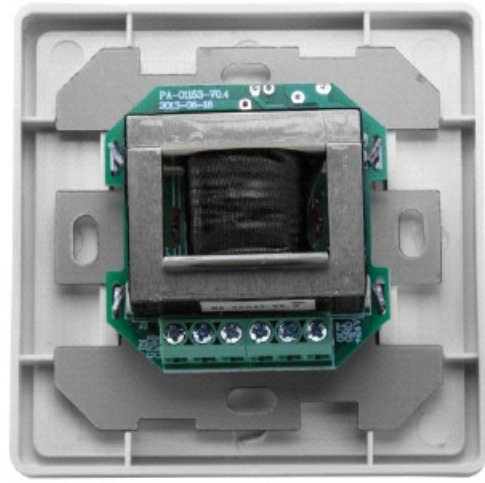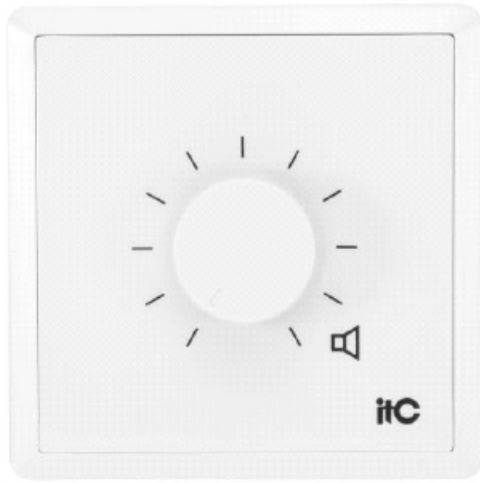

- Model with “F” with alarm cutting function;

 
Note: Standard universal plastic bottom box (L80× W80×D60mm) can be used for installation.

Specifications

Model	T-671	T-672	T-673	T-674	T-675
Input Power	6W	15W	30W	60W	100W
Control Mode	Transformer				
Signal Input	70~100V				
Signal Output	0~100V				
Speaker Type	Voltage Speaker				
Frequency Response	80Hz-16KHz				
Step	11 Steps				
Finish	PC, white				
Mounting Size	80 x 80 x 60mm				
Dimension	86.7 x 86.7 x 67.5mm				
Weight	0.14Kg	0.20Kg	0.20Kg	0.20Kg	0.22Kg
Accessory	One pair screw of M4 x 25				

- www.itctech.com.cninfo@itc-pa.com.cn

Documents / Resources

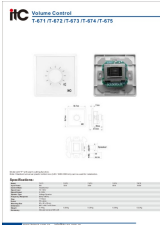	ITC T-671 Volume Control Speaker [pdf] Instructions T-671, T-672, T-673, T-674, T-675, Volume Control Speaker, Volume Control, Control Speaker, T-671, Control
---	---

References

- [ITC Guangzhou BaoLun Electronics Co., Ltd](http://www.itc-pa.com.cn)