

ITC TS400X, TR400X and TL400X Sequoia Table Leg Installation Guide

Home » ITC » ITC TS400X, TR400X and TL400X Sequoia Table Leg Installation Guide 12



Sequoia™ Table Leg Part#: TS400X, TR400X & TL400X

Contents

- 1 INSTALLATION INSTRUCTIONS
- **2 INSTALLATION**

CONSIDERATIONS

- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

INSTALLATION INSTRUCTIONS

PARTS/TOOLS NEEDED:



INSTALLATION CONSIDERATIONS

- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not sit on or lean on table, intended for use as a table only.
- 1. Mount the floor base into solid floor structure (wood, fiberglass, etc.) using #10 phillips oval head screws.



2. Mount the table base onto table top (customer provid-ed) using #10 phillips oval head screws. Make sure the weight of the table top is evenly supported over the table leg.



3. Insert The Leg¹:


Line up the hole in the base with the blades on the leg. Push the leg down and twist clockwise until you feel some resistance, continue to turn until the leg clicks into place. Twist collar clockwise to tighten.

Remove The Leg²: Twist collar counter-clockwise to loosen. Twist the leg counter-clockwise until you feel

resistance, continue to turn until you feel a click and the blades match up with the hole. Pull up to remove.





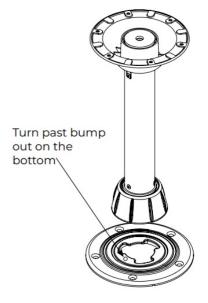

For warranty information please visit <u>www.itc-us.com/warranty-return-policy</u>



3030 Corporate Grove Dr. Hudsonville, MI 49426 Phone: 616.396.1355 itc-us.com

Documents / Resources



ITC TS400X, TR400X and TL400X Sequoia Table Leg [pdf] Installation Guide TS400X TR400X and TL400X Sequoia Table Leg, TS400X, TR400X, TL400X, TS400X Sequoia Table Leg, TR400X Sequoia Table Leg, Sequoia Table Leg, Sequoia Table Leg, Table Leg

References

• ITC Warranty & Return Policy

Manuals+,