

# ITL intelligence ITL-F304C Remote Control Instructions

Home » ITL intelligence » ITL intelligence ITL-F304C Remote Control Instructions




ITL-F304C Remote control operation instruction

#### Contents

- 1 ITL-F304C Remote
- 2 Documents / Resources
  - 2.1 References
- **3 Related Posts**

**ITL-F304C Remote Control** 

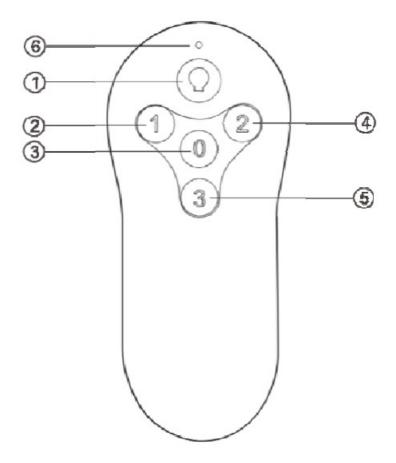

### As shown in the figure:

1. button: to turn light ON or OFF.

2. 1 button: for fan LOW speed.

3. Obutton: to turn fan OFF.

4. 2 button: for fan MEDIUM speed.

5. 3 button: for fan HIGH speed.

6. REDLED: Indicator light: When pressing the button, this light will light up and the remote control will send instructions.

Restore electrical power. Within 30 seconds of restoring electrical power, press and hold the "0" button on the remote controtransmitterfor Seconds or until ight on the fan blinkstwiceUsethe remote control transmitter to test the liaht and fan functions to confirm the learning process is complete.



you press button in excess of 0.7seconds, it becomes a dimmer. The lights vary cyclically in 8 seconds. The light button has an auto resume function, which keeps the light at the same brightness as the last time it was turned off.

FCC Radiation Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

## **Documents / Resources**



ITL intelligence ITL-F304C Remote Control [pdf] Instructions ITL-F304C Remote Control, ITL-F304C, Remote Control, Control

## References

• User Manual

Manuals+, Privacy Policy