



# iTOMA CKS507U Clock Radio Alarm Clock User Manual

[Home](#) » [iTOMA](#) » iTOMA CKS507U Clock Radio Alarm Clock User Manual 



## CKS507U Clock Radio Alarm Clock User Manual

### Contents

- 1 CKS507U Clock Radio Alarm Clock
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 PREPARATION FOR USE
- 4 IMPORTANT NOTES
- 5 LOCATION OF CONTENTS AND INDICATORS
- 6 SETTING THE TIME
- 7 USING THE SLEEP TIMER
- 8 CARE AND MAINTENANCE
- 9 FCC WARNING
- 10 Documents / Resources
  - 10.1 References

**CKS507U Clock Radio Alarm Clock**



It's wg pleasure to help you!



#### **WARNING**

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Th lightning flash with arrow hay00 within8080u lateral triangle is intend4to lturt0th priced 0f unit1\$190000l.a. within th pr0ucl\$eel0\$r that my be of sufficient might to constitute risk 0teleetrishock to person



#### **Caution**

##### **Risk of Electric Shock do not Open**

WARNING TO REDUCE THE RISK OF ELECTRIC SHOOK DO NOT REMOVE COVER (0R BACK) NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### **IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings
2. Do not use this apparatus near water
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician for replace the obsolete outlet

7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
8. Only use attachments / accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

## **PREPARATION FOR USE**

### **Unpacking and Set Up**

- Remove the radio from the carton and remove all packing material from the radio. Save the packing material, if possible, in case the radio ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your radio to protect it from damage in transit. Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet
- Note the serial number on the bottom of your radio and write this number in the space provided on the Warranty page of this manual.
- place your radio on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity or vibration
- Unwind the Line cord connecting the AC adapter and extend it to its full length

## **IMPORTANT NOTES**

 
- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the USB cable, is connected

## **LOCATION OF CONTENTS AND INDICATORS**

 
### **FRONT PANEL**





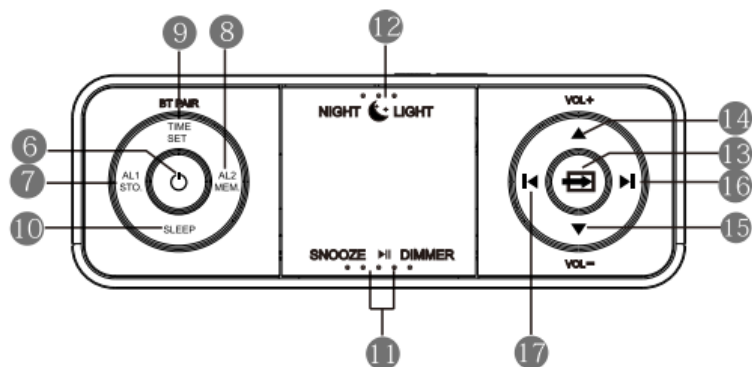



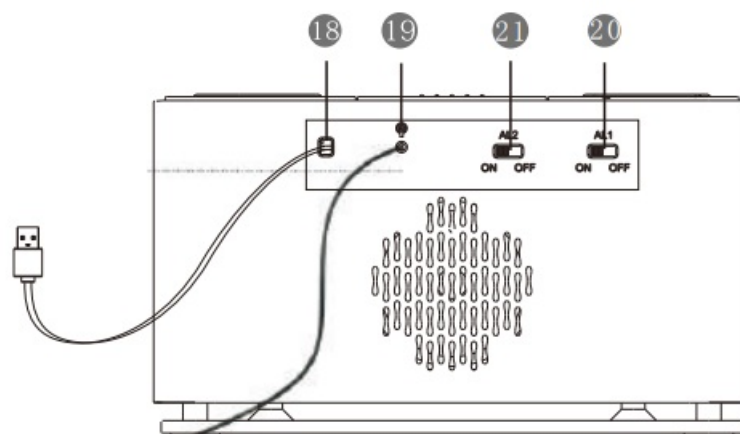

TOP PANEL




BACK PANEL



1. ALARM 1 Radio4  /Buzzer  Indicator	12. NIGHT LIGHT Button
2. ALARM 2 Radio4  /Buzzer  Indicator	13. SOURCE Button
3. AM/PM Indicator	14. VOLUME+  Button
4. BLUETOOTH(BT)Indicator	15. VOLUME-  Button
5. MHZ Indicator	16. SET/TURN  Button
6. POWER Button	17. SET/TURN  Button
7 ALARM 1/STORE Button	18. US8 CABLE
8. ALARM 2/MEMORY Button	19. FM ANTENNA
9 TIME SET Button/BT PAIR	20. AL1 Switch
10.SLEEP Button	21. AL2 Switch
11. II SNOOZE/DIMMER Button	


## SETTING THE TIME

 (Turn off the clock display before setting the time) Check the Current Time Time / Month / Day/ Year

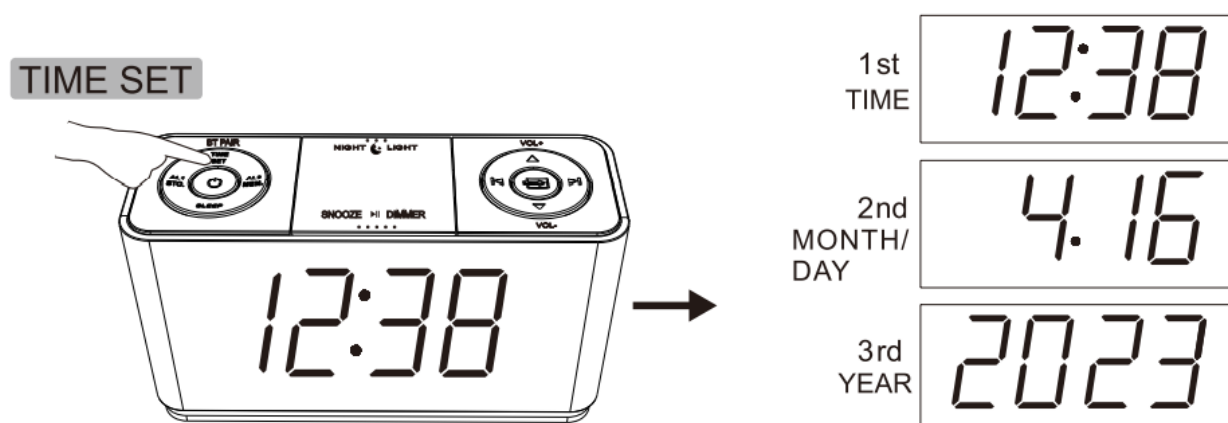

To check the current time and date, short press “TIME SET repeatedly and the MONTHI DAY/YEAR” digits will appear on the display.

## Setting the Time Manually

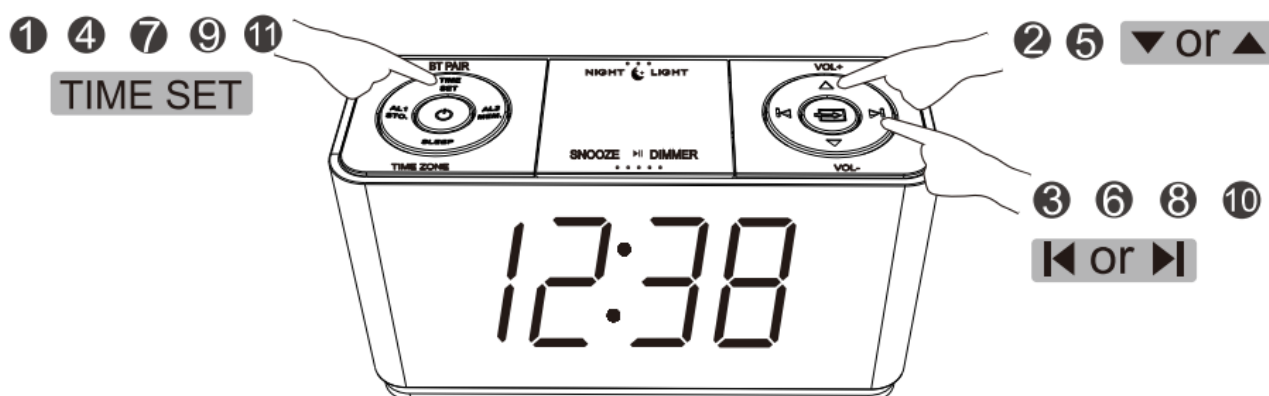 


Time Month/Day Year

1. Press and hold "TIME SET until the HOUR and MINUTE digits blink.
2. Press "▼" or "▲" to adjust the minute.
3. Press "▼" or "▲" to adjust the hour
4. Press TIME SET again, the MONTH DAY digits wilt blink.
5. Press "▼" or "▲" to adjust the day.
6. Press "▼" or "▲" to adjust the money
7. Press TIME SET again, the YEAR" digits wilt blink.
8. Press "▼" or "▲" to adjust the year.
9. Press "TIME SET again, the H12 digits will blink
10. Press "▼" or "▲" to choose H12 or H24.
11. Press "TIME SET again or wait for 40 seconds to return to the clock display

## SETTING THE ALARM

 (Turn off the clock raido before setting the alarm)

Your clock radio has two separate alarms (Alarm 1 and Alarm 2) that can be set and used independently. Please ensure that you have set the wakeup time(s) and alarm correctly. .- \_

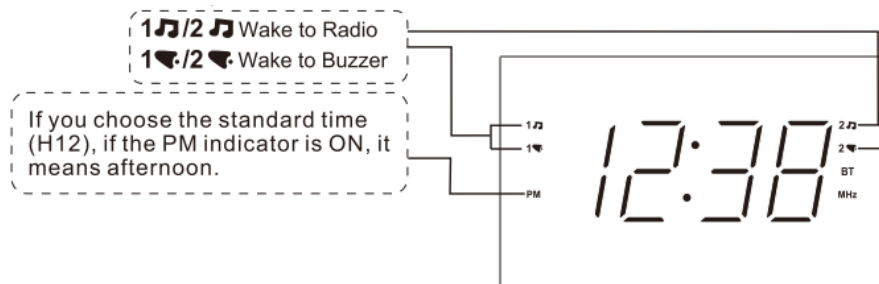


1. Turn on the switch of AL1 or AL2 at rear of unit
2. Press AL1/STO." repeatedly to select your alarm ringtone:
  - when '1' on the display, Alarm 1 (Wake to Buzzer) is turned on.
  - When '1' on the display, Alarm 1 (Wake to Radio) is turned on
  - If both '1' and 1 disappear on the display, Alarm 1 is completely turned off. After selecting your desired alarm ringtone,
3. Press and hold "AL1/STO." for 2 seconds and the HOUR and MINUTE digits will blink
4. Press "▼" or "▲" Atom adjust the minute.
5. Press "▼" or "▲" to adjust the hour.
6. Press the AL1/TO." button again, and the CURRENT VOLUME LEVEL" digits will blink. The volume levels range from 1 to 16

- Press "**▲/▼/◀/▶**" to adjust to your desired alarm volume level


At the same time, you also need to turn on the AL1/AL2" Guich on the back of the machine and move it to the ON" position

 - Press AL1/\$TO." or wait for 40seconds to finish the alarm setting.

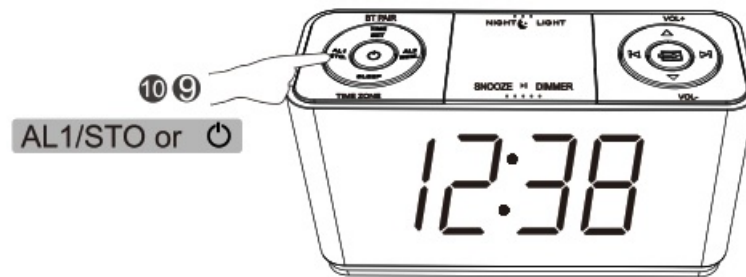

- When the alarm goes off, please push the AL/AL2" switch on the back of the alarm clock machine to the OFF" to turn off the alarm. Please follow the above steps for setting the Alarm 2 (by pressing AL2IMEM.")  
When the alarm goes off, it begins with the minimum volume and gradually increases to your preset alarm volume


### SNOOZE/REPEAT/STOP THE ALAR

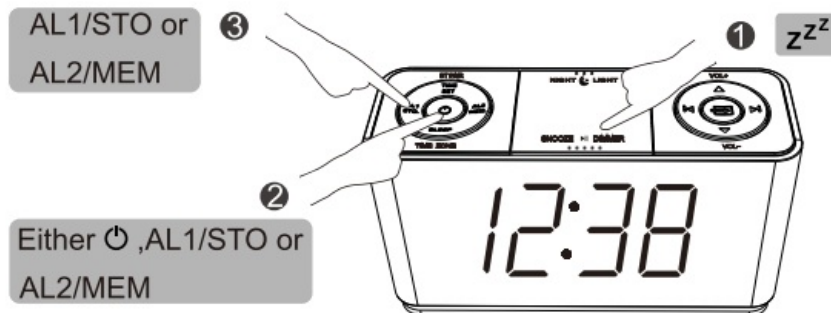 



- When the alarm goes off, you can press z to doze for another 9 minutes Press z Regain to further doze for another 9 minutes and you can repeatedly press z for more dozing's during the 60-minute snooze cycle.
- When the alarm goes off, please push the AL1/AL2 switch on the back of the alarm clock machine to the Orr" to turn off the alarm.

### PLAYING THE RADIO

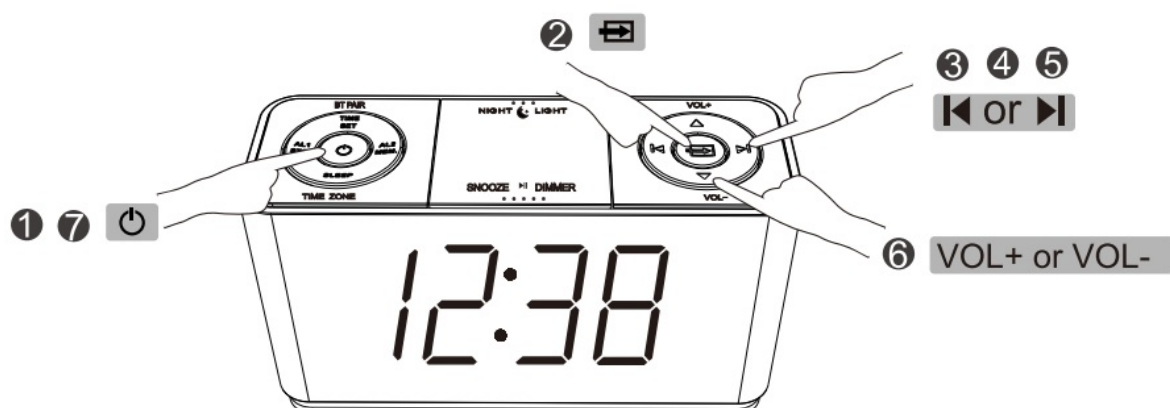 Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the antenna.



1. Press  to turn on the clock radio.
2. press  to switch to the radio mode, which will be the last radio station setting, and the MHz " digits will appear on the display.
3. Press "▼" or "▲" to adjust the radio frequency
4. press and hold "▼" or "▲" for auto-search. The search will stop at the next available lower or higher station.
5. While listening to your desired station, you can press VOL- or "VOL +" to adjust the radio volume level.
6. when you turn off the radio (by pressing (y)), the last station you listened to will be your wake-to-radio station

### Storing Radio Station Presets (Max. 20 presets)



There are 20 station presets that can be stored on the radio clock.

1. Press "( ) " to turn on the clock radio and press "el" to switch to the radio mode.
2. Search your desired station by pressing "[4" or ")]"
3. Press "▼" or "▲" until the "PROGRAM NUMBER" (from P01 to P20) blinks. 8 Press "I ◀" or "▶ I" to select the desired Program Number.
4. Press "▼" or "▲" again and the desired station will be stored under the desired Program Number.

Repeat the above steps 1-5 to store additional stations as presets.

### Recalling Preset Radio Stations



1. Press "( ) " to turn on the clock radio and press "EEI" to switch to the radio mode.
2. Press "AL2/MEM." once and the Program Number will appear on the display.
3. Press "I ◀" or "▶ I" repeatedly to select your desired preset station.

### USING THE SLEEP TIMER

You can fall asleep to the radio using the sleep timer, which is set up in 10-minute increments (The sleep timer

 


duration ranges from 10 minutes to 90 minutes). After reaching the desired duration, the radio will turn off automatically.



1. Press “O ” to turn on the clock radio.
2. Press “SLEEP” and the “10” digit will appear on the display which indicates the sleep timer has been set for 10 minutes.
3. To change the sleep timer duration, keep pressing “SLEEP” until your desired duration appears.
4. To deactivate the sleep timer, keep pressing “SLEEP” until “OFF” appears on the display, or press “O ” to turn off the sleep timer directly.

## BLUETOOTH CONNECTION

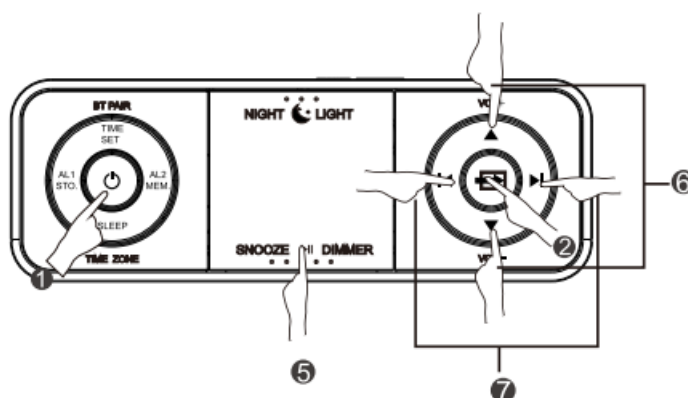


1. Press the “” button to turn on the clock.
2. Press the “” button to switch the function mode to BT(Bluetooth).
3. The “BT” sign blinks means searching is on from the clock. Please turn on the Bluetooth of your external audio devices and look for CKS507, then connect. Once connected, the “BT” sign will stop blinking. Then you can play the music source from your external audio device through the clock speaker.
4. You can control the music playing on either your audio device or the clock.
5. Press the “SNOOZE ” button to Play/Pause.
6. Press “”/VOL- or “”/VOL+ button to adjust the volume level of the music.
7. Press “” or “” button to play previous or next.

**Note:** If pairing unsuccessful, all previously paired Bluetooth devices around should be disconnected first by pressing and holding the BT PAIR/ TIME SET. button until it prompts, or turn Off their Bluetooth connection, in order to avoid making any auto reconnection between them. Then, set this unit to Bluetooth mode, and tap the Bluetooth switch on your phone/device Off and back ‘On’ again to refresh/search any nearby CKS507 for pairing.


## 5-LEVELS OF DIMMER CONTROL

 To adjust the display brightness, keep “ SNOOZE/DIMMER Button” desired brightness level appears. Brightness is available in 5 levels and can be adjusted even when the radio connection is in use.


Press "II SNOOZE/DIMMER Button " button, you can adjust the brightness level as below:

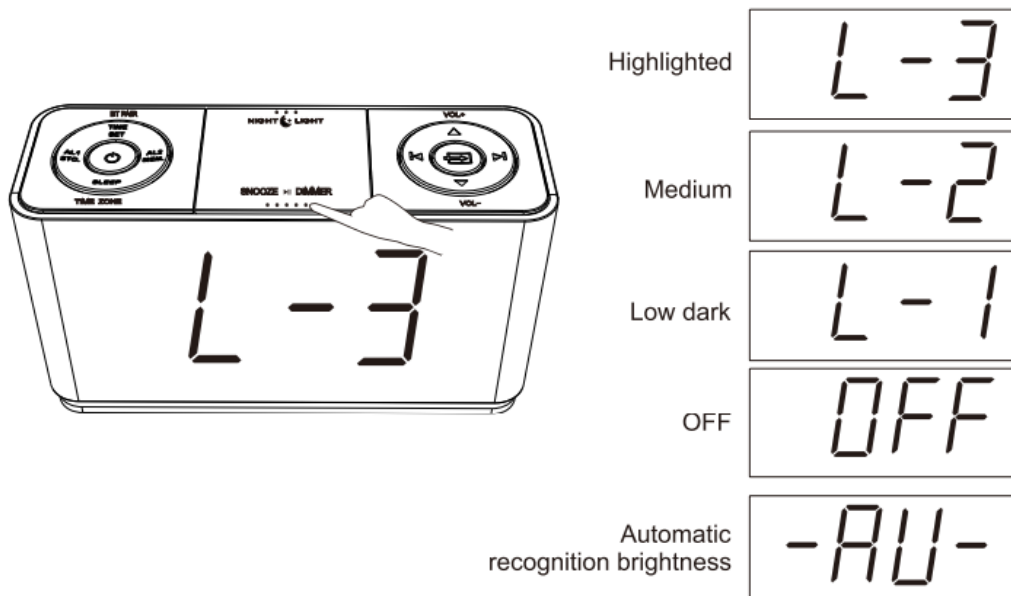

## NIGHTTIME LED

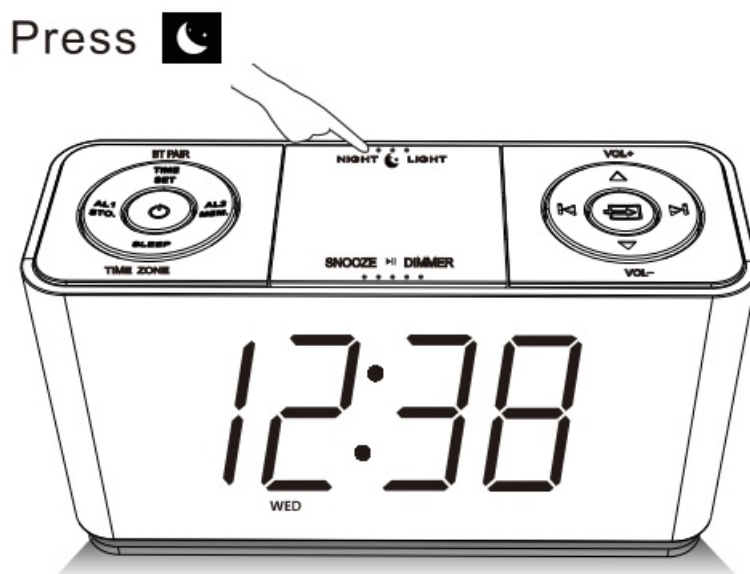 

The clock has a nighttime LED built in the bottom of the clock.

You can press  button to adjust the brightness of nighttime LED in the dark.  
The nighttime LED has 3 brightness "OFF/HIGH/LOW "

## CARE AND MAINTENANCE

### Care of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

## FCC WARNING

### FCC PART 15.19 WARNING STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1 }THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE. AND (2)THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

### FCC PART 15.21 WARNING STATEMENT

**NOTE:** THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

#### **FCC Part 15.105 Warning Statement**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
#### **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

# iTOMA

---

## **Documents / Resources**

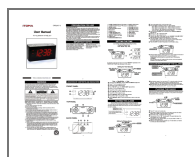

[iTOMA CKS507U Clock Radio Alarm Clock](#) [pdf] User Manual

CKS507U Clock Radio Alarm Clock, CKS507U, Clock Radio Alarm Clock, Radio Alarm Clock, Alarm Clock, Clock

## **References**

- [User Manual](#)